

Installation and Operating Manual

(Translation of the original installation and operating manual)

BTS

Non-contacting Thermal Switch Unit

Version 13, 2023-11-08

TCR3626011500EN, Protection Class 0: public



Contact

Voith Group
St. Pöltener Str. 43
89522 Heidenheim, GERMANY

Telefon: + 49 7951 32 1666
E-Mail: Industry.Service@voith.com
Internet: www.voith.com/fluid-couplings

If you have questions regarding the product, please contact the Voith Service stating the serial number (see nameplate).

TCR3626011500EN

This document describes the state of design of the product at the time of the editorial deadline on 2023-11-08.

Copyright © by
J.M. Voith SE & Co. KG

This document is protected by copyright. It must not be translated, duplicated (mechanically or electronically) in whole or in part, nor passed on to third parties without the publisher's written approval.

Contents

1	Possible Applications, BTS Characteristics	5
2	BTS Functioning	6
2.1	Switching element	7
2.2	Initiator	7
2.3	Evaluator	7
2.4	Isolating switch amplifier	7
2.5	Interaction of BTS components	8
3	Technical data	9
3.1	Switching element	9
3.2	Initiator, mounting flange	10
3.3	Evaluator and isolating switch amplifier	10
3.3.1	Evaluator	10
3.3.2	Isolating switch amplifier 230 V AC	10
3.3.3	Isolating switch amplifier 20...30 V DC	10
4	User Information	11
5	Safety	13
5.1	Safety information	13
5.1.1	Structure of safety information	13
5.1.2	Definition of safety symbols	14
5.2	Intended use	14
5.3	Unintended use	14
5.4	General information as to dangerous situations	14
5.5	Remaining risks	18
5.6	What to do in case of accidents	18
5.7	Information with regard to operation	18
5.8	Qualification of staff	19
5.9	Product monitoring	19

6	Installation	20
6.1	As delivered condition	20
6.2	Scope of supply	20
6.3	Mounting - switching element and initiator	21
6.4	Mounting, connection - evaluator, isolating switch amplifier	26
7	Display and Setting of Evaluator	29
7.1	Display - evaluator	29
7.2	Setting - evaluator	30
8	Commissioning	31
9	Maintenance, Servicing	32
9.1	Outside cleaning	34
10	Disposal	35
11	Malfunctions - Remedial Actions, Troubleshooting	36
12	Queries, Orders Placed for Field Service Engineers and Spare Parts	39
13	Spare Parts Information	40
13.1	Switching elements	40
13.2	Initiator, mounting flange	41
13.3	Evaluator	41
13.4	Isolating switch amplifier	41
14	Annex	42
14.1	Initiator NJ 10-22-N-E93-Y245590 (2 m)	42
14.2	Initiator NJ 10-22-N-E93-Y246868 (5 m)	43
14.3	Initiator NJ 10-22-N-E93-Y246869 (10 m)	44
14.4	Evaluator KFU8-DW-1.D-Y209869	45
14.5	Isolating switch amplifier KFA6-SOT2-Ex2	46
14.6	Isolating switch amplifier KFD2-SOT3-Ex2	47

1 Possible Applications, BTS Characteristics

The non-contacting thermal switch unit (BTS) is a monitoring system for Voith turbo couplings.

- The BTS provides easy monitoring of the turbo coupling temperature.
- **In case of excess temperature, dependent on the application,**
 - the operator can be warned,
 - the drive motor shutdown can be initiated,
 - the load on the driven machine can be reduced.
- If excess temperature is identified in time, the discharge or loss of coupling filling through the fusible plugs can be avoided.
Downtimes are reduced.
- After the turbo coupling has cooled down, the BTS resets automatically.
- The BTS can be used for Voith turbo couplings from **size 206**.



WARNING

Explosion hazard

If no isolating switch amplifier is used, there is the hazard of explosion.

- As the control circuit of the evaluator is **not** intrinsically safe, provide an appropriate isolating switch amplifier between evaluator and initiator!
- The BTS must not be used as safety device to limit the maximum permissible surface temperature of the turbo coupling in potentially explosive atmospheres!



2 BTS Functioning

The non-contacting thermal switch unit (BTS) consists of three components:

- **Switching element**
- **Initiator** with mounting flange
- **Evaluator**

Optionally, if an intrinsically safe control circuit is required:

- **Isolating switch amplifier**, two-channel for up to 2 initiators

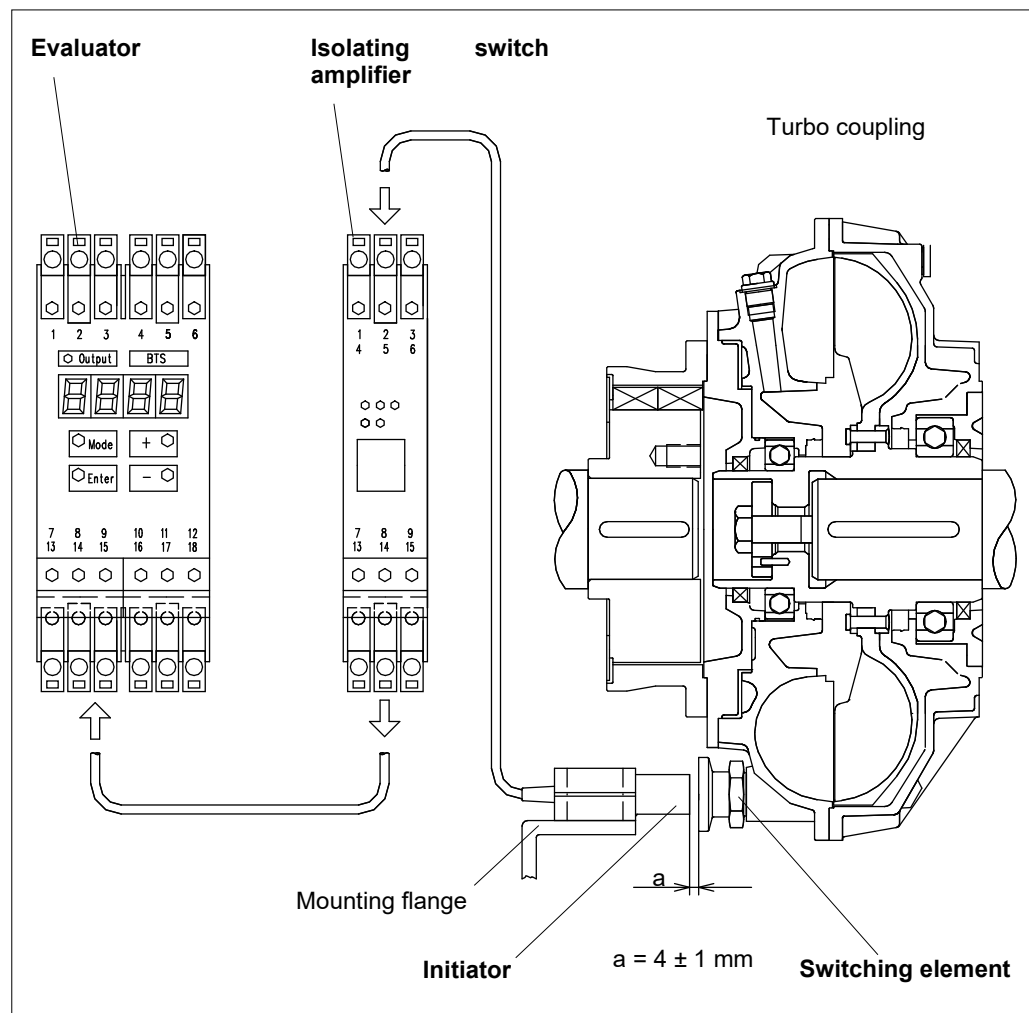


Fig. 1

2.1 Switching element

The switching element is a passive component (ordinary electrical equipment). It is inserted into the outer wheel or into the turbo coupling shell. The result is a thermal contact between the switching element and the turbo coupling with the operating fluid. A coil and a thermostatic switch are integrated in the switching element. The switching point of the thermostatic switch corresponds to the response temperature of the switching element.

Below the nominal response temperature, the thermostatic switch is closed and bridges the coil. Above the nominal response temperature, the thermostatic switch opens and interrupts the circuit. When the temperature decreases, the thermostatic switch connects again the circuit. The BTS is again ready for service (it resets automatically).

Nominal response temperature
→ Chapter 3.1

2.2 Initiator

The initiator has been designed as polarized two-wire sensor. It works to the inductive sensor principle.

An electric oscillator is integrated in the initiator which produces a high-frequency oscillation. The oscillator has an oscillating circuit as element determining the frequency, comprising a coil and a capacitor.

The oscillating circuit coil is located in the sensor head. An electromagnetic alternating field leaves the sensor head via this coil.

2.3 Evaluator

The evaluator is an electronic unit recording the electric pulses and evaluating the period between the pulses.

The evaluation starts either by switching on the supply voltage or by an external trigger signal.

After starting the evaluation, monitoring of pulses must be interrupted for an adjustable period of time (start-up bypass time).

A relay with changeover contact will be released if the number of pulses per unit of time drops below a certain value.

2.4 Isolating switch amplifier

The isolating switch amplifier transmits digital signals from the potentially explosive area.

Sensors or mechanical contacts may work as transducing sensor.

The intrinsically safe inputs are safely isolated from the output and power system.

2.5 Interaction of BTS components

Installation, position → Chapter 2

Instead of a blind screw, the switching element is screwed into the turbo coupling. The initiator with mounting flange is mounted parallel with the turbo coupling axis and is connected to the evaluator.

The coil inside the switching element is coupled inductively with the coil inside the initiator if the switching element is located in front of the initiator head. When the thermostatic switch is closed, energy is transmitted from the initiator to the switching element. The oscillator is attenuated and has a lower current consumption.

If the coupling temperature exceeds the response temperature of switching element, the thermostatic switch will interrupt the circuit in the switching element. The switching element can no longer attenuate the oscillator in the initiator.

The evaluator recognizes the attenuation of initiator due to the initiator current consumption.

If the turbo coupling with screwed in switching element rotates, then the switching element will permanently pass the initiator, thus permanently creating attenuation pulses. Thus, permanently attenuation pulses are generated. The output relay in the evaluator is energized.

Cutoff frequency → Chapter 3.3.1

In case of excess temperature, these attenuation pulses are not given, i.e. the cutoff frequency set on the evaluator is not reached. The evaluator recognizes the missing pulses, the output relay is de-energized.

On startup of the turbo coupling, a start-up bypass time is set at the evaluator. As long as the start-up bypass is active, the output relay remains energized. After this set time, the speed of the turbo coupling with the switching element must have exceeded the set cutoff frequency.

Maximum allowable temperature → Operating manual of turbo coupling



WARNING

Risk of personal injuries and damage to property

Following the shutdown, the control system has to be locked in a way that prevents automatic re-start.

- Switch off the unit in which the turbo coupling is installed and secure the switch against inadvertent switch-on.
- For all work performed on the turbo coupling and BTS ensure that both the drive motor and the driven machine have stopped running and that unintended starting is absolutely impossible!
- The coupling may only be restarted if the turbo coupling temperature is below the maximum permissible temperature allowed when switching on the motor!

3 Technical data

3.1 Switching element

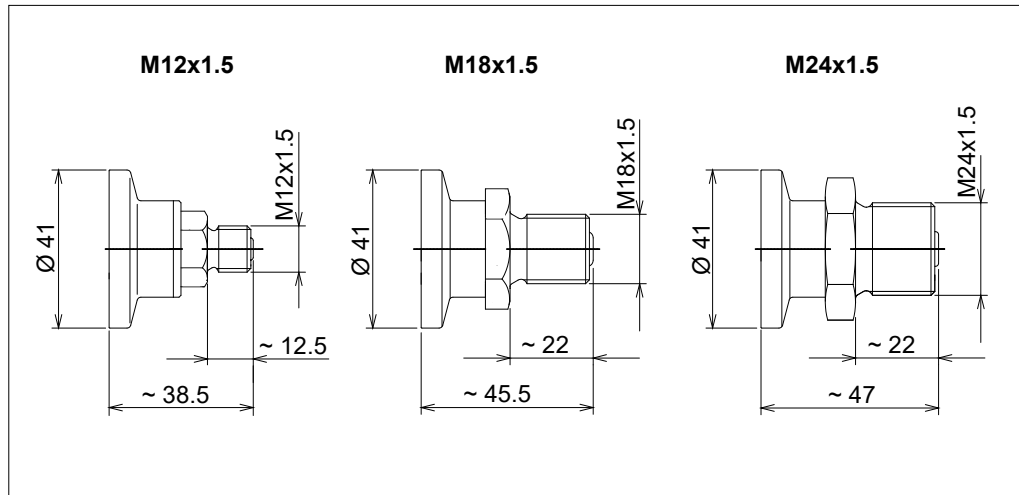


Fig. 2

The following switching elements are available for the different turbo coupling sizes:




Dimension of thread	M12x1.5	M18x1.5	M24x1.5
Nominal response temperature	125 °C	85 / 90 / 100 / 110 / 125 / 140 / 160 / 180 °C	85 / 125 / 140 / 160 / 180 °C
suitable for coupling size	206 – 274	366 – 650	750 – 1330
Response tolerance	± 5 °C		
Trip temperature	approx. 40 K below the response temperature		
Width across flats	17	27	32
Tightening torque	22 Nm	60 Nm	144 Nm
Classification is  II 2G/2D	Ui = 10 V	Ii = 50 mA	Pi = 50 mW
Service temperature in the coil area	-40 °C to +120 °C		
Service temperature in the area of the thermostatic switch	to 90 °C (T5), to 125 °C (T4), to 190 °C (T3)		

Table 1

SAFETY INFORMATION

- The type of switching element is stamped in on the housing indicating:
 - Voith
 - Nominal response temperature
 - Ex marking  II Ex i X
 - Serial number (example: Voith 140 °C  II Ex i X 1234 5678)
- The nominal response temperature of the switching element is determined in connection with the coupling design.



3.2 Initiator, mounting flange

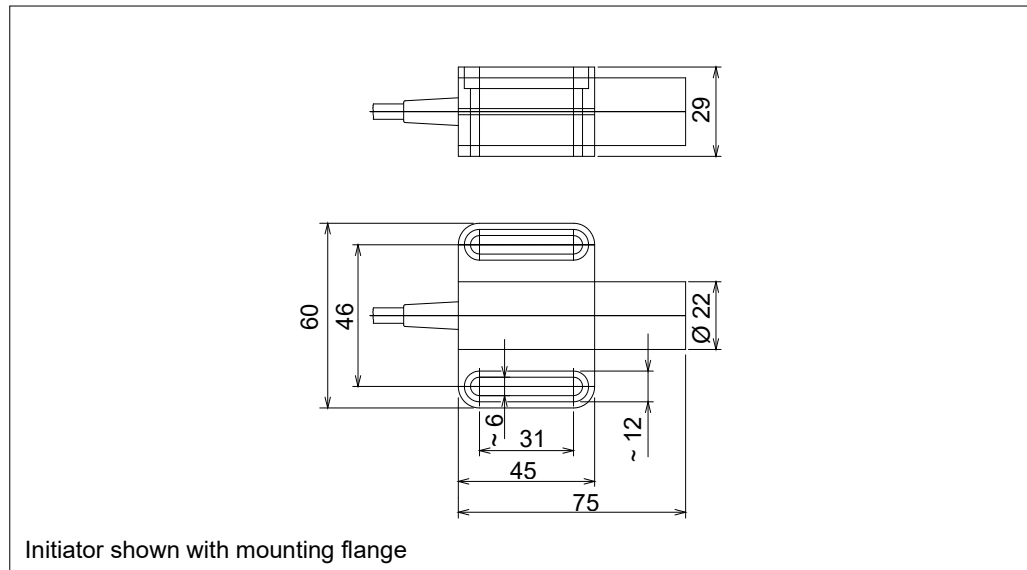


Fig. 3

→ Annex Type: NJ 10-22-N-E93-Y245590 (2 m)
NJ 10-22-N-E93-Y246868 (5 m)
NJ 10-22-N-E93-Y246869 (10 m)

3.3 Evaluator and isolating switch amplifier

3.3.1 Evaluator

→ Annex Type: KFU8-DW-1.D-Y209869

3.3.2 Isolating switch amplifier 230 V AC

→ Annex Type: KFA6-SOT2-Ex2

3.3.3 Isolating switch amplifier 20...30 V DC

→ Annex Type: KFD2-SOT3-Ex2

4 User Information

This manual will support you in using the non-contacting thermal switch unit (**BTS**) in a safe, proper and economical way.

If you observe the information contained in this manual, you will

- increase the reliability and lifetime of the unit,
- avoid any risks
- reduce repairs and downtimes.

This manual must

- always be available at the BTS place of use,
- be read and used by every person who works on the unit or commissions the same.

You will find further documents which have to be regarded at any rate, in the annex.

The non-contacting thermal switch unit has been manufactured to the latest design standard and approved safety regulations. Nevertheless, the user's or third party's life may be endangered or the unit or other property impaired in case of improper handling or unintended use.

Spare parts:

Spare parts must comply with the technical requirements stipulated by Voith. This is ensured by using original spare parts.

Installation and/or use of non-original spare parts may negatively change the mechanical properties of the **BTS** and may thus impair safety.

Voith is not liable for any damages resulting from the use of non-original spare parts.

Use only appropriate workshop equipment for maintenance. Professional maintenance and/or repair can only be guaranteed by the manufacturer or an authorized specialist workshop.

This manual has been issued with utmost care. However, should you need any further information, please contact:

Voith Group
St. Pöltener Str. 43
89522 Heidenheim, GERMANY

Telefon: + 49 7951 32 1666
E-Mail: Industry.Service@voith.com
Internet: www.voith.com

© Voith 2023.

Distribution as well as the reproduction of this document and the utilization and communication of its contents are prohibited unless expressly permitted. Offenders will be held liable for the payment of damages. All rights reserved in case a patent is granted, or a utility model or design is registered.


Voith reserves the right for modifications.

5 Safety

5.1 Safety information

Safety information indicating the descriptions and symbols as described in the following are used in the operating manual.

5.1.1 Structure of safety information

 DANGER WORD
Results of a hazardous situation Source of hazard <ul style="list-style-type: none"> Warding off of danger

Danger word

The danger word divides the severity of the danger in several levels:




Danger word	Severity of danger
 DANGER	Death or serious injury (irreversible personal injury)
 WARNING	Death or serious injury possible
 CAUTION	Minor or moderate injury possible
NOTICE	Possibly damage to property of <ul style="list-style-type: none"> - the product - its environment
SAFETY INFORMATION	General applications details, useful information, safe job procedure and proper safety measures

Table 2

Results of a hazardous situation

Hazard consequences indicate the kind of hazard.

Source of hazard

The source of hazard indicates the cause of hazard.

Warding off of danger

Warding off of danger describes the measures to be taken to ward off a danger.

5.1.2 Definition of safety symbols


Symbol	Definition
	Explosion hazard Marking with the Ex-symbol indicates possible hazards which have to be observed for the use in potentially explosive atmospheres.

Table 3

5.2 Intended use

- The non-contacting thermal switch unit (**BTS**) serves for the non-contacting temperature monitoring of Voith turbo couplings and has been designed for industrial applications. Any use beyond that described herein, e.g. for operating or application conditions that have not been agreed upon, is deemed unintended.
- Intended use also includes observing this installation and operating manual.
- The manufacturer is **not** liable for any damages resulting from unintended use. The risk has to be borne solely by the user.

5.3 Unintended use

Design range
→ Operating manual
of turbo coupling

- Design range is not met.
- Any use beyond that described herein, e.g. for higher powers, higher speeds, or operating conditions that have not been agreed upon, is deemed unintended.
- Moreover, it is not permitted to use BTS non-contacting thermal switch units or spare parts from third parties.

5.4 General information as to dangerous situations

For all work performed on the non-contacting thermal switch unit, please observe the local regulations for the prevention of accidents as well as the regulations for installation of electrical equipment!



WARNING

Explosion hazard

In case of non-compliance with the regulations or impermissible change, there is the risk of explosion.

- When using the non-contacting thermal switch unit in potentially explosive atmospheres, observe the local regulations applicable to electrical equipment in potentially explosive atmospheres! Changes on electrical equipment for potentially explosive atmospheres, including connecting lines, are not permitted.

Hazards while working on the non-contacting thermal switch unit:**DANGER****Electric shock**

On account of incorrectly mounted or incorrectly connected electrical components, and disconnected electric connections, persons could get an electric shock and be severely injured, possibly with fatal consequences.

Incorrectly mounted or incorrectly connected electrical components and disconnected electric connections may cause damages to the machinery.

- A qualified electrician has to properly carry out the connection to the electric supply network considering the system voltage and the maximum power consumption!
- The system voltage has to be in conformity with the system voltage indicated on the nameplate!
- There has to be a corresponding electrical protection by a fuse on the network side.

Electric shock:**DANGER****Electrostatic processes**

Electrostatic charging may injure persons by an electric shock.

- Allow only a qualified electrician to install the equipment into which the turbo coupling is installed.
- The unit and the electrical installation are provided with ground connections.

Working on the turbo coupling:



WARNING

Risk of injury

While working on the turbo coupling, there is the risk of injury through cutting, crushing, burns and cold burns in case of minus degrees.

- Please observe the installation and operating manual of the turbo coupling!
- Never touch the turbo coupling without wearing protective gloves.
- Start to work on the turbo coupling only after it has cooled down.
- Ensure that there is sufficient light, a sufficiently large working space and good ventilation when working on the turbo coupling.
- Switch off the unit in which the turbo coupling is installed and secure the switch against inadvertent switch-on.
- For all work performed on the turbo coupling ensure that both the drive motor and the driven machine have stopped running and that unintended starting is absolutely impossible!

Noise:

Sound pressure level
→ cover sheet of
operating manual of
turbo coupling



WARNING

Hearing loss, permanent impairment of hearing

The turbo coupling generates noise during operation. If the A-classified equivalent sound pressure level $L_{PA, 1m}$ exceeds 80 dB(A), this may cause impairment of hearing!

- Wear ear protection.

Operating fluid which sprays off or leaks out:**WARNING****Risk of losing sight due to operating fluid spraying off, risk of burning**

In case of thermal overload of the turbo coupling, the fusible plugs respond. Operating fluid leaks out through these fusible plugs.

This may happen only in case of unintended use.

- Persons close to the turbo coupling have to wear safety goggles.
- Please make sure that the spraying-off operating fluid cannot get in contact with persons.
- If the fusible plugs spray off, switch off the drive immediately.
- Electrical devices located near the turbo coupling need to be splash-guarded.

Unintended use
→ Chapter 5.3

**WARNING****Fire hazard**

After the fusible plugs responded, spraying off oil may ignite on hot surfaces causing fire, as well as releasing toxic gases and vapor.

- Make sure that spraying off operating fluid cannot get into contact with hot machine parts, heaters, sparks or open flames.
- Immediately switch off the driving machine when the fusible plugs respond.
- Please pay attention to the information contained in the safety data sheets.

**CAUTION****Danger of slipping**

Slipping hazard due to spraying off solder of fusible plugs and leaking out operating fluid.

- Please provide a catch pan of sufficient size.
- Immediately remove any leaking out solder and operating fluid.
- Please pay attention to the information contained in the safety data sheets.

5.5 Remaining risks



WARNING

Risk of personal injuries and damage to property

Unintended use or incorrect operation may cause death, serious injuries or minor injuries as well as damage to property and the environment.

- Only persons who are sufficiently qualified, trained and authorized are allowed to work on or with the turbo coupling and the non-contacting thermal switch unit.
- Please observe the warnings and safety information.

5.6 What to do in case of accidents

SAFETY INFORMATION

- In case of accidents, please observe the local regulations, the operating manuals and the operator's safety measures.

5.7 Information with regard to operation

SAFETY INFORMATION

- If irregularities are found during operation, immediately switch off the drive unit.

Monitoring devices:

NOTICE

Damage to property

Damage to turbo coupling due to monitoring devices not ready for service.

- Check whether existing monitoring devices are in a state ready for service.
- Repair any defective monitoring device immediately.
- Never bypass safety devices.

5.8 Qualification of staff

Only qualified and authorized professional staff are allowed to perform work, such as transportation, storage, installation, electrical connection, commissioning, operation, maintenance, servicing and repair.

Qualified professional staff in the sense of this installation and operating manual are persons who are familiar with transportation, storage, installation, electrical connection, commissioning, maintenance, service and repair, and who have the necessary qualifications for their job. Qualification has to be ensured by performing training and giving instructions.

This staff must be trained, instructed and authorized to:

- operate and service machines in a professional manner in accordance with the technical safety standards.
- use lifting appliances, slings (ropes, chains, etc.) and lifting points in a professional manner.
- properly dispose of media and their components, e.g. lubricating grease.
- service and use safety devices in a manner that ensures compliance with safety standards.
- prevent accidents and provide first aid.

Staff to be trained may only perform work on the turbo coupling and the non-contacting thermal switch unit under the supervision of a qualified and authorized person.

The staff in charge of any work to be done on the non-contacting thermal switch unit must

- be reliable,
- have the legal age,
- be trained, instructed and authorized with regard to the intended work,
- observe if the unit is installed in potentially explosive atmospheres use only tools which are approved for use in potentially explosive atmospheres. Avoid formation of sparks.



5.9 Product monitoring

We are under legal obligation to keep the performance of our products under observation, even after shipment.

Therefore, please inform us about anything that might be of interest to us. For example:

- Change in operating data,
- experience gained with the machine,
- recurring problems,
- problems experienced with this installation and operating manual.

Our address:
→ Page 2

6 Installation



WARNING

Risk of injury

Please observe, in particular, → Chapter 5 (Safety) when working on the non-contacting thermal switch unit!

- Before beginning with the installation, ensure that an isolation of all components is guaranteed.
- The fusible plugs protect the turbo coupling against damage due to thermal overload.
Even when the BTS is used, it is not allowed to replace the fusible plugs by blind screws or by fusible plugs with different nominal response temperatures!
- Never operate the turbo coupling without fusible plugs!

6.1 As delivered condition

- Normally, the switching element with sealing ring,
 - the initiator with mounting flange and
 - the evaluator
- are supplied as loose parts together with the turbo coupling.

6.2 Scope of supply

Please contact Voith Turbo in case of a subsequent installation of the BTS for turbo coupling sizes 206 and 274!

Standard combinations of switching elements and fusible plugs:

Nominal response temperatures		
Switching element	Fusible plugs	Color coding
160 °C	180 °C	blue
140 °C	160 °C	green
125 °C	160 °C	green
110 °C	140 °C	red

Table 4

The correlation between switching element and fusible plug may vary dependent on the project design. Differing nominal response temperatures of the switching element (85°C, 90°C, 100°C, 110°C, 125°C, 140°C, 160°C and 180°C) are also available (→ Chapter 13).

Please consult Voith
→ order documents

6.3 Mounting - switching element and initiator



WARNING

Explosion hazard

Non-compliance with mounting instructions.

- To avoid any damages, switching element and initiator should be mounted after installation and prior to filling the turbo coupling.
- The switch unit and the connecting lines must not be damaged. Lay all lines protected against mechanical impact.
- It is not allowed to modify/change anything on equipment which is operated in potentially explosive atmospheres.
It is not possible to carry out repairs on such equipment.
- Avoid any impact effects on the initiator. Work on the machine may only be performed in non-hazardous atmospheres.
- In order to prevent electrostatic charging, lay the connecting lines in accordance with EN 60079-14 and ensure that chafing during operation is not possible.



- Replace the blind screw by the switching element with the sealing ring in the turbo coupling outer wheel (item 0300) or shell (item 0190) ¹⁾.

Arrangement of switching element on the outer wheel side ²⁾:

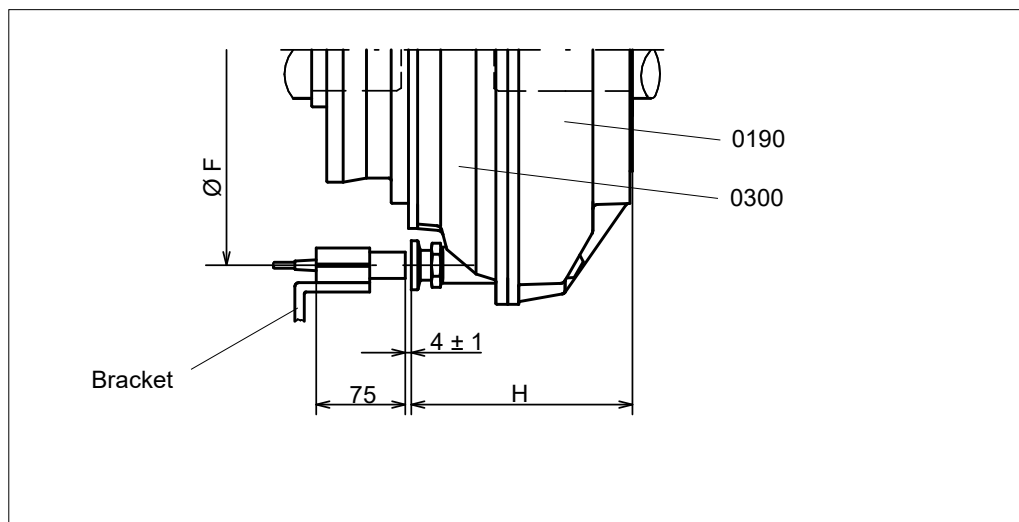


Fig. 4

- 1) Not for turbo couplings of type DT.
- 2) For turbo couplings of type DT, installation is also possible on the opposite outer wheel side.

Installation dimensions for switching element and initiator:

	Outer wheel side	
Turbo coupling type	Pitch circle diameter Ø F [mm]	Distance ~ H [mm]
206 T	196 ± 1	111.5
206 DT	196 ± 1	151.5
274 T	268 ± 1	152
274 DT	268 ± 1	190
366 T	350 ± 1	193
422 T	396 ± 1	206
487 T	470 ± 1	228
562 T	548 ± 1	248
650 T	630 ± 1	289
750 T	729 ± 1	318
866 T	840 ± 1	356
866 DT	840 ± 1	600
1000 T	972 ± 1	369
1000 DT	972 ± 1	672
1150 T	1128 ± 1	458
1150 DT	1128 ± 1	783
1330 DT	1302 ± 1	912

Table 5

Please see the assembly plan of the turbo couplings for installation dimensions of deviating arrangements.

Arrangement of switching element on the shell side (not for turbo coupling type DT and/or T...S):

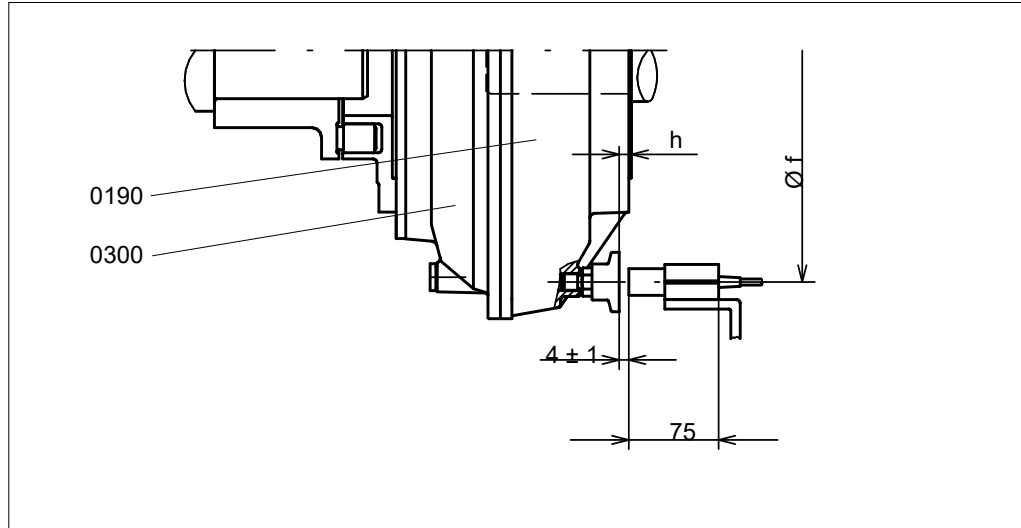


Fig. 5

Arrangement of switching element on the shell side (only for turbo coupling type T...S):

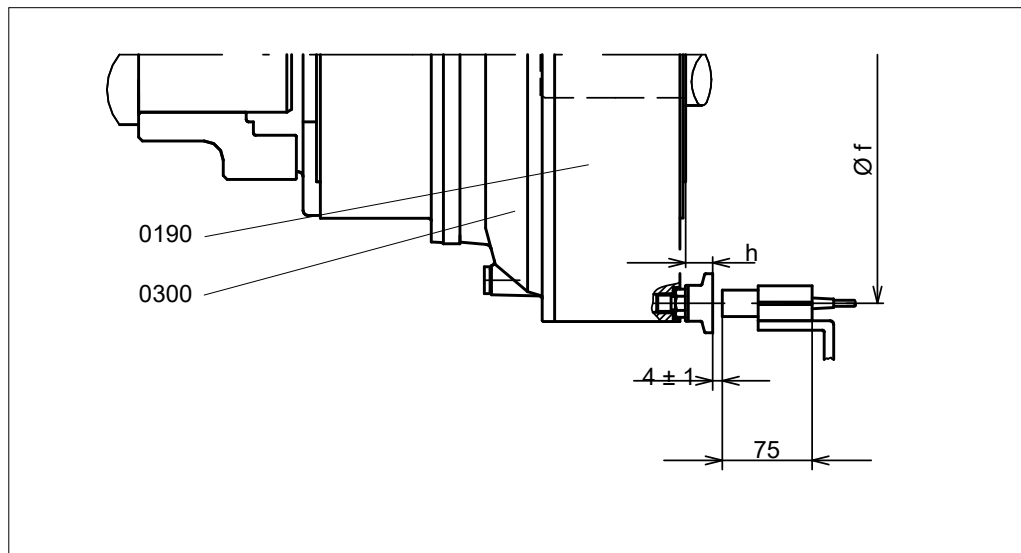


Fig. 6

Installation dimensions for switching element and initiator:

	Shell side			
	Not turbo coupling type DT and T...S:		Only turbo coupling type T...S:	
Turbo coupling type	Pitch circle diameter Ø f [mm]	Distance ~ h [mm]	Pitch circle diameter Ø f [mm]	Distance ~ h [mm]
206 T	200 ± 1	-16	–	–
274 T	264 ± 1	2.5	–	–
366 T	355 ± 1	16	–	–
422 T	398 ± 1	9	–	–
487 T	480 ± 1	29	–	–
562 T	556 ± 1	28.5	–	–
650 T	649 ± 1	51.5	–	–
750 T	742 ± 1	52.5	815 ± 1	25
866 T	862 ± 1	65	954 ± 1	25
1000 T	990 ± 1	54	1092 ± 1	25
1150 T	1140 ± 1	86	1250 ± 1	25

Table 6

Please see the assembly plan of the turbo coupling for installation dimensions of deviating arrangements.

NOTICE**Damage to property**

Non-compliance with mounting instructions.

- Ensure that the bracket is of sufficient stability (not included in Voith's scope of supply)!
- It is vital to avoid any vibrations as false signals might occur!
- Observe the metal-free area (15 mm) around the initiator head (→ schematic sketch below)!

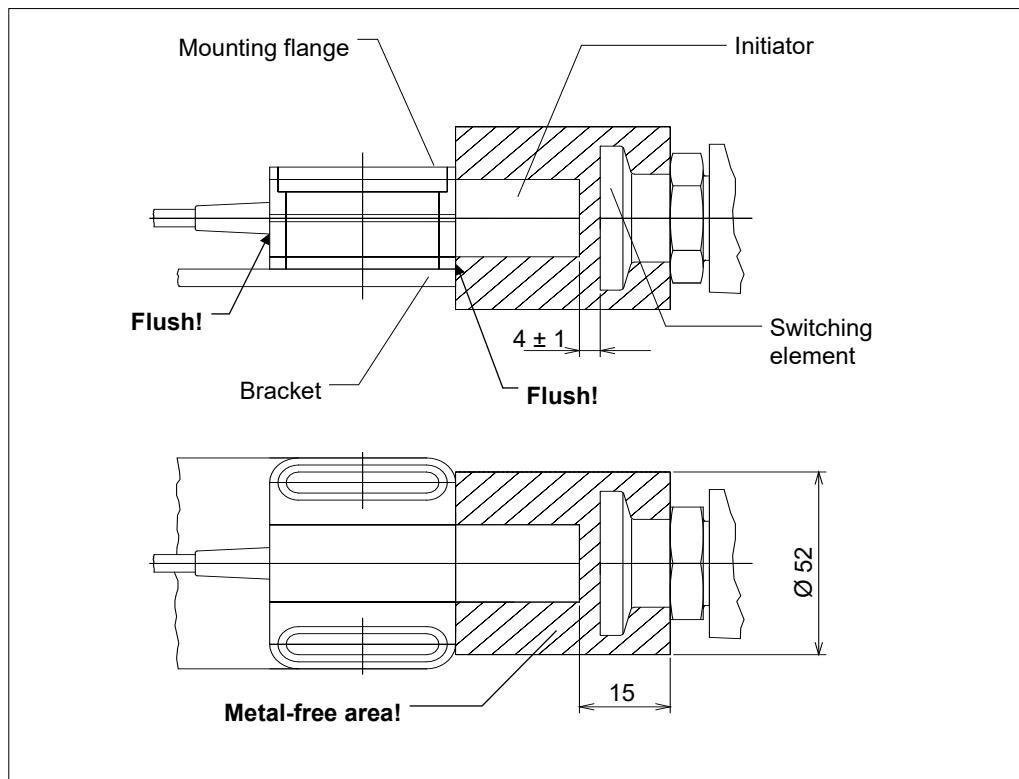


Fig. 7

- Mount the initiator with mounting flange on the pitch circle diameter of the switching element and on a bracket, in parallel with the turbo coupling axis.
- Mount the initiator end flush with the mounting flange. Mount the mounting flange front flush with the bracket.
- Set the distance between initiator head and switching element to **4 ± 1 mm!**

6.4 Mounting, connection - evaluator, isolating switch amplifier

NOTICE

Damage to property

Damage to the system by electric components not connected properly and/or not complying with the mounting instructions.

- Wiring of the BTS is not included in Voith's scope of supply!
- In case of longer distances between initiator and evaluator, we recommend using a shielded cable for extension purposes.
- Total resistance of an extension cable between initiator and evaluator to be less than 100 Ω .

- Install the evaluator and, if necessary, the isolating switch amplifier into an appropriate cubicle and connect it/them in accordance with the wiring diagram.

Wiring diagram:

Evaluator
KFU8-DW-1.D-
Y209869
→ Chapter 14.4

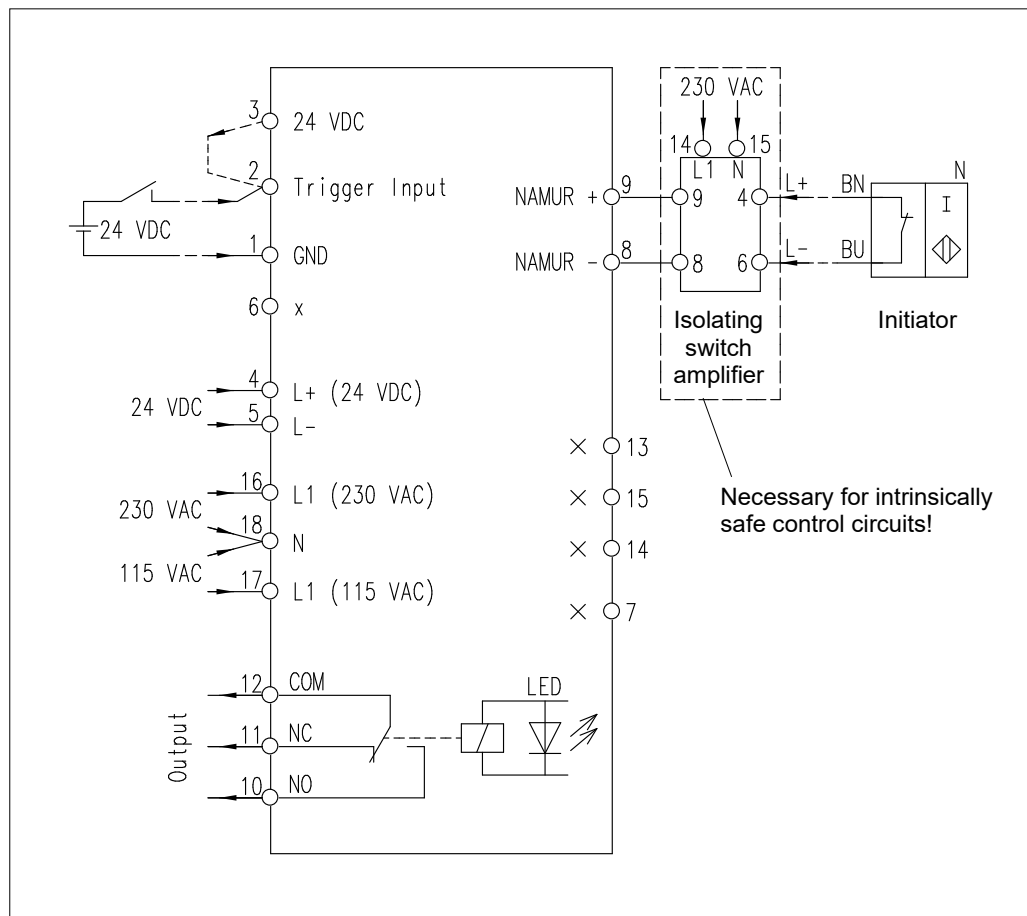


Fig. 8

Terminal assignment: Evaluator

Terminal No.	Description
1	GND for trigger input
2	Trigger input for start-up bypass, +24 V DC
3	Power supply for trigger input. When triggering by switching on the supply voltage, provide a bridge between terminals 3 and 2 (as delivered condition!).
4	Supply voltage, +24 V DC
5	Supply voltage, GND
6	Do not connect!
7	Do not connect!
8	NAMUR input, L-
9	NAMUR input, L+
10	Output relay, make contact, NO
11	Output relay, break contact, NC
12	Output relay, root, COM
13	Do not connect!
14	Do not connect!
15	Do not connect!
16	Supply voltage, 230 V AC, L1
17	Supply voltage, 115 V AC, L1
18	Supply voltage, N

Table 7



WARNING

Explosion hazard

In case of non-compliance with the conditions for explosion protection, there is the risk of explosion.

- The control circuit of the evaluator is not intrinsically safe!
- If an intrinsically safe control circuit is required, provide an appropriate isolating switch amplifier between evaluator and initiator!

Terminal assignment: Isolating switch amplifier

Terminal No.	Description
1+	NAMUR input 1, L+
2+	Do not connect!
3-	NAMUR input 1, L-
4+	NAMUR input 2, L+
5+	Do not connect!
6-	NAMUR input 2, L-
7	Output 1 +
8	Output 1/2 -
9	Output 2 +
14+	Supply voltage, 230 V AC, L1
15-	Supply voltage, N

Table 8

7 Display and Setting of Evaluator

7.1 Display - evaluator

Operating mode:

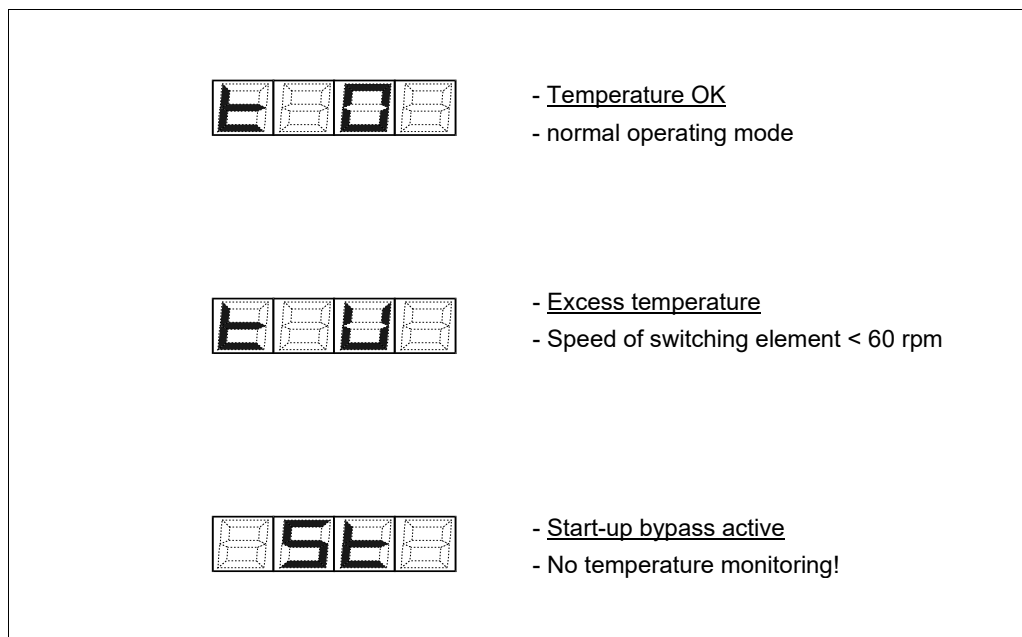


Fig. 9

Setting mode:

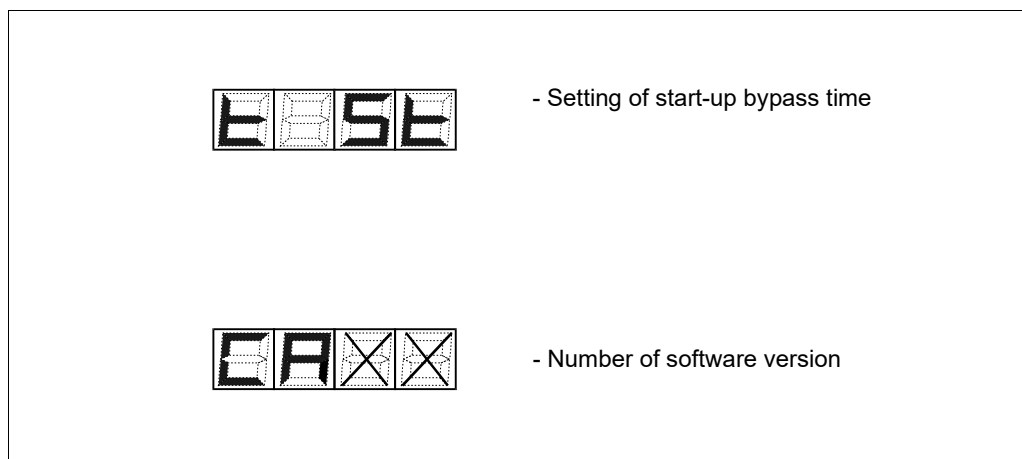


Fig. 10

7.2 Setting - evaluator

- If required, set the start-up bypass time; setting at the factory: **10 s**!
The pushbuttons on the front are used to set the time (see schematic sketch below).

WARNING

Risk of personal injuries and damage to property

During the start-up bypass time, an excess temperature of the turbo coupling is **not** recorded!

- Only persons who are sufficiently qualified, trained and authorized are allowed to work on or with the turbo coupling.
- Please observe the warnings and safety information.

SAFETY INFORMATION

- The start-up bypass time begins with triggering the start-up bypass.
- After the start-up bypass time, the speed of the turbo coupling with switching element should have clearly exceeded **60 rpm**!
- Factory setting of the start-up bypass time: **10 s**.

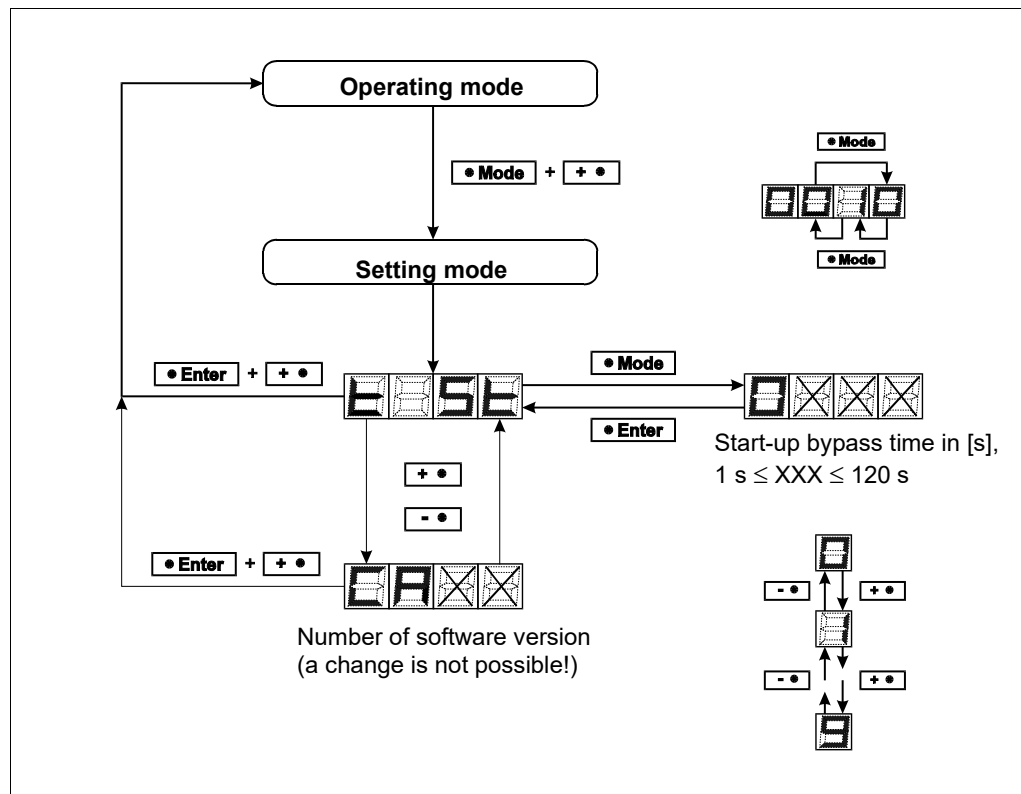


Fig. 11

8 Commissioning



WARNING

Risk of injury

Please observe, in particular, → Chapter 5 (Safety) when working on the non-contacting thermal switch unit!

- A commissioning not performed properly could cause injury to persons, or harm to property and the environment!
- Experts only are allowed to perform commissioning, in particular, first starting of the turbo coupling!
- Secure the machine against unintentional switching on!

- Check the wiring according to **wiring diagram** (→ Chapter 6.4).
Please pay special attention to the proper wiring of the supply voltage!
- Apply supply voltage to the evaluator, first without starting the turbo coupling. While the start-up by pass is active, the device displays .
The output relay is energized and the front LED lights up.
- After the start-up bypass time, the device displays .
The output relay is de-energized and the front LED extinguishes.
- If necessary, set the start-up bypass time according to → Chapter 7.2.
- In case of external triggering, remove the bridge that was fixed at the factory between terminals 2 and 3 on the evaluator.
- Start the BTS with turbo coupling in a normal way. After the start-up bypass time, the speed of the turbo coupling with switching element must have clearly exceeded **60 rpm**. The evaluator will display if there is no excessive temperature. The output relay remains energized and the front LED lights up.
- Switch off the drive with the turbo coupling, leave the BTS in the mode ready for operation. If the speed of the turbo coupling with switching element drops below **60 rpm**, the evaluator displays . The output relay is de-energized and the front LED extinguishes.
- Normal operation can start now. In case of malfunctions, → Chapter 10.

9 Maintenance, Servicing

Maintenance and Servicing: A combination of all activities conducted in order to maintain an object in a condition or to re-store it to such a condition which meets the requirements of the respective specification and ensures performance of the required functions.

Inspection: An activity involving the thorough examination of an object in order to provide a reliable statement as to the condition of said object, performed without disassembly or, if necessary, with only partial disassembly, supplemented by measures such as the taking of measurements.

Visual inspection: A visual inspection is an inspection in which visible defects, such as missing screws or bolts, are identified without the use of access equipment or tools.

Close-up inspection: An inspection in which, in addition to the areas covered by the visual inspection, defects such as loose bolts, that can only be detected by using access equipment, e.g. mobile stair steps (if required) and tools are identified. For close-up inspections, usually a housing does not need to be opened or the power to the equipment be cut off.

Detailed inspection: An inspection in which, in addition to the areas covered by the close-up inspection, defects such as loose connections, that can only be detected by opening housings and/or using tools and test equipment (if required) are identified.



WARNING

Risk of injury

Please observe, in particular, → Chapter 5 (Safety) when working on the non-contacting thermal switch unit!

- Please always keep access paths free to the turbo coupling!

Qualification
→ Chapter 5.8

- Skilled and authorized persons only are allowed to carry out maintenance and repair work! Qualification is ensured by performing training and giving instructions on the turbo coupling.
- Possible consequences of improper servicing and maintenance could be death, serious or minor injuries, damage to property and harm to the environment.

- Switch off the unit in which the turbo coupling is installed and secure the switch against inadvertent switch-on.
- For all work performed on the turbo coupling ensure that both the drive motor and the driven machine have stopped running and that unintended starting is absolutely impossible!
- Components may only be replaced by original spare parts.

Re-mount all protective covers and safety devices in their original position immediately after completion of the servicing and maintenance work. Check them for proper functioning.

Maintenance schedule:

Time	Maintenance work
Every 1000 operating hours every 6 months at the latest	Inspect the machine for irregularities (visual inspection, dust deposits).
6 months after commissioning, at the latest, then every 2 years	Check the electrical system for sound condition (detailed inspection).
In case of impurities	Cleaning (→ Chapter 9.1).

Table 9

- Carry out any maintenance work and routine inspections according to the report.
- Record the maintenance work carried out.

Report samples
→ Operating manual
of turbo coupling



For explosion-proof turbo couplings, the following maintenance work needs to be carried out in addition:

Maintenance intervals	Maintenance work
In case of impurities or dusting: Regularly clean equipment used in potentially explosive atmospheres. The intervals are specified by the operator according to the environmental impact to which the equipment is exposed on the jobsite, e.g. in case of a dust accumulation of approx. 0.2 ... 0.5 mm or more.	Cleaning (→ Chapter 9.1).

Table 10



WARNING

Explosion hazard

Explosion hazard due to maintenance work not performed according to schedule. It is vital to carry out all maintenance work according to the schedule in order to guarantee proper operation within the meaning of explosion-protection.

- Immediately remove any combustible layers of dust on the devices.

9.1 Outside cleaning

NOTICE

Damage to property

Damage to the BTS due to an improper, unsuitable outside cleaning.

- Ensure that the cleaning agent is compatible with the plastic housing of the BTS and the rubber seal of the cable connection!
- Do not use high-pressure cleaning equipment!
- Be careful with seals. Do not apply a water and compressed-air jet.

- Clean the BTS with a degreasing agent, as and when required.

10 Disposal

Disposal of the packaging

Dispose of packaging material according to the local regulations.

How to dispose of operating fluids

On disposal, please observe the applicable laws and the producer's or supplier's instructions.

How to dispose of the BTS

Dispose of the BTS according to the local regulations.

For special information on the disposal of the substances and materials used, please see the following table:

Material / substance	Kind of disposal		
	Reuse	Residual waste	Special waste
Metals	x	-	-
Cables	x	-	-
Seals	-	x	-
Plastics	x ¹⁾	(x)	-
Operating media	-	-	x ^{1), 2)}
Packing	x	-	-

Table 11

- 1) If possible
- 2) Disposal according to the safety data sheet or the manufacturer's instructions

11 Malfunctions - Remedial Actions, Troubleshooting



WARNING

Risk of injury

Please observe, in particular, → Chapter 5 (Safety) when working on the non-contacting thermal switch unit!



WARNING




Explosion hazard

It is not allowed to modify/change anything on equipment/devices which are operated in potentially explosive atmospheres.

- Repairs are not permitted; repair the device.

The following table is intended to help finding the cause of malfunctions or problems quickly and to take remedial action, if necessary.

Malfunction	Possible cause(s)	Remedial action	See
Display of the evaluator does not work.	No supply voltage is applied to the evaluator.	Apply supply voltage.	Chapter 6.4
	The evaluator is defective.	Replace the evaluator.	
Triggering of the start-up bypass by applying supply voltage does not work.	The bridge between terminals 3 and 2 of the evaluator was removed.	Insert the bridge.	Chapter 6.4
Triggering of the start-up by-pass by means of an external signal does not work.	The bridge between terminals 3 and 2 of the evaluator was not removed.	Remove the bridge.	Chapter 6.4
	The external triggering signal was too short.	The triggering signal should at least be applied during the start-up bypass time.	

Malfunction	Possible cause(s)	Remedial action	See
Display on the evaluator:  Display appears again after switching OFF and ON.	Electronic error. Defective evaluator.	Switch OFF and ON the supply voltage. Replace the evaluator.	
After the start-up bypass time, excessive temperature () is always displayed although there is no excessive temperature.	A too short start-up bypass time was selected.	After the start-up bypass time, the speed of the turbo coupling with switching element should have clearly exceeded 60 rpm. Increase the start-up bypass time accordingly.	
	The initiator poles are reversed.	Check the initiator connection.	Chapter 6.4
	The distance between initiator head and switching element is too large.	Set the distance to 4 ± 1 mm.	Chapter 6.4
	The initiator is defective.	Check the initiator, and replace it, if necessary.	
	The switching element is defective.	Check the switching element, and replace it, if necessary.	
After the start-up bypass time, excessive temperature is occasionally displayed () although there is no excessive temperature.	The distance between the initiator head and the switching element is too large.	Set the distance to 4 ± 1 mm.	Chapter 6.4
	The bracket for the initiator is not sufficiently stable. Vibrations may cause false signals.	Ensure that the bracket is of sufficient stability.	Chapter 6.4
While the start-up bypass is active, operating fluid is leaking through the fusible plugs.	A too long start-up bypass time was selected.	Set a shorter start-up bypass time so that the speed of the turbo coupling with switching element will have clearly exceeded 60 rpm after the start-up bypass time.	

Malfunction	Possible cause(s)	Remedial action	See
After the start-up by-pass time, operating fluid is leaking through the fusible plugs, the BTS did not display any excessive temperature.	The nominal response temperatures of switching element and fusible plugs do not match.	Please contact Voith.	Chapter 12
	The switching element is defective.	Check the switching element, and replace it, if necessary.	

Please consult Voith (→ Chapter 12), if a malfunction occurs which is not included in this table.

Table 12

In order to determine the cause of failure more precisely, the following measures should be taken in the corresponding order:

Measurement	Result	Probable troubleshooting
Apply supply voltage to the evaluator. Measure the no-load voltage and the short-circuit current at the NAMUR input (terminals 9 and 8).	Clear deviation from the setpoints: - no-load voltage 8.2 V DC - short-circuit current 6.5 mA	Defective evaluator.
Connect the initiator to the evaluator. Measure the current consumption of the initiator which is not attenuated.	Current consumption > 6.0 mA or < 2.1 mA	Defective initiator.
Connect the initiator to the evaluator. Measure the current consumption of the initiator which is attenuated. Note: The initiator can, for example, be attenuated with a metal plate which is held directly in front of the initiator head.	Current consumption > 1.2 mA or < 0.1 mA	Defective initiator.
Attenuate the initiator, after proper installation, with the switching element, with the turbo coupling not being overheated.	Current consumption > 1.2 mA and < 6.0 mA	Defective switching element.


Table 13

12 Queries, Orders Placed for Field Service Engineers and Spare Parts

For

- queries
- Ordering a field service engineer
- Ordering spare parts
- commissionings

we need:

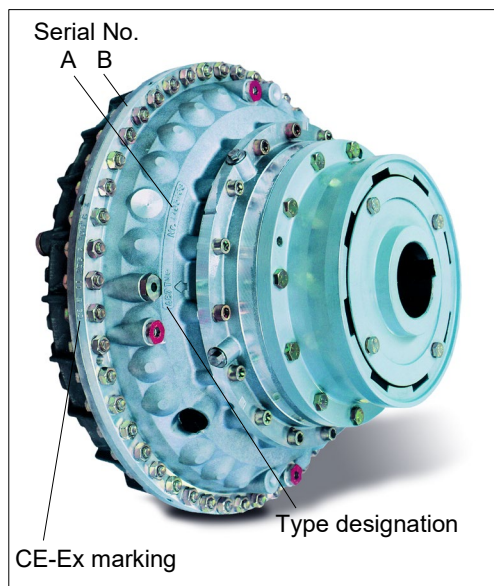

the **Serial No.** and **type designation** of the turbo coupling on which the BTS is used.

- You will find the serial number and type designation either on the outer wheel / coupling shell (A) or on the turbo coupling periphery (B).
- The serial number is stamped in with figure stamps.
- For turbo couplings, intended for the use in potentially explosive atmospheres, you will find the CE-Ex marking on the turbo coupling periphery.

Fig. 12

When placing an order for a **field service representative, commissioning** or a **service**, we need, in addition

- the turbo coupling installation site,
- the name and address of a contact person,
- details of the malfunction/problem occurred.

When placing a **spare parts order**, we need, in addition,

- the shipping address for the spare parts shipment.

Contact
→ Page 2

13 Spare Parts Information

NOTICE

Unauthorized changes or retrofits are not allowed to be performed on the coupling!

Do not retrofit accessories or equipment originating from other manufacturers!

Any changes or conversions performed without the prior written consent of Voith Turbo will result in the loss of any warranty! Any claims will forfeit!

- Professional maintenance or repair can only be guaranteed by the manufacturer!

13.1 Switching elements

BTS switching elements					Sealing ring
Use for turbo coupling size	Dimension of thread	Nominal response temperature	Type of switching element	Material No.	Material No.
206 - 274	M12x1.5	125 °C	Voith 125 °C	TCR.10498440	TCR.03658012
366 - 650	M18x1.5	85 °C	Voith 85 °C	TCR.10672470	TCR.03658018
		90 °C	Voith 90 °C	TCR.10642650	
		110 °C	Voith 110 °C	TCR.10642630	
		125 °C	Voith 125 °C	TCR.10499540	
		140 °C	Voith 140 °C	TCR.10499550	
		160 °C	Voith 160 °C	TCR.10499560	
750 - 1330	M24x1.5	180 °C	Voith 180 °C	TCR.10499570	TCR.03658024
		85 °C	Voith 85 °C	TCR.11973940	
		125 °C	Voith 125 °C	TCR.10488230	
		140 °C	Voith 140 °C	TCR.10653470	
		160 °C	Voith 160 °C	TCR.10633550	
		180 °C	Voith 180 °C	TCR.10488220	

Table 14

13.2 Initiator, mounting flange

Type of initiator	Material No.
NJ 10-22-N-E93-Y245590 (2 m)	201.04312710
NJ 10-22-N-E93-Y246868 (5 m)	201.04312810
NJ 10-22-N-E93-Y246869 (10 m)	201.04312910
Mounting flange BF22	TCR.03668170

Table 15

13.3 Evaluator

Type of evaluator	Material No.
KFU8-DW-1.D-Y209869	201.01630810

Table 16

13.4 Isolating switch amplifier

Type of isolating switch amplifier	Material No.
KFA6-SOT2-Ex2	TCR.11952640
KFD2-SOT3-Ex2	201.04495110

Table 17

14 Annex

14.1 Initiator NJ 10-22-N-E93-Y245590 (2 m)

Voith Material No.: 201.04312710

Operating Instructions	Pepperl+Fuchs
Technical Data	Pepperl+Fuchs
Declaration of Conformity	Pepperl+Fuchs
Manufacturer's Declaration	Pepperl+Fuchs

Instruction Manual

1. Marking

Inductive sensor NJ10-22-N-E93-Y245590
ATEX marking Ⓔ II 2G Ex ia IIC T6...T1 Gb Ⓔ II 1D Ex ia IIIC T ₂₀₀ 135°C Da
IECEx marking Ex ia IIC T6...T1 Gb Ex ia IIIC T ₂₀₀ 135°C Da Ex ia I Mb
Pepperl+Fuchs Group Lilienthalstraße 200, 68307 Mannheim, Germany
Internet: www.pepperl-fuchs.com

2. Validity

Specific processes and instructions in this instruction manual require special provisions to guarantee the safety of the operating personnel.

3. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.
The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the device. The trained and qualified personnel must have read and understood the instruction manual.

4. Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location. Observe Directive 1999/92/EC in relation to hazardous areas.
The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable (see datasheet) are an integral part of this document. You can find this information under www.pepperl-fuchs.com.
For specific device information, scan the QR code on the device or enter the serial number in the serial number search at www.pepperl-fuchs.com.
Due to constant revisions, documentation is subject to permanent change. Please refer only to the most up-to-date version, which can be found under www.pepperl-fuchs.com.

5. Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.
Technical data provided in the datasheet may be partly restrained by the information given in this instruction manual.
Use the device only within the specified ambient and operating conditions. The device is an electrical apparatus for hazardous areas.
The certificate applies only to the use of apparatus under atmospheric conditions.
If you use the device outside atmospheric conditions, consider that the permissible safety parameters should be reduced.
The device can be used in hazardous areas containing gas, vapor, and mist.
The device can be used in hazardous areas containing combustible dust.
The device can be used in underground parts of mines as well as those parts of surface installations of such mines containing firedamp and/or combustible dust.

5.1. Requirements for Equipment Protection Level Gb

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures >60 °C in conjunction with hot surfaces has been checked by the notified body.

5.2. Requirements for Equipment Protection Level Da

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures >60 °C in conjunction with hot surfaces has been checked by the notified body.

5.3. Requirements for Equipment Protection Level Mb

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures >60 °C in conjunction with hot surfaces has been checked by the notified body.

6. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

7. Mounting and Installation

Observe the installation instructions according to IEC/EN 60079-14.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Attach the nameplate supplied in the immediate vicinity of the device. Attach the nameplate so that it is legible and indelible. Take the ambient conditions into account.

Do not mount a damaged or polluted device.

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

If you use the device in environments subject to adverse conditions, you must protect the device accordingly.

Do not remove the warning markings.

7.1. Requirements for Usage as Intrinsically Safe Apparatus

When connecting intrinsically safe devices with intrinsically safe circuits of associated apparatus, observe the maximum peak values with regard to explosion protection (verification of intrinsic safety). Observe the standards IEC/EN 60079-14 or IEC/EN 60079-25.

The type of protection is determined by the connected intrinsically safe circuit.

7.2. Specific Conditions of Use

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

7.2.1. Requirements in Relation to Electrostatics

Information on electrostatic hazards can be found in the technical specification IEC/TS 60079-32-1.

Do not mount the supplied nameplate in areas that can be electrostatically charged.

You can reduce the electrostatic hazards by minimizing the generation of static electricity. For example, you have the following options to minimize the generation of static electricity:

- Control the environmental humidity.
- Protect the device from direct airflow.
- Ensure a continuous drain off of the electrostatic charges.

7.2.1.1. Requirements for Equipment Protection Level Da

Avoid electrostatic charges which could result in electrostatic discharges while installing, operating, or maintaining the device.

7.2.2. Requirements to Mechanics

7.2.2.1. Requirements for Usage as Intrinsically Safe Apparatus

Protect the device from impact effects by mounting in a surrounding enclosure if it is used in the temperature range between the minimum permissible ambient temperature and -20 °C.

Mount the device with at least a degree of protection of IP20 according to IEC/EN 60529.

8. Operation, Maintenance, Repair

Observe the specific conditions of use.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Do not use a damaged or polluted device.

Do not repair, modify, or manipulate the device.

Modifications are permitted only if approved in this instruction manual and in the device-related documentation.

If there is a defect, always replace the device with an original device.

Do not remove the warning markings.

8.1. Requirements for Usage as Intrinsically Safe Apparatus

Only operate the device with intrinsically safe circuits according to IEC/EN 60079-11.

The type of protection is determined by the connected intrinsically safe circuit.

8.2. Requirements for Equipment Protection Level Gb

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

8.3. Requirements for Equipment Protection Level Da

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

8.4. Requirements for Equipment Protection Level Mb

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

9. Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Keep the original packaging. Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

The device, built-in components, packaging, and any batteries contained within must be disposed in compliance with the applicable laws and guidelines of the respective country.

10. National Ex approvals

EAC-EX:	TC RU C-DE.AA87.B.00394
---------	-------------------------

11. Safety-Relevant Technical Data

11.1. Equipment protection level Gb

Type of protection	Intrinsic safety
CE marking	CE-0102
Certificates	
Appropriate type	NJ10-22-N...
ATEX certificate	PTB 00 ATEX 2048 X
ATEX marking	Ⓔ II 2G Ex ia IIC T6...T1 Gb
ATEX standards	EN IEC 60079-0:2018-07, EN 60079-11:2012-01
IECEX certificate	IECEX PTB 11.0037X
IECEX marking	Ex ia IIC T6...T1 Gb
IECEX standards	IEC 60079-0:2017-12, IEC 60079-11:2011-06
Effective internal capacitance C_i	max. 130 nF A cable length of 10 m is considered.
Effective internal inductance L_i	max. 100 µH A cable length of 10 m is considered.

Maximum permissible ambient temperature in °C	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 34 \text{ mW}$ T6: 73 °C T5: 88 °C T4: 100 °C T3: 100 °C T2: 100 °C T1: 100 °C $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 64 \text{ mW}$ T6: 69 °C T5: 84 °C T4: 100 °C T3: 100 °C T2: 100 °C T1: 100 °C $U_i = 16 \text{ V}$, $I_i = 52 \text{ mA}$, $P_i = 169 \text{ mW}$ T6: 51 °C T5: 66 °C T4: 80 °C T3: 80 °C T2: 80 °C T1: 80 °C $U_i = 16 \text{ V}$, $I_i = 76 \text{ mA}$, $P_i = 242 \text{ mW}$ T6: 39 °C T5: 54 °C T4: 61 °C T3: 61 °C T2: 61 °C T1: 61 °C
---	---

11.2. Equipment protection level Da

Type of protection	Intrinsic safety
CE marking	CE-0102
Certificates	
Appropriate type	NJ10-22-N...
ATEX certificate	PTB 00 ATEX 2048 X
ATEX marking	Ⓔ II 1D Ex ia IIIC T ₂₀₀ 135°C Da
ATEX standards	EN IEC 60079-0:2018-07, EN 60079-11:2012-01
IECEX certificate	IECEX PTB 11.0037X
IECEX marking	Ex ia IIIC T ₂₀₀ 135°C Da
IECEX standards	IEC 60079-0:2017-12, IEC 60079-11:2011-06
Effective internal capacitance C_i	max. 130 nF A cable length of 10 m is considered.
Effective internal inductance L_i	max. 100 µH A cable length of 10 m is considered.
Maximum permissible ambient temperature in °C	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 34 \text{ mW}$ 100 °C $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 64 \text{ mW}$ 100 °C $U_i = 16 \text{ V}$, $I_i = 52 \text{ mA}$, $P_i = 169 \text{ mW}$ 62 °C

11.3. Equipment protection level Mb

Type of protection	Intrinsic safety
Certificates	
Appropriate type	NJ10-22-N...
IECEX certificate	IECEX PTB 11.0037X
IECEX marking	Ex ia I Mb

IECEEx standards	IEC 60079-0:2017-12, IEC 60079-11:2011-06
Effective internal capacitance C_i	max. 130 nF A cable length of 10 m is considered.
Effective internal inductance L_i	max. 100 μ H A cable length of 10 m is considered.
Maximum permissible ambient temperature in $^{\circ}\text{C}$	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 34 \text{ mW}$ 100 $^{\circ}\text{C}$ $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 64 \text{ mW}$ 100 $^{\circ}\text{C}$ $U_i = 16 \text{ V}$, $I_i = 52 \text{ mA}$, $P_i = 169 \text{ mW}$ 80 $^{\circ}\text{C}$ $U_i = 16 \text{ V}$, $I_i = 76 \text{ mA}$, $P_i = 242 \text{ mW}$ 61 $^{\circ}\text{C}$


Inductive sensor

NJ10-22-N-E93-Y245590

■ Comfort series



Dimensions

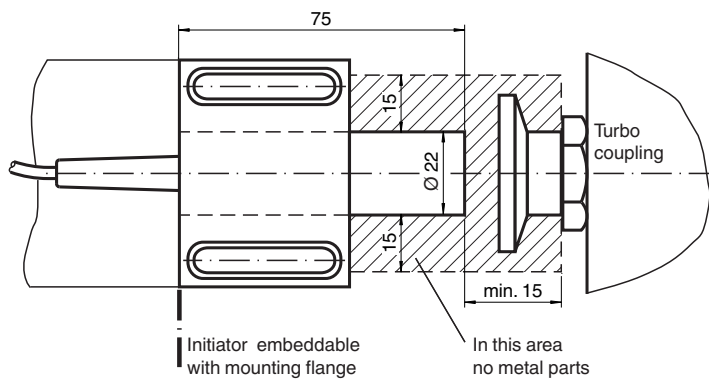

Technical Data

General specifications

Switching function		Normally closed (NC)
Output type		NAMUR
Rated operating distance	S_n	10 mm
Installation		non-flush
Assured operating distance	s_a	0 ... 10 mm
Output type		2-wire

Nominal ratings

Nominal voltage	U_o	8.2 V (R_i approx. 1 k Ω)
Switching frequency	f	0 ... 1000 Hz
Hysteresis	H	typ. 5 %
Current consumption		
Measuring plate not detected		min. 3 mA
Measuring plate detected		≤ 1 mA

Functional safety related parameters

MTTF _d		3602 a
Mission Time (T_M)		20 a
Diagnostic Coverage (DC)		0 %

Compliance with standards and directives

Standard conformity		
NAMUR		EN 60947-5-6:2000 IEC 60947-5-6:1999

Release date: 2021-06-21 Date of issue: 2021-06-21 Filename: 70133281_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS

Technical Data

Standards		EN 60947-5-2:2007 EN 60947-5-2/A1:2012 IEC 60947-5-2:2007 IEC 60947-5-2 AMD 1:2012
Approvals and certificates		
IECEx approval		
Equipment protection level Gb		IECEx PTB 11.0037X
Equipment protection level Da		IECEx PTB 11.0037X
Equipment protection level Mb		IECEx PTB 11.0037X
ATEX approval		
Equipment protection level Gb		PTB 00 ATEX 2048 X
Equipment protection level Da		PTB 00 ATEX 2048 X
EAC conformity		TR CU 012/2011
UL approval		cULus Listed, General Purpose
Ambient conditions		
Ambient temperature	-40 ... 100 °C (-40 ... 212 °F) Also observe the maximum permissible ambient temperature stated in the data for application in connection with hazardous areas. Keep to the lower of the two values.	
Mechanical specifications		
Connection type		cable
Housing material		PBT
Sensing face		PBT
Degree of protection		IP68
Cable		
Cable diameter		6 mm ± 0.2 mm
Bending radius		> 10 x cable diameter
Material		silicone
Core cross-section		0.75 mm ²
Length	L	2 m
General information		
Use in the hazardous area		see instruction manuals

Connection



Pepperl+Fuchs SE
Lilienthalstraße 200
68307 Mannheim
Germany
Phone +49 621 776-0
Fax +49 621 776-1000

No. / Nr.: DOC-5073
Date / Datum: 2021-07-21

Copyright Pepperl+Fuchs
www.pepperl-fuchs.com



Declaration of conformity / Konformitätserklärung

We, Pepperl+Fuchs SE declare under our sole responsibility that the **products** listed below are in conformity with the listed **European Directives** and **standards**.

Die Pepperl+Fuchs SE erklärt hiermit in alleiniger Verantwortung, dass die unten gelisteten **Produkte** den genannten **Europäischen Richtlinien** und **Normen** entsprechen.

Products / Produkte

Product / Produkt	Item number	Description / Beschreibung
NJ2-12GK-N-Y40110	70133235	Inductive sensor
NJ2-12GK-N-10M-Y89552	70133232	Inductive sensor
NJ2-12GK-N-25M	70133233	Inductive sensor
NJ2-12GK-N-5M	70133234	Inductive sensor
NJ2-12GM-N-Y08766	70133239	Inductive sensor
NJ2-12GM-N-Y10638	70133240	Inductive sensor
NJ2-14GM-N-C50	70133255	Inductive sensor
NJ2-14GM-N-V1-Y19784	70133256	Inductive sensor
NJ2,5-14GM-N-V1-Y21146	70133054	Inductive sensor
NJ25-50-N	70133327	Inductive sensor
NJ10-30GK-N-5M	70133311	Inductive sensor
NJ25-50-N-15M	70133328	Inductive sensor
NJ15-30GKK-N	70133073	Inductive sensor
NJ25-50-N-5M	70133329	Inductive sensor
NJ15-30GK-N	70133317	Inductive sensor
NJ15-30GK-N-Y08943	70133320	Inductive sensor
NJ15-30GK-N-10M	70133074	Inductive sensor
NJ15-30GK-N-20M	70133318	Inductive sensor
NJ15-30GK-N-30M	70133319	Inductive sensor
NJ20-40-N	70133323	Inductive sensor
NJ2-11-N-G-Y102883	70133198	Inductive sensor
NJ2-11-N-G-910	70133196	Inductive sensor
NJ10-22-N	70133280	Inductive sensor
NJ10-22-N-E93-Y245590	70133281	Inductive sensor
NJ10-22-N-E93-Y246868	70133282	Inductive sensor
NJ10-22-N-E93-Y246869	70133283	Inductive sensor
NJ10-22-N-G	70133284	Inductive sensor

Product / Produkt	Item number	Description / Beschreibung
NJ10-22-N-G-5M	70133285	Inductive sensor
NJ10-30GKK-N	70133308	Inductive sensor
NJ10-30GK-N	70133309	Inductive sensor
NJ10-30GK-N-15M	70133310	Inductive sensor
NJ2-11-N-Y14235	70133202	Inductive sensor
NJ2-12GK-N	70133049	Inductive sensor

Directives and Standards / Richtlinien und Normen

EU-Directive EU-Richtlinie	Standards Normen
ATEX 2014/34/EU (L96/309-356)	EN 60079-11:2012-01 EN IEC 60079-0:2018-07
EMC 2014/30/EU (L96/79-106)	EN 60947-5-2/A1:2012-11 EN 60947-5-2:2007-12 EN 60947-5-6:2000-01 EN IEC 60947-5-2:2020-03
RoHS 2011/65/EU (L174/88-110)	EN IEC 63000:2018-12

Affixed CE Marking / Angebrachte CE-Kennzeichnung



Signatures / Unterschriften

Mannheim, 2021-07-21

i.V. Ulrich Ehrenfried

Head of Innovation Unit Electromagnetic
Sensors

i.V. Tobias Dittmer

Global Product Manager

ANNEX ATEX

Notified Body QM-System / Notifizierte Stelle des QM-Systems
Physikalisch Technische Bundesanstalt (0102)
Bundesallee 100
38116 Braunschweig
Germany

Marking and Certificates / Kennzeichnung und Zertifikate

Marking Kennzeichnung	Certificate Zertifikat	Issuer ID Aussteller ID
II 1 D II 2 G	PTB 00 ATEX 2048 X	0102

Key for Issuer ID / Schlüssel zur Aussteller ID

ID	Issuer / Aussteller
0102	Physikalisch Technische Bundesanstalt Bundesallee 100 38116 Braunschweig Germany

Pepperl+Fuchs SE • 68307 Mannheim • Germany

Customer: DE164472
J.M. Voith SE & Co. KG | VTA

Mannheim, November 24, 2023

We, Pepperl+Fuchs SE at 68307 Mannheim hereby declare that the listed product/s have been produced conform to the Regulation (EC) No 1907/2006 (REACH). Used SVHC according Article 33 of the regulation are noted.

Manufacturer Declaration

Item/s		
Item Number	Item Description	Your Item No
SCIP No.		
SVHC		
70133281	NJ10-22-N-E93-Y245590	
	1a8b87c8-f50d-4cf1-b772-699892f52066	
	-4,4'-isopropylidenediphenol (Bisphenol A), EC 201-245-8,	
	CAS 80-05-7	
	-Lead (Pb) EC 231-100-4, CAS 7439-92-1	

This document is generated automatically and valid without signature. The document represents the present status of knowledge.

Department Global Compliance
24.11.2023 Mannheim

14.2 Initiator NJ 10-22-N-E93-Y246868 (5 m)

Voith Material No.: 201.04312810

Operating Instructions	Pepperl+Fuchs
Technical Data	Pepperl+Fuchs
Declaration of Conformity	Pepperl+Fuchs
Manufacturer's Declaration	Pepperl+Fuchs

Instruction Manual

1. Marking

Inductive sensor NJ10-22-N-E93-Y246868
ATEX marking Ⓔ II 2G Ex ia IIC T6...T1 Gb Ⓔ II 1D Ex ia IIIC T ₂₀₀ 135°C Da
IECEx marking Ex ia IIC T6...T1 Gb Ex ia IIIC T ₂₀₀ 135°C Da Ex ia I Mb
Pepperl+Fuchs Group Lilienthalstraße 200, 68307 Mannheim, Germany Internet: www.pepperl-fuchs.com

2. Validity

Specific processes and instructions in this instruction manual require special provisions to guarantee the safety of the operating personnel.

3. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.
The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the device. The trained and qualified personnel must have read and understood the instruction manual.

4. Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location. Observe Directive 1999/92/EC in relation to hazardous areas.
The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable (see datasheet) are an integral part of this document. You can find this information under www.pepperl-fuchs.com.
For specific device information, scan the QR code on the device or enter the serial number in the serial number search at www.pepperl-fuchs.com.
Due to constant revisions, documentation is subject to permanent change. Please refer only to the most up-to-date version, which can be found under www.pepperl-fuchs.com.

5. Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.
Technical data provided in the datasheet may be partly restrained by the information given in this instruction manual.
Use the device only within the specified ambient and operating conditions. The device is an electrical apparatus for hazardous areas.
The certificate applies only to the use of apparatus under atmospheric conditions.
If you use the device outside atmospheric conditions, consider that the permissible safety parameters should be reduced.
The device can be used in hazardous areas containing gas, vapor, and mist.
The device can be used in hazardous areas containing combustible dust.
The device can be used in underground parts of mines as well as those parts of surface installations of such mines containing firedamp and/or combustible dust.

5.1. Requirements for Equipment Protection Level Gb

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures >60 °C in conjunction with hot surfaces has been checked by the notified body.

5.2. Requirements for Equipment Protection Level Da

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures >60 °C in conjunction with hot surfaces has been checked by the notified body.

5.3. Requirements for Equipment Protection Level Mb

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures >60 °C in conjunction with hot surfaces has been checked by the notified body.

6. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

7. Mounting and Installation

Observe the installation instructions according to IEC/EN 60079-14.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Attach the nameplate supplied in the immediate vicinity of the device. Attach the nameplate so that it is legible and indelible. Take the ambient conditions into account.

Do not mount a damaged or polluted device.

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

If you use the device in environments subject to adverse conditions, you must protect the device accordingly.

Do not remove the warning markings.

7.1. Requirements for Usage as Intrinsically Safe Apparatus

When connecting intrinsically safe devices with intrinsically safe circuits of associated apparatus, observe the maximum peak values with regard to explosion protection (verification of intrinsic safety). Observe the standards IEC/EN 60079-14 or IEC/EN 60079-25.

The type of protection is determined by the connected intrinsically safe circuit.

7.2. Specific Conditions of Use

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

7.2.1. Requirements in Relation to Electrostatics

Information on electrostatic hazards can be found in the technical specification IEC/TS 60079-32-1.

Do not mount the supplied nameplate in areas that can be electrostatically charged.

You can reduce the electrostatic hazards by minimizing the generation of static electricity. For example, you have the following options to minimize the generation of static electricity:

- Control the environmental humidity.
- Protect the device from direct airflow.
- Ensure a continuous drain off of the electrostatic charges.

7.2.1.1. Requirements for Equipment Protection Level Da

Avoid electrostatic charges which could result in electrostatic discharges while installing, operating, or maintaining the device.

7.2.2. Requirements to Mechanics

7.2.2.1. Requirements for Usage as Intrinsically Safe Apparatus

Protect the device from impact effects by mounting in a surrounding enclosure if it is used in the temperature range between the minimum permissible ambient temperature and -20 °C.

Mount the device with at least a degree of protection of IP20 according to IEC/EN 60529.

8. Operation, Maintenance, Repair

Observe the specific conditions of use.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Do not use a damaged or polluted device.

Do not repair, modify, or manipulate the device.

Modifications are permitted only if approved in this instruction manual and in the device-related documentation.

If there is a defect, always replace the device with an original device.

Do not remove the warning markings.

8.1. Requirements for Usage as Intrinsically Safe Apparatus

Only operate the device with intrinsically safe circuits according to IEC/EN 60079-11.

The type of protection is determined by the connected intrinsically safe circuit.

8.2. Requirements for Equipment Protection Level Gb

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

8.3. Requirements for Equipment Protection Level Da

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

8.4. Requirements for Equipment Protection Level Mb

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

9. Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Keep the original packaging. Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

The device, built-in components, packaging, and any batteries contained within must be disposed in compliance with the applicable laws and guidelines of the respective country.

10. National Ex approvals

EAC-EX:	TC RU C-DE.AA87.B.00394
---------	-------------------------

11. Safety-Relevant Technical Data

11.1. Equipment protection level Gb

Type of protection	Intrinsic safety
CE marking	CE-0102
Certificates	
Appropriate type	NJ10-22-N...
ATEX certificate	PTB 00 ATEX 2048 X
ATEX marking	Ⓔ II 2G Ex ia IIC T6...T1 Gb
ATEX standards	EN IEC 60079-0:2018-07, EN 60079-11:2012-01
IECEx certificate	IECEx PTB 11.0037X
IECEx marking	Ex ia IIC T6...T1 Gb
IECEx standards	IEC 60079-0:2017-12, IEC 60079-11:2011-06
Effective internal capacitance C_i	max. 130 nF A cable length of 10 m is considered.
Effective internal inductance L_i	max. 100 µH A cable length of 10 m is considered.

Maximum permissible ambient temperature in °C	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 34 \text{ mW}$ T6: 73 °C T5: 88 °C T4: 100 °C T3: 100 °C T2: 100 °C T1: 100 °C $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 64 \text{ mW}$ T6: 69 °C T5: 84 °C T4: 100 °C T3: 100 °C T2: 100 °C T1: 100 °C $U_i = 16 \text{ V}$, $I_i = 52 \text{ mA}$, $P_i = 169 \text{ mW}$ T6: 51 °C T5: 66 °C T4: 80 °C T3: 80 °C T2: 80 °C T1: 80 °C $U_i = 16 \text{ V}$, $I_i = 76 \text{ mA}$, $P_i = 242 \text{ mW}$ T6: 39 °C T5: 54 °C T4: 61 °C T3: 61 °C T2: 61 °C T1: 61 °C
---	---

11.2. Equipment protection level Da

Type of protection	Intrinsic safety
CE marking	CE-0102
Certificates	
Appropriate type	NJ10-22-N...
ATEX certificate	PTB 00 ATEX 2048 X
ATEX marking	Ⓔ II 1D Ex ia IIIC T ₂₀₀ 135°C Da
ATEX standards	EN IEC 60079-0:2018-07, EN 60079-11:2012-01
IECEx certificate	IECEx PTB 11.0037X
IECEx marking	Ex ia IIIC T ₂₀₀ 135°C Da
IECEx standards	IEC 60079-0:2017-12, IEC 60079-11:2011-06
Effective internal capacitance C_i	max. 130 nF A cable length of 10 m is considered.
Effective internal inductance L_i	max. 100 µH A cable length of 10 m is considered.
Maximum permissible ambient temperature in °C	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 34 \text{ mW}$ 100 °C $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 64 \text{ mW}$ 100 °C $U_i = 16 \text{ V}$, $I_i = 52 \text{ mA}$, $P_i = 169 \text{ mW}$ 62 °C

11.3. Equipment protection level Mb

Type of protection	Intrinsic safety
Certificates	
Appropriate type	NJ10-22-N...
IECEx certificate	IECEx PTB 11.0037X
IECEx marking	Ex ia I Mb

IECEX standards	IEC 60079-0:2017-12, IEC 60079-11:2011-06
Effective internal capacitance C_i	max. 130 nF A cable length of 10 m is considered.
Effective internal inductance L_i	max. 100 μ H A cable length of 10 m is considered.
Maximum permissible ambient temperature in $^{\circ}\text{C}$	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 34 \text{ mW}$ 100 $^{\circ}\text{C}$ $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 64 \text{ mW}$ 100 $^{\circ}\text{C}$ $U_i = 16 \text{ V}$, $I_i = 52 \text{ mA}$, $P_i = 169 \text{ mW}$ 80 $^{\circ}\text{C}$ $U_i = 16 \text{ V}$, $I_i = 76 \text{ mA}$, $P_i = 242 \text{ mW}$ 61 $^{\circ}\text{C}$


Inductive sensor

NJ10-22-N-E93-Y246868

■ Comfort series



Dimensions

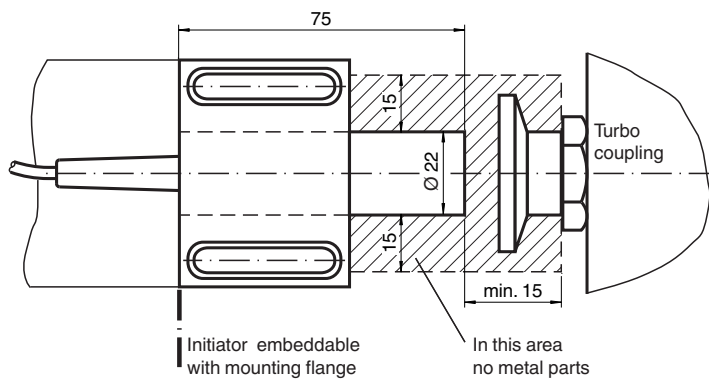

Technical Data

General specifications

Switching function		Normally closed (NC)
Output type		NAMUR
Rated operating distance	S_n	10 mm
Installation		non-flush
Assured operating distance	s_a	0 ... 10 mm
Output type		2-wire

Nominal ratings

Nominal voltage	U_o	8.2 V (R_i approx. 1 k Ω)
Switching frequency	f	0 ... 1000 Hz
Hysteresis	H	typ. 5 %
Current consumption		
Measuring plate not detected		min. 3 mA
Measuring plate detected		≤ 1 mA

Functional safety related parameters

MTTF _d		3602 a
Mission Time (T_M)		20 a
Diagnostic Coverage (DC)		0 %

Compliance with standards and directives

Standard conformity		
NAMUR		EN 60947-5-6:2000 IEC 60947-5-6:1999

Release date: 2021-06-21 Date of issue: 2021-06-21 Filename: 70133282_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS

Technical Data

Standards		EN 60947-5-2:2007 EN 60947-5-2/A1:2012 IEC 60947-5-2:2007 IEC 60947-5-2 AMD 1:2012
Approvals and certificates		
IECEx approval		
Equipment protection level Gb		IECEx PTB 11.0037X
Equipment protection level Da		IECEx PTB 11.0037X
Equipment protection level Mb		IECEx PTB 11.0037X
ATEX approval		
Equipment protection level Gb		PTB 00 ATEX 2048 X
Equipment protection level Da		PTB 00 ATEX 2048 X
EAC conformity		TR CU 012/2011
UL approval		cULus Listed, General Purpose
Ambient conditions		
Ambient temperature		-40 ... 100 °C (-40 ... 212 °F) Also observe the maximum permissible ambient temperature stated in the data for application in connection with hazardous areas. Keep to the lower of the two values.
Mechanical specifications		
Connection type		cable
Housing material		PBT
Sensing face		PBT
Degree of protection		IP68
Cable		
Cable diameter		6 mm ± 0.2 mm
Bending radius		> 10 x cable diameter
Material		silicone
Core cross-section		0.75 mm²
Length	L	5 m
General information		
Use in the hazardous area		see instruction manuals

Connection



Pepperl+Fuchs SE
Lilienthalstraße 200
68307 Mannheim
Germany
Phone +49 621 776-0
Fax +49 621 776-1000

No. / Nr.: DOC-5073
Date / Datum: 2021-07-21

Copyright Pepperl+Fuchs
www.pepperl-fuchs.com



Declaration of conformity / Konformitätserklärung

We, Pepperl+Fuchs SE declare under our sole responsibility that the **products** listed below are in conformity with the listed **European Directives** and **standards**.

Die Pepperl+Fuchs SE erklärt hiermit in alleiniger Verantwortung, dass die unten gelisteten **Produkte** den genannten **Europäischen Richtlinien** und **Normen** entsprechen.

Products / Produkte

Product / Produkt	Item number	Description / Beschreibung
NJ2-12GK-N-Y40110	70133235	Inductive sensor
NJ2-12GK-N-10M-Y89552	70133232	Inductive sensor
NJ2-12GK-N-25M	70133233	Inductive sensor
NJ2-12GK-N-5M	70133234	Inductive sensor
NJ2-12GM-N-Y08766	70133239	Inductive sensor
NJ2-12GM-N-Y10638	70133240	Inductive sensor
NJ2-14GM-N-C50	70133255	Inductive sensor
NJ2-14GM-N-V1-Y19784	70133256	Inductive sensor
NJ2,5-14GM-N-V1-Y21146	70133054	Inductive sensor
NJ25-50-N	70133327	Inductive sensor
NJ10-30GK-N-5M	70133311	Inductive sensor
NJ25-50-N-15M	70133328	Inductive sensor
NJ15-30GKK-N	70133073	Inductive sensor
NJ25-50-N-5M	70133329	Inductive sensor
NJ15-30GK-N	70133317	Inductive sensor
NJ15-30GK-N-Y08943	70133320	Inductive sensor
NJ15-30GK-N-10M	70133074	Inductive sensor
NJ15-30GK-N-20M	70133318	Inductive sensor
NJ15-30GK-N-30M	70133319	Inductive sensor
NJ20-40-N	70133323	Inductive sensor
NJ2-11-N-G-Y102883	70133198	Inductive sensor
NJ2-11-N-G-910	70133196	Inductive sensor
NJ10-22-N	70133280	Inductive sensor
NJ10-22-N-E93-Y245590	70133281	Inductive sensor
NJ10-22-N-E93-Y246868	70133282	Inductive sensor
NJ10-22-N-E93-Y246869	70133283	Inductive sensor
NJ10-22-N-G	70133284	Inductive sensor

Product / Produkt	Item number	Description / Beschreibung
NJ10-22-N-G-5M	70133285	Inductive sensor
NJ10-30GKK-N	70133308	Inductive sensor
NJ10-30GK-N	70133309	Inductive sensor
NJ10-30GK-N-15M	70133310	Inductive sensor
NJ2-11-N-Y14235	70133202	Inductive sensor
NJ2-12GK-N	70133049	Inductive sensor

Directives and Standards / Richtlinien und Normen

EU-Directive EU-Richtlinie	Standards Normen
ATEX 2014/34/EU (L96/309-356)	EN 60079-11:2012-01 EN IEC 60079-0:2018-07
EMC 2014/30/EU (L96/79-106)	EN 60947-5-2/A1:2012-11 EN 60947-5-2:2007-12 EN 60947-5-6:2000-01 EN IEC 60947-5-2:2020-03
RoHS 2011/65/EU (L174/88-110)	EN IEC 63000:2018-12

Affixed CE Marking / Angebrachte CE-Kennzeichnung



Signatures / Unterschriften

Mannheim, 2021-07-21

i.V. Ulrich Ehrenfried

Head of Innovation Unit Electromagnetic
Sensors

i.V. Tobias Dittmer

Global Product Manager

ANNEX ATEX

Notified Body QM-System / Notifizierte Stelle des QM-Systems
Physikalisch Technische Bundesanstalt (0102)
Bundesallee 100
38116 Braunschweig
Germany

Marking and Certificates / Kennzeichnung und Zertifikate

Marking Kennzeichnung	Certificate Zertifikat	Issuer ID Aussteller ID
II 1 D II 2 G	PTB 00 ATEX 2048 X	0102

Key for Issuer ID / Schlüssel zur Aussteller ID

ID	Issuer / Aussteller
0102	Physikalisch Technische Bundesanstalt Bundesallee 100 38116 Braunschweig Germany

Pepperl+Fuchs SE • 68307 Mannheim • Germany

Customer: DE164472
J.M. Voith SE & Co. KG | VTA

Mannheim, November 24, 2023

We, Pepperl+Fuchs SE at 68307 Mannheim hereby declare that the listed product/s have been produced conform to the Regulation (EC) No 1907/2006 (REACH). Used SVHC according Article 33 of the regulation are noted.

Manufacturer Declaration

Item/s		
Item Number	Item Description	Your Item No
SCIP No.		
SVHC		
70133282	NJ10-22-N-E93-Y246868	
	2cf50ea3-9289-4d6e-87b2-1e566cbb10ed	
	-4,4'-isopropylidenediphenol (Bisphenol A), EC 201-245-8,	
	CAS 80-05-7	
	-Lead (Pb) EC 231-100-4, CAS 7439-92-1	

This document is generated automatically and valid without signature. The document represents the present status of knowledge.

Department Global Compliance
24.11.2023 Mannheim

14.3 Initiator NJ 10-22-N-E93-Y246869 (10 m)

Voith Material No.: 201.04312910

Operating Instructions	Pepperl+Fuchs
Technical Data	Pepperl+Fuchs
Declaration of Conformity	Pepperl+Fuchs
Manufacturer's Declaration	Pepperl+Fuchs

Instruction Manual

1. Marking

Inductive sensor NJ10-22-N-E93-Y246869
ATEX marking Ⓔ II 2G Ex ia IIC T6...T1 Gb Ⓔ II 1D Ex ia IIIC T ₂₀₀ 135°C Da
IECEx marking Ex ia IIC T6...T1 Gb Ex ia IIIC T ₂₀₀ 135°C Da Ex ia I Mb
Pepperl+Fuchs Group Lilienthalstraße 200, 68307 Mannheim, Germany Internet: www.pepperl-fuchs.com

2. Validity

Specific processes and instructions in this instruction manual require special provisions to guarantee the safety of the operating personnel.

3. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.
The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the device. The trained and qualified personnel must have read and understood the instruction manual.

4. Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location. Observe Directive 1999/92/EC in relation to hazardous areas.
The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable (see datasheet) are an integral part of this document. You can find this information under www.pepperl-fuchs.com.
For specific device information, scan the QR code on the device or enter the serial number in the serial number search at www.pepperl-fuchs.com.
Due to constant revisions, documentation is subject to permanent change. Please refer only to the most up-to-date version, which can be found under www.pepperl-fuchs.com.

5. Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.
Technical data provided in the datasheet may be partly restrained by the information given in this instruction manual.
Use the device only within the specified ambient and operating conditions. The device is an electrical apparatus for hazardous areas.
The certificate applies only to the use of apparatus under atmospheric conditions.
If you use the device outside atmospheric conditions, consider that the permissible safety parameters should be reduced.
The device can be used in hazardous areas containing gas, vapor, and mist.
The device can be used in hazardous areas containing combustible dust.
The device can be used in underground parts of mines as well as those parts of surface installations of such mines containing firedamp and/or combustible dust.

5.1. Requirements for Equipment Protection Level Gb

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures >60 °C in conjunction with hot surfaces has been checked by the notified body.

5.2. Requirements for Equipment Protection Level Da

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures >60 °C in conjunction with hot surfaces has been checked by the notified body.

5.3. Requirements for Equipment Protection Level Mb

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures >60 °C in conjunction with hot surfaces has been checked by the notified body.

6. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

7. Mounting and Installation

Observe the installation instructions according to IEC/EN 60079-14.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Attach the nameplate supplied in the immediate vicinity of the device. Attach the nameplate so that it is legible and indelible. Take the ambient conditions into account.

Do not mount a damaged or polluted device.

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

If you use the device in environments subject to adverse conditions, you must protect the device accordingly.

Do not remove the warning markings.

7.1. Requirements for Usage as Intrinsically Safe Apparatus

When connecting intrinsically safe devices with intrinsically safe circuits of associated apparatus, observe the maximum peak values with regard to explosion protection (verification of intrinsic safety). Observe the standards IEC/EN 60079-14 or IEC/EN 60079-25.

The type of protection is determined by the connected intrinsically safe circuit.

7.2. Specific Conditions of Use

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

7.2.1. Requirements in Relation to Electrostatics

Information on electrostatic hazards can be found in the technical specification IEC/TS 60079-32-1.

Do not mount the supplied nameplate in areas that can be electrostatically charged.

You can reduce the electrostatic hazards by minimizing the generation of static electricity. For example, you have the following options to minimize the generation of static electricity:

- Control the environmental humidity.
- Protect the device from direct airflow.
- Ensure a continuous drain off of the electrostatic charges.

7.2.1.1. Requirements for Equipment Protection Level Da

Avoid electrostatic charges which could result in electrostatic discharges while installing, operating, or maintaining the device.

7.2.2. Requirements to Mechanics

7.2.2.1. Requirements for Usage as Intrinsically Safe Apparatus

Protect the device from impact effects by mounting in a surrounding enclosure if it is used in the temperature range between the minimum permissible ambient temperature and -20 °C.

Mount the device with at least a degree of protection of IP20 according to IEC/EN 60529.

8. Operation, Maintenance, Repair

Observe the specific conditions of use.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Do not use a damaged or polluted device.

Do not repair, modify, or manipulate the device.

Modifications are permitted only if approved in this instruction manual and in the device-related documentation.

If there is a defect, always replace the device with an original device.

Do not remove the warning markings.

8.1. Requirements for Usage as Intrinsically Safe Apparatus

Only operate the device with intrinsically safe circuits according to IEC/EN 60079-11.

The type of protection is determined by the connected intrinsically safe circuit.

8.2. Requirements for Equipment Protection Level Gb

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

8.3. Requirements for Equipment Protection Level Da

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

8.4. Requirements for Equipment Protection Level Mb

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

9. Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Keep the original packaging. Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

The device, built-in components, packaging, and any batteries contained within must be disposed in compliance with the applicable laws and guidelines of the respective country.

10. National Ex approvals

EAC-EX:	TC RU C-DE.AA87.B.00394
---------	-------------------------

11. Safety-Relevant Technical Data

11.1. Equipment protection level Gb

Type of protection	Intrinsic safety
CE marking	CE-0102
Certificates	
Appropriate type	NJ10-22-N...
ATEX certificate	PTB 00 ATEX 2048 X
ATEX marking	Ⓔ II 2G Ex ia IIC T6...T1 Gb
ATEX standards	EN IEC 60079-0:2018-07, EN 60079-11:2012-01
IECEX certificate	IECEX PTB 11.0037X
IECEX marking	Ex ia IIC T6...T1 Gb
IECEX standards	IEC 60079-0:2017-12, IEC 60079-11:2011-06
Effective internal capacitance C_i	max. 130 nF A cable length of 10 m is considered.
Effective internal inductance L_i	max. 100 µH A cable length of 10 m is considered.

Maximum permissible ambient temperature in °C	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 34 \text{ mW}$ T6: 73 °C T5: 88 °C T4: 100 °C T3: 100 °C T2: 100 °C T1: 100 °C $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 64 \text{ mW}$ T6: 69 °C T5: 84 °C T4: 100 °C T3: 100 °C T2: 100 °C T1: 100 °C $U_i = 16 \text{ V}$, $I_i = 52 \text{ mA}$, $P_i = 169 \text{ mW}$ T6: 51 °C T5: 66 °C T4: 80 °C T3: 80 °C T2: 80 °C T1: 80 °C $U_i = 16 \text{ V}$, $I_i = 76 \text{ mA}$, $P_i = 242 \text{ mW}$ T6: 39 °C T5: 54 °C T4: 61 °C T3: 61 °C T2: 61 °C T1: 61 °C
---	---

11.2. Equipment protection level Da

Type of protection	Intrinsic safety
CE marking	CE-0102
Certificates	
Appropriate type	NJ10-22-N...
ATEX certificate	PTB 00 ATEX 2048 X
ATEX marking	Ⓔ II 1D Ex ia IIIC T ₂₀₀ 135°C Da
ATEX standards	EN IEC 60079-0:2018-07, EN 60079-11:2012-01
IECEX certificate	IECEX PTB 11.0037X
IECEX marking	Ex ia IIIC T ₂₀₀ 135°C Da
IECEX standards	IEC 60079-0:2017-12, IEC 60079-11:2011-06
Effective internal capacitance C_i	max. 130 nF A cable length of 10 m is considered.
Effective internal inductance L_i	max. 100 µH A cable length of 10 m is considered.
Maximum permissible ambient temperature in °C	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 34 \text{ mW}$ 100 °C $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 64 \text{ mW}$ 100 °C $U_i = 16 \text{ V}$, $I_i = 52 \text{ mA}$, $P_i = 169 \text{ mW}$ 62 °C

11.3. Equipment protection level Mb

Type of protection	Intrinsic safety
Certificates	
Appropriate type	NJ10-22-N...
IECEX certificate	IECEX PTB 11.0037X
IECEX marking	Ex ia I Mb

IECEEx standards	IEC 60079-0:2017-12, IEC 60079-11:2011-06
Effective internal capacitance C_i	max. 130 nF A cable length of 10 m is considered.
Effective internal inductance L_i	max. 100 μ H A cable length of 10 m is considered.
Maximum permissible ambient temperature in °C	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 34 \text{ mW}$ 100 °C $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 64 \text{ mW}$ 100 °C $U_i = 16 \text{ V}$, $I_i = 52 \text{ mA}$, $P_i = 169 \text{ mW}$ 80 °C $U_i = 16 \text{ V}$, $I_i = 76 \text{ mA}$, $P_i = 242 \text{ mW}$ 61 °C


Inductive sensor

NJ10-22-N-E93-Y246869

■ Comfort series



Dimensions

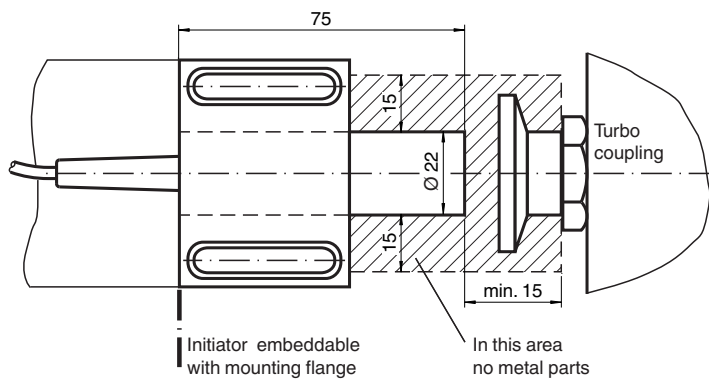

Technical Data

General specifications

Switching function		Normally closed (NC)
Output type		NAMUR
Rated operating distance	S_n	10 mm
Installation		non-flush
Assured operating distance	s_a	0 ... 10 mm
Output type		2-wire

Nominal ratings

Nominal voltage	U_o	8.2 V (R_i approx. 1 k Ω)
Switching frequency	f	0 ... 1000 Hz
Hysteresis	H	typ. 5 %
Current consumption		
Measuring plate not detected		min. 3 mA
Measuring plate detected		≤ 1 mA

Functional safety related parameters

MTTF _d		3602 a
Mission Time (T_M)		20 a
Diagnostic Coverage (DC)		0 %

Compliance with standards and directives

Standard conformity		
NAMUR		EN 60947-5-6:2000 IEC 60947-5-6:1999

Release date: 2021-06-21 Date of issue: 2021-06-21 Filename: 70133283_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS

Technical Data

Standards		EN 60947-5-2:2007 EN 60947-5-2/A1:2012 IEC 60947-5-2:2007 IEC 60947-5-2 AMD 1:2012
Approvals and certificates		
IECEx approval		
Equipment protection level Gb		IECEx PTB 11.0037X
Equipment protection level Da		IECEx PTB 11.0037X
Equipment protection level Mb		IECEx PTB 11.0037X
ATEX approval		
Equipment protection level Gb		PTB 00 ATEX 2048 X
Equipment protection level Da		PTB 00 ATEX 2048 X
EAC conformity		TR CU 012/2011
UL approval		cULus Listed, General Purpose
Ambient conditions		
Ambient temperature	-40 ... 100 °C (-40 ... 212 °F) Also observe the maximum permissible ambient temperature stated in the data for application in connection with hazardous areas. Keep to the lower of the two values.	
Mechanical specifications		
Connection type		cable
Housing material		PBT
Sensing face		PBT
Degree of protection		IP68
Cable		
Cable diameter		6 mm ± 0.2 mm
Bending radius		> 10 x cable diameter
Material		silicone
Core cross-section		0.75 mm ²
Length	L	10 m
General information		
Use in the hazardous area		see instruction manuals

Connection

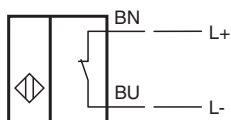

Pepperl+Fuchs SE
Lilienthalstraße 200
68307 Mannheim
Germany
Phone +49 621 776-0
Fax +49 621 776-1000

No. / Nr.: DOC-5073
Date / Datum: 2021-07-21

Copyright Pepperl+Fuchs
www.pepperl-fuchs.com



Declaration of conformity / Konformitätserklärung

We, Pepperl+Fuchs SE declare under our sole responsibility that the **products** listed below are in conformity with the listed **European Directives** and **standards**.

Die Pepperl+Fuchs SE erklärt hiermit in alleiniger Verantwortung, dass die unten gelisteten **Produkte** den genannten **Europäischen Richtlinien** und **Normen** entsprechen.

Products / Produkte

Product / Produkt	Item number	Description / Beschreibung
NJ2-12GK-N-Y40110	70133235	Inductive sensor
NJ2-12GK-N-10M-Y89552	70133232	Inductive sensor
NJ2-12GK-N-25M	70133233	Inductive sensor
NJ2-12GK-N-5M	70133234	Inductive sensor
NJ2-12GM-N-Y08766	70133239	Inductive sensor
NJ2-12GM-N-Y10638	70133240	Inductive sensor
NJ2-14GM-N-C50	70133255	Inductive sensor
NJ2-14GM-N-V1-Y19784	70133256	Inductive sensor
NJ2,5-14GM-N-V1-Y21146	70133054	Inductive sensor
NJ25-50-N	70133327	Inductive sensor
NJ10-30GK-N-5M	70133311	Inductive sensor
NJ25-50-N-15M	70133328	Inductive sensor
NJ15-30GKK-N	70133073	Inductive sensor
NJ25-50-N-5M	70133329	Inductive sensor
NJ15-30GK-N	70133317	Inductive sensor
NJ15-30GK-N-Y08943	70133320	Inductive sensor
NJ15-30GK-N-10M	70133074	Inductive sensor
NJ15-30GK-N-20M	70133318	Inductive sensor
NJ15-30GK-N-30M	70133319	Inductive sensor
NJ20-40-N	70133323	Inductive sensor
NJ2-11-N-G-Y102883	70133198	Inductive sensor
NJ2-11-N-G-910	70133196	Inductive sensor
NJ10-22-N	70133280	Inductive sensor
NJ10-22-N-E93-Y245590	70133281	Inductive sensor
NJ10-22-N-E93-Y246868	70133282	Inductive sensor
NJ10-22-N-E93-Y246869	70133283	Inductive sensor
NJ10-22-N-G	70133284	Inductive sensor

Product / Produkt	Item number	Description / Beschreibung
NJ10-22-N-G-5M	70133285	Inductive sensor
NJ10-30GKK-N	70133308	Inductive sensor
NJ10-30GK-N	70133309	Inductive sensor
NJ10-30GK-N-15M	70133310	Inductive sensor
NJ2-11-N-Y14235	70133202	Inductive sensor
NJ2-12GK-N	70133049	Inductive sensor

Directives and Standards / Richtlinien und Normen

EU-Directive EU-Richtlinie	Standards Normen
ATEX 2014/34/EU (L96/309-356)	EN 60079-11:2012-01 EN IEC 60079-0:2018-07
EMC 2014/30/EU (L96/79-106)	EN 60947-5-2/A1:2012-11 EN 60947-5-2:2007-12 EN 60947-5-6:2000-01 EN IEC 60947-5-2:2020-03
RoHS 2011/65/EU (L174/88-110)	EN IEC 63000:2018-12

Affixed CE Marking / Angebrachte CE-Kennzeichnung



Signatures / Unterschriften

Mannheim, 2021-07-21

i.V. Ulrich Ehrenfried

Head of Innovation Unit Electromagnetic
Sensors

i.V. Tobias Dittmer

Global Product Manager

ANNEX ATEX

Notified Body QM-System / Notifizierte Stelle des QM-Systems
Physikalisch Technische Bundesanstalt (0102)
Bundesallee 100
38116 Braunschweig
Germany

Marking and Certificates / Kennzeichnung und Zertifikate

Marking Kennzeichnung	Certificate Zertifikat	Issuer ID Aussteller ID
II 1 D II 2 G	PTB 00 ATEX 2048 X	0102

Key for Issuer ID / Schlüssel zur Aussteller ID

ID	Issuer / Aussteller
0102	Physikalisch Technische Bundesanstalt Bundesallee 100 38116 Braunschweig Germany

Pepperl+Fuchs SE • 68307 Mannheim • Germany

Customer: DE164472
J.M. Voith SE & Co. KG | VTA

Mannheim, November 24, 2023

We, Pepperl+Fuchs SE at 68307 Mannheim hereby declare that the listed product/s have been produced conform to the Regulation (EC) No 1907/2006 (REACH). Used SVHC according Article 33 of the regulation are noted.

Manufacturer Declaration

Item/s		
Item Number	Item Description	Your Item No
SCIP No.		
SVHC		
70133283	NJ10-22-N-E93-Y246869	
	313df958-fb94-4948-91b4-843538f6e738	
	-4,4'-isopropylidenediphenol (Bisphenol A), EC 201-245-8, CAS 80-05-7	
	-Lead (Pb) EC 231-100-4, CAS 7439-92-1	


This document is generated automatically and valid without signature. The document represents the present status of knowledge.

Department Global Compliance
24.11.2023 Mannheim

14.4 Evaluator KFU8-DW-1.D-Y209869

Voith Material No.: 201.01630810

Technical Data	Pepperl+Fuchs
Declaration of Conformity	Pepperl+Fuchs
Manufacturer's Declaration	Pepperl+Fuchs

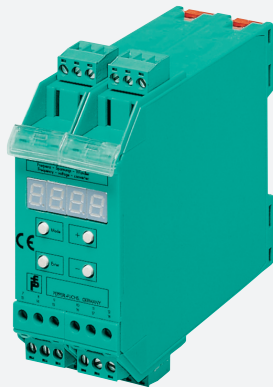

Rotation Speed Monitor KFU8-DW-1.D-Y209869

- Rotational speed monitoring up to 10 kHz
- 1 pre-select value with relay output and LED indicator
- Multi-range power pack
- NAMUR sensors connectable
- Adjustable start-up override
- Menu driven operation via 4 front keys
- Period measurement

Evaluation unit



Function


The speed monitor is a device used to indicate and monitor periodic signals (frequencies and rotational speeds) which occur in almost all areas of automation and process engineering.

The input signals are evaluated in accordance with the cycle method. That is, by measuring the duration of a period and then converting it with a very fast micro controller to a frequency or rotational speed.

The speed monitor can be supplied with 115 V AC, 230 V AC or by a 24 V DC supply and when connected to an alternating voltage it provides a 24 V DC source to supply the signal sensor.

Dimensions

Indicators/operating means

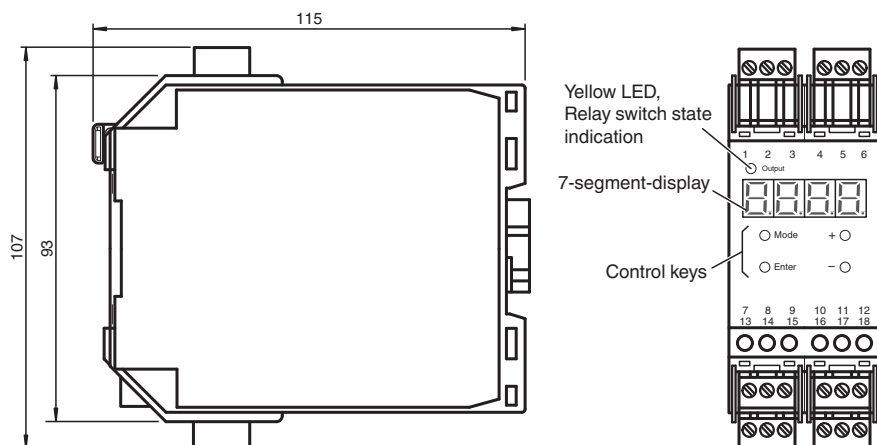

Technical Data

General specifications

Pre-selection single

Functional safety related parameters

MTTF_d 100 a

Release date: 2025-05-20 Date of issue: 2025-05-20 Filename: 209869_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

 **PEPPERL+FUCHS**

Technical Data

Supply		
Rated voltage	U _r	200 ... 230 V AC ; 100 ... 130 V AC; 50/60 Hz 20 VDC ... 30 VDC
Fusing		external fusing 4 A
Power consumption		AC: < 5 VA DC: < 5 W
Input		
Control input		NAMUR: 1,2 mA ≤ x ≤ 2,1 mA (terminal 8, 9), max. 8.2 V and 6.5 mA, impedance 1.2 kOhm
Trigger input		12 V (terminal 2), max. 30 V, impedance 2.8 kOhm
Pulse duration		20 μs
Input 1		
Switching point		1.2 ... 2.1 mA Switching hysteresis approx. 0.2 mA
Input frequency		0.002 ... 10000 Hz, pulse length/duration: ≥ 20 μs
Impedance		1.2 kΩ
Input 3		
Start-up override		Triggering by external signal 16 ... 30 V or Place jumper between terminals 2/3 or by switching on supply voltage (terminal 2 and terminal 3 permanently bridged)
Hold-up time		1 ... 9999 s (External trigger signal)
Output		
Relay		1 changeover contact
Sensor supply		24 V DC ± 10 %, 30 mA , short-circuit protected
Contact loading		250 V AC/2 A/ cos φ ≥ 0.7 40 V DC/2 A
Delay times		
Time delay before availability		≤ 400 ms
Start-up override		1 ... 9999 s
Relay		≤ 20 ms
Transfer characteristics		
Measuring error		0 ... 10 kHz: ≤ ±0.1% Display: ±1 digit
Standard conformity		
Electromagnetic compatibility		acc. to EN 50081-2 / EN 50082-2
Ambient conditions		
Ambient temperature		-25 ... 40 °C (-13 ... 104 °F)
Storage temperature		-40 ... 85 °C (-40 ... 185 °F)
Relative humidity		max. 80 %, not condensing
Altitude		0 ... 2000 m
Operating conditions		The device has only to be used in an indoor area.
Mechanical specifications		
Connection assembly		Caution: Please be aware that the device may only be connected to a switchable power supply. The switch or circuit breaker must be easy to reach and identified as the separator for the device.
Degree of protection		IP20
Connection		coded, removable terminals , max. core cross section 0.34 ... 2.5 mm ²
Construction type		modular terminal housing in Makrolon, System KF For use in the switch cabinet/switch cabinet module
Mounting		snap-on to 35 mm standard rail or screw fixing
Life span		30 x 10 ⁶ switching cycles

Connection

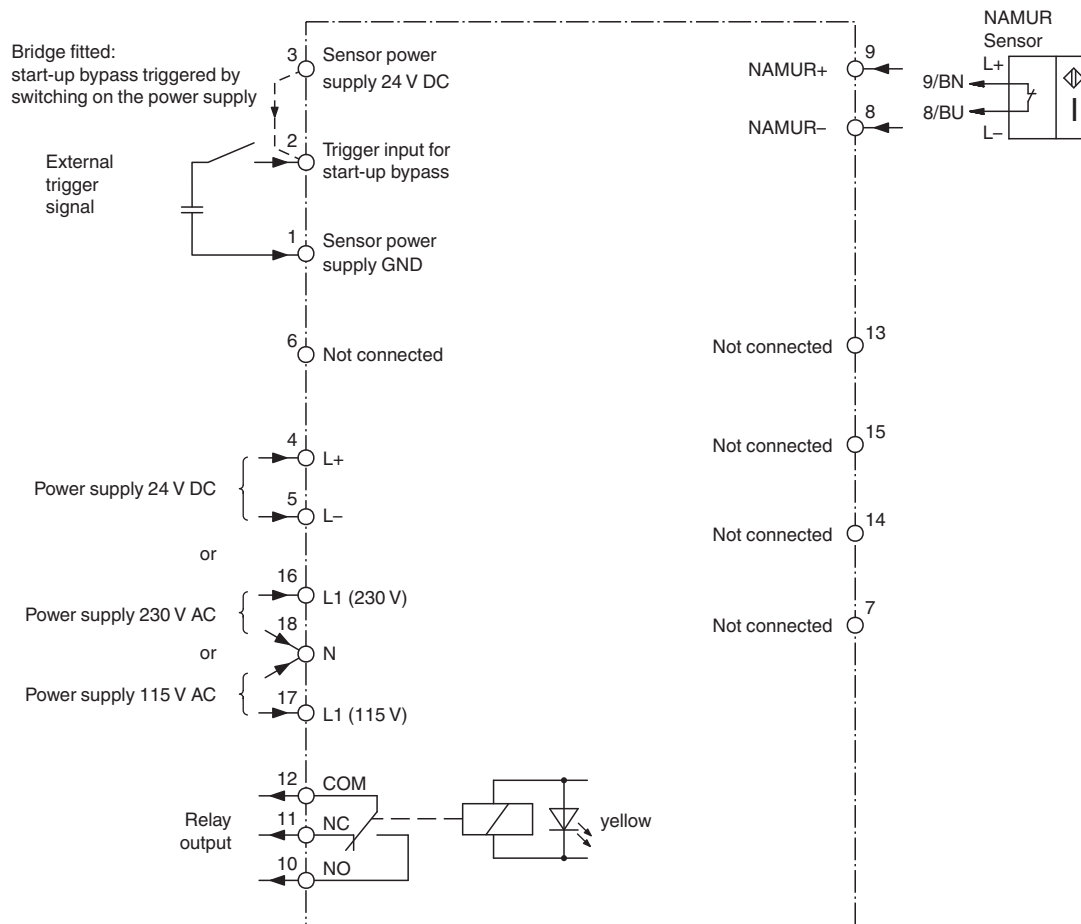

Pepperl+Fuchs SE
Lilienthalstraße 200
68307 Mannheim
Germany
Phone +49 621 776-0
Fax +49 621 776-1000

No. / Nr.: DOC-1838C
Date / Datum: 2022-03-30

Copyright Pepperl+Fuchs
www.pepperl-fuchs.com



■ Declaration of conformity / Konformitätserklärung

We, Pepperl+Fuchs SE declare under our sole responsibility that the **products** listed below are in conformity with the listed **European Directives** and **standards**.

*Die Pepperl+Fuchs SE erklärt hiermit in alleiniger Verantwortung, dass die unten gelisteten **Produkte** den genannten **Europäischen Richtlinien** und **Normen** entsprechen.*

■ Products / Produkte

Product / Produkt	Item number	Description / Beschreibung
KFU8-FSSP-1.D	181191	Frequency voltage current converter
KFU8-FSSP-1.D-Y180599	180599	Frequency voltage current converter
KFU8-DW-1.D	190149	Overspeed/underspeed Monitor
KFU8-DW-1.D-Y209869	209869	Overspeed/underspeed Monitor

■ Directives and Standards / Richtlinien und Normen

EU-Directive EU-Richtlinie	Standards Normen
2014/30/EU (EMC)	EN 61326-1:2013
2014/35/EU (LV)	EN 61010-1:2010 + A1:2019
2011/65/EU (RoHS)	EN IEC 63000:2018

■ Affixed CE Marking / Angebrachte CE-Kennzeichnung



■ Signatures / Unterschriften

Mannheim, 2022-03-30

i.V. Sebastian Stöber
Director Business Unit SYSTEMS

i.V. Wolfram Warnecke
Approval Engineer

Pepperl+Fuchs SE
Lilienthalstrasse 200
68307 Mannheim
Germany
Phone +49 621 776-0
Fax +49 621 776-1000

No: DOC-6863
Date: 2022-09-30

Copyright Pepperl+Fuchs
www.pepperl-fuchs.com

 **PEPPERL+FUCHS**

■ Declaration of conformity

We, Pepperl+Fuchs SE declare under our sole responsibility that the **products** listed below are in conformity with the listed **UK Regulations** as indicated below and amended by **UK SI 2019 No. 696**, and **standards**.

■ Products

Product	Item number	Description
KFU8-DW-1.D	190149	Speed monitor
KFU8-DW-1.D-Y209869	209869	Speed monitor
KFU8-FSSP-1.D	181191	Frequency converter
KFU8-FSSP-1.D-Y180599	180599	Frequency converter I/U

■ Regulations and Standards


UK Regulation	Standards
UK SI 2012 No. 3032 (RoHS)	EN IEC 63000:2018
UK SI 2016 No. 1091 (EMC)	EN 61326-1:2013
UK SI 2016 No. 1101 (LV)	EN 61010-1:2010 + A1:2019


■ Affixed UKCA Marking



■ Signatures

Mannheim, 2022-09-30


i.V. Sebastian Stöber
Vice President Business Unit Systems


i.V. Simon Wagner
Product Manager

Pepperl+Fuchs SE • 68307 Mannheim • Germany

Customer: DE164472
J.M. Voith SE & Co. KG | VTA

Mannheim, November 24, 2023

We, Pepperl+Fuchs SE at 68307 Mannheim hereby declare that the listed product/s have been produced conform to the Regulation (EC) No 1907/2006 (REACH). Used SVHC according Article 33 of the regulation are noted.

Manufacturer Declaration

Item/s		
Item Number	Item Description	Your Item No
SCIP No.		
SVHC		
209869	KFU8-DW-1.D-Y209869	
	b43d1487-49d9-4a5a-8d64-90c032f9250e	
	-Lead (Pb) EC 231-100-4, CAS 7439-92-1	

This document is generated automatically and valid without signature. The document represents the present status of knowledge.

Department Global Compliance
24.11.2023 Mannheim

14.5 Isolating switch amplifier KFA6-SOT2-Ex2

Voith Material No.: TCR.11952640

Operating Instructions	Pepperl+Fuchs
Technical Data	Pepperl+Fuchs
Declaration of Conformity	Pepperl+Fuchs
Manufacturer's Declaration	Pepperl+Fuchs

Instruction Manual

Marking

K-System, Isolated barriers
Device identification
Model number
ATEX approval
Group, category, type of protection, temperature classification

table 1

The exact designation of the device can be found on the name plate on the device side.

Pepperl+Fuchs GmbH Lilienthalstrasse 200, 68307 Mannheim, Germany
--

table 2

Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator. Mounting, installation, commissioning, operation, maintenance and dismantling of the device may only be carried out by appropriate trained and qualified personnel. The instruction manual must be read and understood.

Prior to using the device you should make yourself familiar with the device and carefully read the instruction manual.

Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location.

The corresponding datasheets, declarations of conformity, EC-type-examination certificates, certificates and control drawings if applicable supplement this document. You can find this information under www.pepperl-fuchs.com.

Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

The device is used in control and instrumentation technology (C&I technology) for the galvanic isolation of signals such as 20 mA and 10 V standard signals or alternatively for adapting or standardizing signals.

The device has intrinsically safe circuits that are used for operating intrinsically safe field devices in hazardous areas.

Use the device only within the specified ambient conditions.

The device is designed for mounting on a 35 mm DIN mounting rail according to EN 60715.

Only use the device stationary.

The device is an associated apparatus according to IEC/EN 60079-11.

Improper Use

Protection of the personnel and the plant is not ensured if the device is not being used according to its intended use.

The device is not suitable for isolating signals in power installations unless this is noted separately in the corresponding datasheet.

Mounting and Installation

Do not mount a damaged or polluted device.

Mount the device in a way that the device is protected against mechanical hazard. Mount the device in a surrounding enclosure for example.

The device must be installed outside of the hazardous area.

The device fulfills a degree of protection IP20 according to IEC/EN 60529.

The device must be installed and operated only in an environment that ensures a pollution degree 2 (or better) according to IEC/EN 60664-1.

If used in areas with higher pollution degree, the device needs to be protected accordingly.

All circuits connected to the device must comply with the overvoltage category II (or better) according to IEC/EN 60664-1.

Only use power supplies that provide protection against electric shock (e. g. SELV or PELV) for the connection to power feed modules.

Observe the installation instructions according to IEC/EN 60079-14.

Requirements for Cables and Connection Lines

Observe the following points when installing cables and connection lines:

Observe the permissible core cross-section of the conductor.

If you use stranded conductors, crimp wire end ferrules on the conductor ends.

Use only one conductor per terminal.

When installing the conductors the insulation must reach up to the terminal.

Observe the tightening torque of the terminal screws.

If the rated voltage is greater than 50 V AC, proceed as follows:

1. Switch off the voltage.

2. Connect the terminal blocks or disconnect the terminal blocks.

Requirements for Usage as Associated Apparatus

If circuits with type of protection Ex i are operated with non-intrinsically safe circuits, they must no longer be used as circuits with type of protection Ex i.

Intrinsically safe circuits of associated apparatus can be led into hazardous areas. Observe the compliance of the separation distances to all non-intrinsically safe circuits according to IEC/EN 60079-14.

Observe the compliance of the separation distances between two adjacent intrinsically safe circuits according to IEC/EN 60079-14.

Observe the maximum values of the device, when connecting the device to intrinsically safe apparatus.

When connecting intrinsically safe devices with intrinsically safe circuits of associated apparatus, observe the maximum peak values with regard to

explosion protection (verification of intrinsic safety). Observe the standards IEC/EN 60079-14 or IEC/EN 60079-25.

If no L_o and C_o values are specified for the simultaneous appearance of lumped inductances and capacitances, the following rule applies.

- The specified value for L_o and C_o is used if one of the following conditions applies:
 - The circuit has distributed inductances and capacitances only, e. g., in cables and connection lines.
 - The total value of L_i (excluding cable) of the circuit is $< 1\%$ of the specified L_o value.
 - The total value of C_i (excluding cable) of the circuit is $< 1\%$ of the specified C_o value.
- A maximum of 50 % of the specified value for L_o and C_o is used if the following condition applies:
 - The total value of L_i (excluding cable) of the circuit is $\geq 1\%$ of the specified L_o value.
 - The total value of C_i (excluding cable) of the circuit is $\geq 1\%$ of the specified C_o value.
 - The reduced capacitance for gas groups I, IIA and IIB must not exceed the value of 1 μ F (including cable).
 - The reduced capacitance for gas group IIC must not exceed the value of 600 nF (including cable).

If more channels of one device are connected in parallel, ensure the parallel connection is made directly at the terminals of the device. When verifying the intrinsic safety, observe the maximum values for the parallel connection.

Operation, Maintenance, Repair

The devices must not be repaired, changed or manipulated. If there is a defect, the product must always be replaced with an original device.

If the rated voltage is greater than 50 V AC, proceed as follows:

1. Switch off the voltage.

2. Connect the terminal blocks or disconnect the terminal blocks.

Delivery, Transport, Disposal


Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions (see datasheet) must be considered.

Disposing of device, packaging, and possibly contained batteries must be in compliance with the applicable laws and guidelines of the respective country.

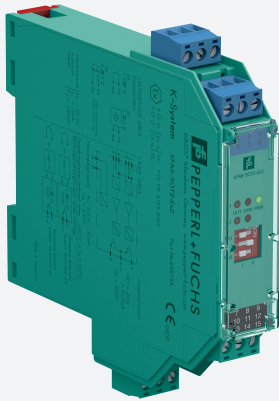

Switch Amplifier KFA6-SOT2-Ex2


- 2-channel isolated barrier
- 230 V AC supply
- Dry contact or NAMUR inputs
- Passive transistor output, non-polarized
- Line fault detection (LFD)
- Reversible mode of operation
- Up to SIL 2 acc. to IEC/EN 61508



Function

This isolated barrier is used for intrinsic safety applications. It transfers digital signals (NAMUR sensors/mechanical contacts) from a hazardous area to a safe area. Each proximity sensor or switch controls a passive transistor output for the safe area load. The normal output state can be reversed using switch S1 for channel I and switch S2 for channel II. Switch S3 enables or disables line fault detection of the field circuit. During an error condition, the transistors revert to their de-energized state and LEDs indicate the fault according to NAMUR NE44.

Connection

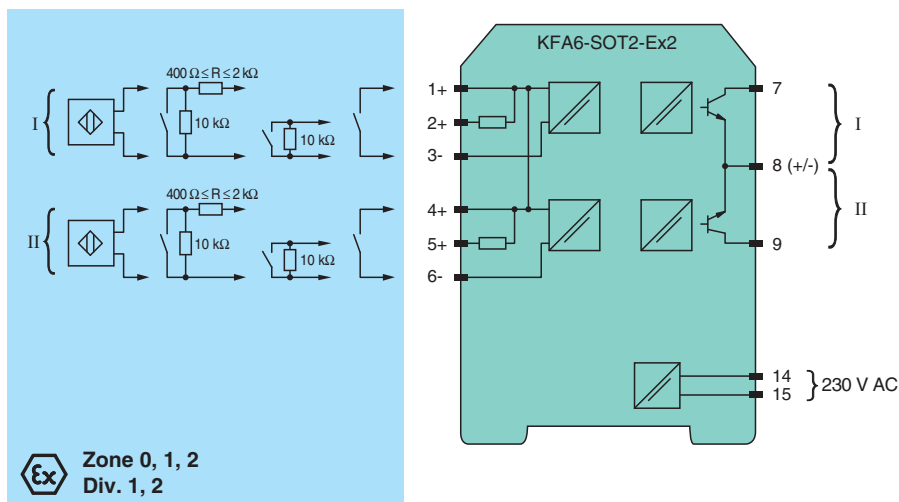

Technical Data

General specifications

Signal type	Digital Input
-------------	---------------

Functional safety related parameters

Safety Integrity Level (SIL)	SIL 2
------------------------------	-------

Supply

Connection	terminals 14, 15
Rated voltage	U_r 207 ... 253 V AC, 45 ... 65 Hz
Power dissipation	1 W
Power consumption	max. 1.5 W

Input

Connection side	field side
-----------------	------------

Technical Data


Connection	terminals 1+, 2+, 3-; 4+, 5+, 6-	
Rated values		acc. to EN 60947-5-6 (NAMUR), see manual for electrical data
Open circuit voltage/short-circuit current		approx. 8 V DC / approx. 8 mA
Switching point/switching hysteresis		1.2 ... 2.1 mA / approx. 0.2 mA
Line fault detection		breakage $I \leq 0.1$ mA , short-circuit $I > 6$ mA
Output		
Connection side		control side
Connection		output I: terminals 7, 8 ; output II: terminals 8, 9
Switching voltage		max. 40 V
Switching current		max. 100 mA , short-circuit protected
Signal level		1-signal: switching voltage - 2.5 V max. at 10 mA switching current or 3 V max. at 100 mA switching current 0-signal: switched off (off-state current ≤ 10 μ A)
Output I, II		signal ; electronic output, passive
Transfer characteristics		
Switching frequency		≤ 5 kHz
Galvanic isolation		
Input/Output		reinforced insulation according to IEC/EN 61010-1, rated insulation voltage 300 V _{eff}
Input/power supply		reinforced insulation according to IEC/EN 61010-1, rated insulation voltage 300 V _{eff}
Output/power supply		reinforced insulation according to IEC/EN 61010-1, rated insulation voltage 300 V _{eff}
Output/Output		not available
Indicators/settings		
Display elements		LEDs
Control elements		DIP switch
Configuration		via DIP switches
Labeling		space for labeling at the front
Directive conformity		
Electromagnetic compatibility		
Directive 2014/30/EU		EN 61326-1:2013 (industrial locations)
Low voltage		
Directive 2014/35/EU		EN 61010-1:2010
Conformity		
Electromagnetic compatibility		NE 21:2012
Degree of protection		IEC 60529
Ambient conditions		
Ambient temperature		-20 ... 60 °C (-4 ... 140 °F)
Mechanical specifications		
Degree of protection		IP20
Connection		screw terminals
Mass		approx. 150 g
Dimensions		20 x 119 x 115 mm (0.8 x 4.7 x 4.5 inch) (W x H x D) , housing type B2
Mounting		on 35 mm DIN mounting rail acc. to EN 60715:2001
Data for application in connection with hazardous areas		
EU-type examination certificate		PTB 98 ATEX 2164
Marking		Ⓔ II (1) G [Ex ia] IIC Ⓔ II (1) D [Ex ia] IIIC
Input		Ex ia IIC, Ex ia IIIC
Voltage	U _o	10.5 V
Current	I _o	13 mA
Power	P _o	34 mW (linear characteristic)
Supply		
Maximum safe voltage	U _m	253 V AC (Attention! U _m is no rated voltage.)
Output		
Maximum safe voltage	U _m	253 V AC (Attention! The rated voltage can be lower.)

Release date: 2022-01-10 Date of issue: 2022-01-10 Filename: 233753_eng.pdf

Technical Data

Galvanic isolation		
Input/input		not available
Input/Output		safe electrical isolation acc. to IEC/EN 60079-11, voltage peak value 375 V
Input/power supply		safe electrical isolation acc. to IEC/EN 60079-11, voltage peak value 375 V
Directive conformity		
Directive 2014/34/EU		EN 60079-0:2012+A11:2013 , EN 60079-11:2012
International approvals		
UL approval		
Control drawing		116-0145
CSA approval		
Control drawing		116-0047
General information		
Supplementary information		Observe the certificates, declarations of conformity, instruction manuals, and manuals where applicable. For information see www.pepperl-fuchs.com .

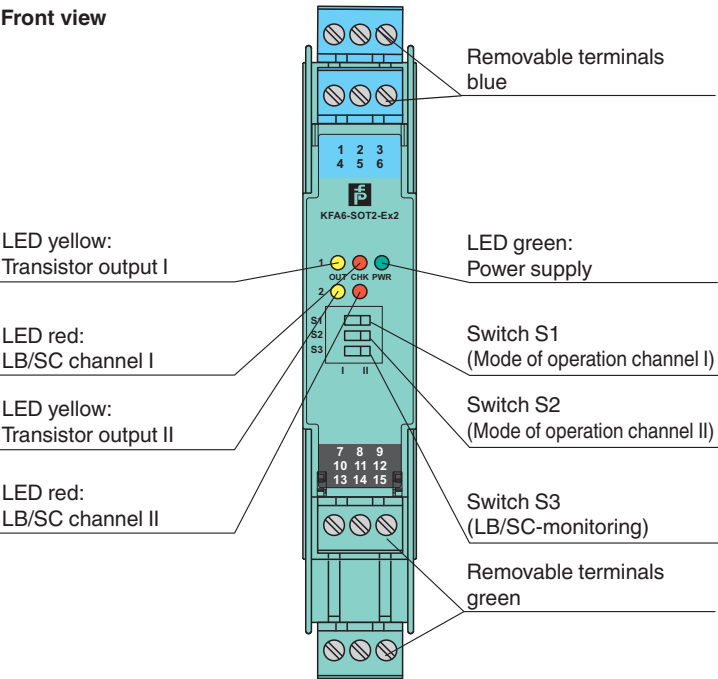

Assembly





Matching System Components

	K-DUCT-BU	Profile rail, wiring comb field side, blue
---	------------------	--

Accessories


	F-NR3-Ex1	NAMUR Resistor Network
	KF-ST-5GN	Terminal block for KF modules, 3-pin screw terminal, green

Accessories

	KF-ST-5BU	Terminal block for KF modules, 3-pin screw terminal, blue
	KF-CP	Red coding pins, packaging unit: 20 x 6

Release date: 2022-01-10 Date of issue: 2022-01-10 Filename: 233753_eng.pdf

Configuration

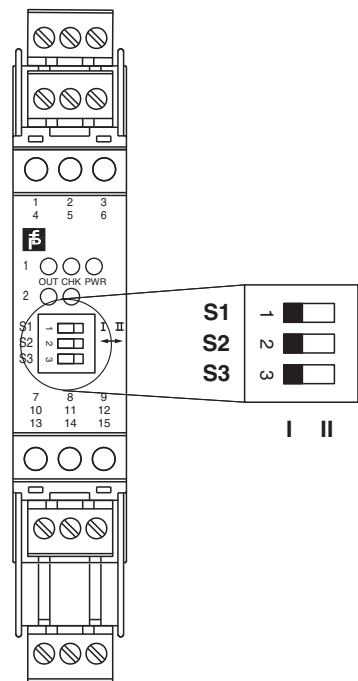

Switch position

S	Function		Position
1	Mode of operation output I active	with high input current	I
		with low input current	II
2	Mode of operation output II active	with high input current	I
		with low input current	II
3	Line fault detection	ON	I
		OFF	II

Operating states

Control circuit	Input signal
Initiator high impedance/contact opened	low input current
Initiator low impedance/contact closed	high input current
Lead breakage, lead short circuit	Line fault

Factory setting: switch 1, 2 and 3 in position I

Release date: 2022-01-10 Date of issue: 2022-01-10 Filename: 233753_eng.pdf

EU-Konformitätserklärung

Pepperl+Fuchs GmbH
Lilienthalstraße 200
68307 Mannheim
Germany
Phone +49 621 776-0
Fax +49 621 776-1000

No. / Nr.: DOC-0974
Date / Datum: 2016-10-24

Copyright Pepperl+Fuchs
www.pepperl-fuchs.com



■ Declaration of conformity / Konformitätserklärung

We, Pepperl+Fuchs GmbH declare under our sole responsibility that the **products** listed below are in conformity with the listed **European Directives** and **standards**.

Die Pepperl+Fuchs GmbH erklärt hiermit in alleiniger Verantwortung, dass die unten gelisteten **Produkte** den genannten **Europäischen Richtlinien** und **Normen** entsprechen.

■ Products / Produkte

Product / Produkt	Item number	Description / Beschreibung
KFA5-SOT2-EX2	233751	Switch amplifier
KFA6-SOT2-EX2	233753	Switch amplifier

■ Directives and Standards / Richtlinien und Normen

EU-Directive EU-Richtlinie	Standards Normen
ATEX 2014/34/EU (L96/309-356)	EN 60079-0/A11:2013-11 EN 60079-0:2012-08 EN 60079-11:2012-01
EMC 2014/30/EU (L96/79-106)	EN 61326-1:2013-01 (industrial locations)
LVD 2014/35/EU (L96/357-374)	EN 61010-1:2010-10

■ Affixed CE Marking / Angebrachte CE-Kennzeichnung



■ Signatures / Unterschriften

Mannheim, 2016-10-24

ppa. M. Kessler

ppa. Michael Kessler

Executive Vice President Components & Technology

i.V. F. Füll

i.V. Friedrich Füll

Product Portfolio Manager Interface Technology

■ ANNEX ATEX

Notified Body QM-System / Notifizierte Stelle des QM-Systems
Physikalisch Technische Bundesanstalt (0102)
Bundesallee 100
38116 Braunschweig
Germany

■ Marking and Certificates / Kennzeichnung und Zertifikate

Marking Kennzeichnung	Certificate Zertifikat	Issuer ID Aussteller ID
Ex II (1) G	PTB 98 ATEX 2164	0102

■ Key for Issuer ID / Schlüssel zur Aussteller ID

ID	Issuer / Aussteller
0102	Physikalisch Technische Bundesanstalt Bundesallee 100 38116 Braunschweig Germany

Pepperl+Fuchs GmbH declares that the products are only affected by minor or formal changes with respect to the new edition of the standards. These changes are not relevant for compliance with the essential health and safety requirements. The products still comply with the ATEX Directive. This declaration is also valid if the marking and the certificates of the listed devices correspond to previous editions of standards.

Die Pepperl+Fuchs GmbH erklärt hiermit, dass die Produkte nur von kleineren oder formalen Änderungen in Bezug auf die neue Ausgabe der Normen betroffen sind. Diese Änderungen sind nicht relevant für die Konformität mit den wesentlichen Gesundheits- und Sicherheitsanforderungen. Die Produkte erfüllen nach wie vor die ATEX-Richtlinie. Diese Erklärung gilt auch, wenn die Kennzeichnung und die Zertifikate der aufgeführten Geräte vorangegangenen Normenständen entsprechen.

Pepperl+Fuchs SE • 68307 Mannheim • Germany

Customer: DE164472
J.M. Voith SE & Co. KG | VTA

Mannheim, November 24, 2023

We, Pepperl+Fuchs SE at 68307 Mannheim hereby declare that the listed product/s have been produced conform to the Regulation (EC) No 1907/2006 (REACH). Used SVHC according Article 33 of the regulation are noted.

Manufacturer Declaration

Item/s		
Item Number	Item Description	Your Item No
SCIP No.		
SVHC		

233753 KFA6-SOT2-EX2
dd7fdee0-973a-4cb5-80a7-c3908baa3b6f
-Hexahydromethylphthalic anhydride including cis- and trans
stereo isomeric forms and all possible combinations of the
isomers EC 247-094-1, CAS 25550-51-0, EC 243-072-0, CAS
19438-60-9, EC 256-356-4, CAS 48122-14-1, EC 260-566-1, CAS
57110-29-9
-Lead (Pb) EC 231-100-4, CAS 7439-92-1

This document is generated automatically and valid without signature. The document represents the present status of knowledge.

Department Global Compliance
24.11.2023 Mannheim

14.6 Isolating switch amplifier KFD2-SOT3-Ex2

Voith Material No.: 201.04495110

Operating Instructions	Pepperl+Fuchs
Technical Data	Pepperl+Fuchs
Declaration of Conformity	Pepperl+Fuchs
Manufacturer's Declaration	Pepperl+Fuchs

Instruction Manual

1. Marking

Switch amplifier KFD2-SOT3-Ex1.LB, KFD2-SOT3-Ex1.LB.IO, KFD2-SOT3-Ex2, KFD2-SOT3-Ex2.IO, KFD2-SOT3-Ex2.IO-Y1
ATEX certificate: EXA 16 ATEX 0016 X ATEX marking: Ⓜ II 3(1)G Ex nA [ia Ga] IIC T4 Gc Ⓜ II (1)D [Ex ia Da] IIIC Ⓜ I (M1) [Ex ia Ma] I
IECEX certificate: IECEX EXA 16.0009X IECEX marking: Ex nA [ia Ga] IIC T4 Gc , [Ex ia Da] IIIC , [Ex ia Ma] I
North America Certificates: E106378 (UL) Class I, Division 2, Groups A-D, T4 Class I, Zone 2, Group IIC T4 Associated apparatus with intrinsically safe circuits for: Class I, Division 1, Groups A-D; Class II, Division 1, Groups E-G; Class III [AEx ia Ga] IIC, [AEx ia Da] IIIC, [Ex ia Ga] IIC, [Ex ia Da] IIIC
Pepperl+Fuchs Group Lilienthalstraße 200, 68307 Mannheim, Germany Internet: www.pepperl-fuchs.com

2. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.

The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the device. The trained and qualified personnel must have read and understood the instruction manual.

Prior to using the product make yourself familiar with it. Read the instruction manual carefully.

3. Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location.

For mining applications, observe laws, standards, and directives applicable to the operating location.

The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable supplement this document. You can find this information under www.pepperl-fuchs.com.

For specific device information such as the year of construction, scan the QR code on the device. As an alternative, enter the serial number in the serial number search at www.pepperl-fuchs.com.

If you use the device in safety-related applications, observe the requirements for functional safety. You can find these requirements in the functional safety documentation under www.pepperl-fuchs.com.

4. Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

The device is used in control and instrumentation technology (C&I technology) for the galvanic isolation of signals such as 20 mA and 10 V standard signals or alternatively for adapting or standardizing signals. The device has intrinsically safe circuits that are used for operating intrinsically safe field devices in hazardous areas.

The device transfers digital signals (NAMUR sensors/mechanical contacts) from the explosion-hazardous area to the non-explosion-hazardous area.

Use the device only within the specified ambient and operating conditions. Only use the device stationary.

The device is an associated apparatus according to IEC/EN 60079-11.

The device is an electrical apparatus for hazardous areas of Zone 2.

If you use the device in safety-related applications, observe the information for safety function and safe state.

5. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

6. Mounting and Installation

Do not mount a damaged or polluted device.

The device is designed for mounting on a 35 mm DIN mounting rail according to EN 60715.

Mount the device in a way that the device is protected against mechanical hazard. Mount the device in a surrounding enclosure for example.

Do not mount the device in the dust hazardous area.

The device fulfills a degree of protection IP20 according to IEC/EN 60529.

The device must be installed and operated only in a controlled environment that ensures a pollution degree 2 (or better) according to IEC/EN 60664-1.

If used in areas with higher pollution degree, the device needs to be protected accordingly.

The device must be installed and operated only in an environment of overvoltage category II (or better) according to IEC/EN 60664-1.

Only connect supplies that provide protection against electric shock to power feed modules (e. g. SELV or PELV).

Observe the installation instructions according to IEC/EN 60079-14.

If you are using the Power Rail, supply the Power Rail only via the corresponding power feed modules or power supplies. Do not supply the Power Rail via isolators.

If you install the device in safety-related applications, observe the requirements for functional safety.

Requirements for Cables and Connection Lines

Observe the permissible core cross section of the conductor.

When using stranded conductors, crimp wire end ferrules on the conductor ends.

Use only one conductor per terminal.

When installing the conductors the insulation must reach up to the terminal.

Observe the tightening torque of the terminal screws.

Requirements for Usage as Associated Apparatus

If circuits with type of protection Ex i are operated with non-intrinsically safe circuits, they must no longer be used as circuits with type of protection Ex i.

Keep the separation distances between all non-intrinsically safe circuits and intrinsically safe circuits according to IEC/EN 60079-14.

Observe the compliance of the separation distances between two adjacent intrinsically safe circuits according to IEC/EN 60079-14.

Observe the respective peak values of the field device and the associated apparatus with regard to explosion protection when connecting intrinsically safe field devices with intrinsically safe circuits of associated apparatus (verification of intrinsic safety). Also observe IEC/EN 60079-14 and IEC/EN 60079-25.

If more channels of one device are connected in parallel, ensure the parallel connection is made directly at the terminals of the device. When verifying the intrinsic safety, observe the maximum values for the parallel connection.

Requirements for Equipment Protection Level Gc

The device must be installed and operated only in surrounding enclosures that

- comply with the requirements for surrounding enclosures according to IEC/EN 60079-0,
- are rated with the degree of protection IP54 according to IEC/EN 60529.

Connection or disconnection of energized non-intrinsically safe circuits is only permitted in the absence of a potentially explosive atmosphere.

7. Operation, Maintenance, Repair

If you operate the device in safety-related applications, observe the requirements for functional safety. In case of operating in low demand mode, plan appropriate intervals for the proof test.

Do not use a damaged or polluted device.

Do not repair, modify, or manipulate the device.

If there is a defect, always replace the device with an original device.

Requirements for Equipment Protection Level Gc

Connection or disconnection of energized non-intrinsically safe circuits is only permitted in the absence of a potentially explosive atmosphere.

Only use operating elements in the absence of a potentially explosive atmosphere.

8. Delivery, Transport, Disposal


Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

The device, built-in components, packaging, and any batteries contained within must be disposed in compliance with the applicable laws and guidelines of the respective country.

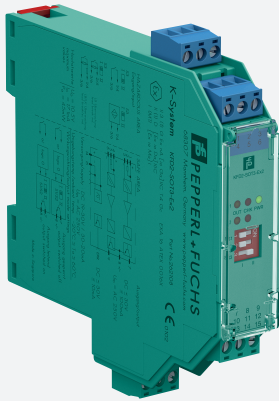

Switch Amplifier KFD2-SOT3-Ex2

- 2-channel isolated barrier
- 24 V DC supply (Power Rail)
- Dry contact or NAMUR inputs
- 2 passive transistor outputs
- Reversible mode of operation
- Line fault detection (LFD)
- Up to SIL 2 (SC 3) acc. to IEC/EN 61508




SIL 2



Function

This isolated barrier is used for intrinsic safety applications.
The device transfers digital signals (NAMUR sensors or dry contacts) from a hazardous area to a safe area.
Each input controls a passive transistor output.
Via switches the mode of operation can be reversed and the line fault detection can be switched off.
A fault is signaled by LEDs acc. to NAMUR NE44 and a separate collective error message output.

Connection

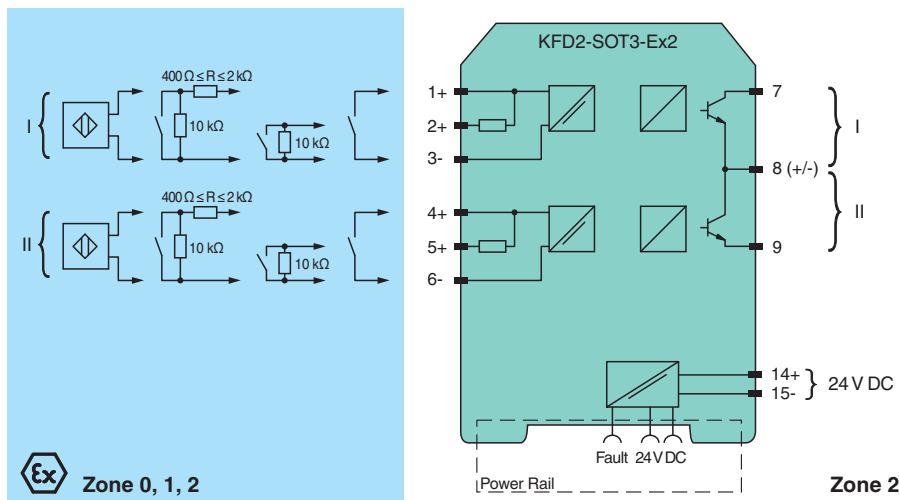

Technical Data

General specifications

Signal type Digital Input

Functional safety related parameters

Safety Integrity Level (SIL) SIL 2
Systematic capability (SC) SC 3

Supply

Connection Power Rail or terminals 14+, 15-
Rated voltage U_r 19 ... 30 V DC
Ripple $\leq 10\%$
Rated current I_r 30 ... 20 mA
Power dissipation ≤ 1.1 W including maximum power dissipation in the output

Technical Data

Input

Connection side		field side
Connection		terminals 1+, 2+, 3-; 4+, 5+, 6-
Rated values		acc. to EN 60947-5-6 (NAMUR), see manual for electrical data
Open circuit voltage/short-circuit current		approx. 10 V DC / approx. 8 mA
Switching point/switching hysteresis		1.2 ... 2.1 mA / approx. 0.2 mA
Line fault detection		breakage $I \leq 0.1$ mA , short-circuit $I \geq 6.5$ mA
Pulse/Pause ratio		min. 100 μ s / min. 100 μ s

Output

Connection side		control side
Connection		output I: terminals 7, 8 ; output II: terminals 8, 9
Rated voltage	U_r	30 V DC
Rated current	I_r	100 mA , short-circuit protected
Response time		≤ 200 μ s
Signal level		1-signal: (external voltage) - 3 V max. for 100 mA 0-signal: blocked output (off-state current ≤ 10 μ A)
Output I		signal ; Transistor
Output II		signal ; Transistor
Collective error message		Power Rail

Transfer characteristics

Switching frequency		≤ 5 kHz
---------------------	--	--------------

Galvanic isolation

Input/Output		reinforced insulation according to IEC/EN 61010-1, rated insulation voltage 300 V _{eff}
Input/power supply		reinforced insulation according to IEC/EN 61010-1, rated insulation voltage 300 V _{eff}
Output/power supply		basic insulation according to IEC/EN 61010-1, rated insulation voltage 300 V _{eff}

Indicators/settings

Display elements		LEDs
Control elements		DIP switch
Configuration		via DIP switches
Labeling		space for labeling at the front

Directive conformity

Electromagnetic compatibility		
Directive 2014/30/EU		EN 61326-1:2013 (industrial locations)

Conformity

Electromagnetic compatibility		NE 21:2012 , EN 61326-3-2:2008
Degree of protection		IEC 60529:2001
Input		EN 60947-5-6:2000

Ambient conditions

Ambient temperature		-20 ... 60 °C (-4 ... 140 °F)
---------------------	--	-------------------------------

Mechanical specifications

Degree of protection		IP20
Connection		screw terminals
Mass		approx. 150 g
Dimensions		20 x 119 x 115 mm (0.8 x 4.7 x 4.5 inch) (W x H x D) , housing type B2
Mounting		on 35 mm DIN mounting rail acc. to EN 60715:2001


Data for application in connection with hazardous areas

EU-type examination certificate		EXA 16 ATEX 0016 X
Marking		Ⓔ II 3(1)G Ex nA [ia Ga] IIC T4 Gc Ⓔ II (1)D [Ex ia Da] IIIC Ⓔ I (M1) [Ex ia Ma] I
Input		Ex ia
Voltage	U_o	10.5 V
Current	I_o	17.1 mA
Power	P_o	45 mW (linear characteristic)

Technical Data

Supply		
Maximum safe voltage	U _m	253 V AC (Attention! U _m is no rated voltage.)
Output		
Maximum safe voltage	U _m	253 V AC (Attention! The rated voltage can be lower.)
Galvanic isolation		
Input/Output		safe electrical isolation acc. to IEC/EN 60079-11, voltage peak value 375 V
Input/power supply		safe electrical isolation acc. to IEC/EN 60079-11, voltage peak value 375 V
Directive conformity		
Directive 2014/34/EU		EN IEC 60079-0:2018+AC:2020 , EN 60079-11:2012 , EN 60079-15:2010
International approvals		
UL approval		E106378
Control drawing		116-0424 (cULus)
IECEX approval		
IECEX certificate		IECEX EXA 16.0009X
IECEX marking		Ex nA [ia Ga] IIC T4 Gc , [Ex ia Da] IIIC , [Ex ia Ma] I
General information		
Supplementary information		Observe the certificates, declarations of conformity, instruction manuals, and manuals where applicable. For information see www.pepperl-fuchs.com .




Assembly

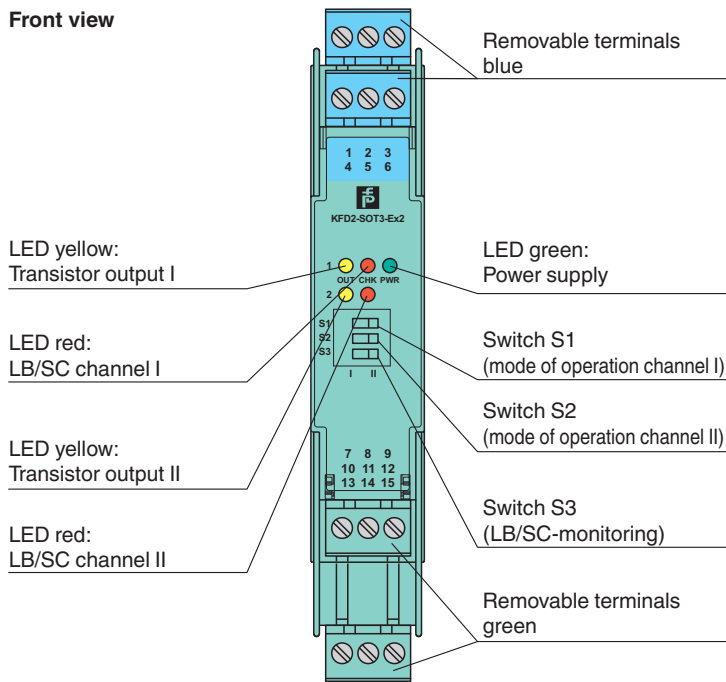





Matching System Components

	KFD2-EB2	Power Feed Module
	UPR-03	Universal Power Rail with end caps and cover, 3 conductors, length: 2 m
	UPR-03-M	Universal Power Rail with end caps and cover, 3 conductors, length: 1,6 m


Matching System Components

	UPR-03-S	Universal Power Rail with end caps and cover, 3 conductors, length: 0.8 m
	K-DUCT-BU	Profile rail, wiring comb field side, blue
	K-DUCT-BU-UPR-03	Profile rail with UPR-03- * insert, 3 conductors, wiring comb field side, blue

Accessories

	F-NR3-Ex1	NAMUR Resistor Network
	KF-ST-5GN	Terminal block for KF modules, 3-pin screw terminal, green
	KF-ST-5BU	Terminal block for KF modules, 3-pin screw terminal, blue
	KF-CP	Red coding pins, packaging unit: 20 x 6

Configuration

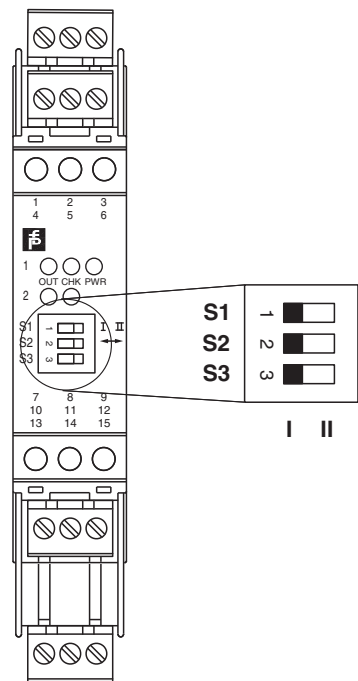

Switch position

S	Function		Position
1	Mode of operation output I active	with high input current	I
		with low input current	II
2	Mode of operation output II active	with high input current	I
		with low input current	II
3	Line fault detection	ON	I
		OFF	II

Operating states

Control circuit	Input signal
Initiator high impedance/contact opened	low input current
Initiator low impedance/contact closed	high input current
Lead breakage, lead short circuit	Line fault

Factory setting: switch 1, 2 and 3 in position I

Release date: 2023-01-03 Date of issue: 2023-01-03 Filename: 262108_eng.pdf

EU-Konformitätserklärung

Pepperl+Fuchs SE
Lilienthalstraße 200
68307 Mannheim
Germany
Phone +49 621 776-0
Fax +49 621 776-1000

No. / Nr.: DOC-2637A
Date / Datum: 2021-02-10

Copyright Pepperl+Fuchs
www.pepperl-fuchs.com



Declaration of conformity / Konformitätserklärung

We, Pepperl+Fuchs SE declare under our sole responsibility that the **products** listed below are in conformity with the listed **European Directives** and **standards**.

Die Pepperl+Fuchs SE erklärt hiermit in alleiniger Verantwortung, dass die unten gelisteten **Produkte** den genannten **Europäischen Richtlinien** und **Normen** entsprechen.

Products / Produkte

Product / Produkt	Item number	Description / Beschreibung
KFD2-SOT3-EX1.LB	262106	Switch amplifier
KFD2-SOT3-EX1.LB.IO	264211	Switch amplifier
KFD2-SOT3-EX2	262108	Switch amplifier
KFD2-SOT3-EX2.IO	264212	Switch amplifier
KFD2-SOT3-EX2.IO-Y1	264348	Switch amplifier

Directives and Standards / Richtlinien und Normen

EU-Directive EU-Richtlinie	Standards Normen
ATEX 2014/34/EU (L96/309-356)	EN 60079-11:2012-01 EN 60079-15:2010-05 EN IEC 60079-0/AC:2020-02 EN IEC 60079-0:2018-07
EMC 2014/30/EU (L96/79-106)	EN 61326-1:2013-01
RoHS 2011/65/EU (L174/88-110)	EN IEC 63000:2018-12

Affixed CE Marking / Angebrachte CE-Kennzeichnung



Signatures / Unterschriften

Mannheim, 2021-02-10

ppa. Michael Kessler

Executive Vice President Components & Technology

i.V. Udo Körner

Continuation Manager Value Engineering

ANNEX EMC

The products listed above fulfill the immunity test requirements for equipment intended for use in industrial locations.

Die oben gelisteten Produkte erfüllen die Störfestigkeits-Prüfanforderungen an Betriebsmittel, die zum Gebrauch in industriellen Bereichen vorgesehen sind.

ANNEX ATEX

Notified Body QM-System / Notifizierte Stelle des QM-Systems

Physikalisch Technische Bundesanstalt (0102)

Bundesallee 100

38116 Braunschweig

Germany

Marking and Certificates / Kennzeichnung und Zertifikate

Marking Kennzeichnung	Certificate Zertifikat	Issuer ID Aussteller ID
I (M1) II (1) D II 3 (1) G	EXA 16 ATEX 0016 X	2829

Key for Issuer ID / Schlüssel zur Aussteller ID

ID	Issuer / Aussteller
2829	Fiditas d.o.o. Karlovačka cesta 197 10250 Zagreb-Lučko Croatia

Pepperl+Fuchs SE declares that the products are only affected by minor or formal changes with respect to the new edition of the standards. These changes are not relevant for compliance with the essential health and safety requirements. The products still comply with the ATEX Directive. This declaration is also valid if the marking and the certificates of the listed devices correspond to previous editions of standards.

Die Pepperl+Fuchs SE erklärt hiermit, dass die Produkte nur von kleineren oder formalen Änderungen in Bezug auf die neue Ausgabe der Normen betroffen sind. Diese Änderungen sind nicht relevant für die Konformität mit den wesentlichen Gesundheits- und Sicherheitsanforderungen. Die Produkte erfüllen nach wie vor die ATEX-Richtlinie. Diese Erklärung gilt auch, wenn die Kennzeichnung und die Zertifikate der aufgeführten Geräte vorangegangenen Normenständen entsprechen.

Pepperl+Fuchs SE • 68307 Mannheim • Germany

Customer: DE164472
J.M. Voith SE & Co. KG | VTA

Mannheim, November 24, 2023

We, Pepperl+Fuchs SE at 68307 Mannheim hereby declare that the listed product/s have been produced conform to the Regulation (EC) No 1907/2006 (REACH). Used SVHC according Article 33 of the regulation are noted.

Manufacturer Declaration

Item/s		
Item Number	Item Description	Your Item No
SCIP No.		
SVHC		
262108	KFD2-SOT3-EX2	
669ec995-b42b-42c9-9cbb-a45b1e9c858a		
-Hexahydromethylphthalic anhydride including cis- and trans stereo isomeric forms and all possible combinations of the isomers EC 247-094-1, CAS 25550-51-0, EC 243-072-0, CAS 19438-60-9, EC 256-356-4, CAS 48122-14-1, EC 260-566-1, CAS 57110-29-9		
-Diboron trioxide, EC 215-125-8 CAS 1303-86-2		
-4,4'-isopropylidenediphenol (Bisphenol A), EC 201-245-8, CAS 80-05-7		
-Lead (Pb) EC 231-100-4, CAS 7439-92-1		

This document is generated automatically and valid without signature. The document represents the present status of knowledge.

Department Global Compliance
24.11.2023 Mannheim

Voith Group
St. Pöltener Str. 43
89522 Heidenheim, GERMANY

Telefon: + 49 7951 32 1666
E-Mail: Industry.Service@voith.com
Internet: www.voith.com/fluid-couplings

VOITH