

Installation and Operating Manual

(Translation of the original installation and operating manual)

BTS

Non-contacting Thermal Switch Unit

Version 12, 2021-06-15

3626-011500 en, Protection Class 0: public

Contact

Voith Group
St. Pöltener Str. 43
89522 Heidenheim, GERMANY

Telefon: + 49 7951 32 1666
E-Mail: Industry.Service@voith.com
Internet: www.voith.com/fluid-couplings

If you have questions regarding the product, please contact the Voith Service stating the serial number (see nameplate).

3626-011500 en

This document describes the state of design of the product at the time of the editorial deadline on 2021-06-15.

Copyright © by
J.M. Voith SE & Co. KG

This document is protected by copyright. It must not be translated, duplicated (mechanically or electronically) in whole or in part, nor passed on to third parties without the publisher's written approval.

Contents

1	Possible Applications, BTS Characteristics	5
2	BTS Functioning	6
2.1	Switching element	7
2.2	Initiator	7
2.3	Evaluator	7
2.4	Isolating switch amplifier	7
2.5	Interaction of BTS components	8
3	Technical data	9
3.1	Switching element	9
3.2	Initiator, mounting flange	10
3.3	Evaluator and isolating switch amplifier	10
3.3.1	Evaluator	10
3.3.2	Isolating switch amplifier 230 V AC	10
3.3.3	Isolating switch amplifier 20...30 V DC	10
4	User Information	11
5	Safety	13
5.1	Safety information	13
5.1.1	Structure of safety information	13
5.1.2	Definition of safety symbols	14
5.2	Intended use	14
5.3	Unintended use	14
5.4	General information as to dangerous situations	14
5.5	Remaining risks	18
5.6	What to do in case of accidents	18
5.7	Information with regard to operation	18
5.8	Qualification of staff	19
5.9	Product monitoring	19

6	Installation	20
6.1	As delivered condition	20
6.2	Scope of supply	20
6.3	Mounting - switching element and initiator	21
6.4	Mounting, connection - evaluator, isolating switch amplifier	26
7	Display and Setting of Evaluator	29
7.1	Display - evaluator	29
7.2	Setting - evaluator	30
8	Commissioning	31
9	Maintenance, Servicing	32
9.1	Outside cleaning	34
10	Disposal	35
11	Malfunctions - Remedial Actions, Troubleshooting	36
12	Queries, Orders Placed for Field Service Engineers and Spare Parts	39
13	Spare Parts Information	40
13.1	Switching elements	40
13.2	Initiator, mounting flange	41
13.3	Evaluator	41
13.4	Isolating switch amplifier	41
14	Annex	42
14.1	Initiator NJ10-22-N-E93-Y245590 (2 m)	42
14.2	Initiator NJ10-22-N-E93-Y246868 (5 m)	43
14.3	Initiator NJ10-22-N-E93-Y246869 (10 m)	44
14.4	Initiator NJ10-22-N-E93-Y245590 (2 m, new dust-Ex-marking)	45
14.5	Initiator NJ10-22-N-E93-Y246868 (5 m, new dust-Ex-marking)	46
14.6	Initiator NJ10-22-N-E93-Y246869 (10 m, new dust-Ex-marking)	47
14.7	Evaluator KFU8-DW-1.D-Y209869	48
14.8	Isolating switch amplifier KFD2-SOT2-Ex2	49
14.9	Isolating switch amplifier KFA6-SOT2-Ex2	50

1 Possible Applications, BTS Characteristics

The non-contacting thermal switch unit (BTS) is a monitoring system for Voith turbo couplings.

- The BTS provides easy monitoring of the turbo coupling temperature.
- **In case of excess temperature, dependent on the application,**
 - **the operator can be warned,**
 - **the drive motor shutdown can be initiated,**
 - **the load on the driven machine can be reduced.**
- If excess temperature is identified in time, the discharge or loss of coupling filling through the fusible plugs can be avoided.
Downtimes are reduced.
- After the turbo coupling has cooled down, the BTS resets automatically.
- The BTS can be used for Voith turbo couplings from **size 206**.



WARNING

Explosion hazard

If no isolating switch amplifier is used, there is the hazard of explosion.

- As the control circuit of the evaluator is **not** intrinsically safe, provide an appropriate isolating switch amplifier between evaluator and initiator!
- The BTS must not be used as safety device to limit the maximum permissible surface temperature of the turbo coupling in potentially explosive atmospheres!



2 BTS Functioning

The non-contacting thermal switch unit (BTS) consists of three components:

- **Switching element**
- **Initiator** with mounting flange
- **Evaluator**

Optionally, if an intrinsically safe control circuit is required:

- **Isolating switch amplifier**, two-channel for up to 2 initiators

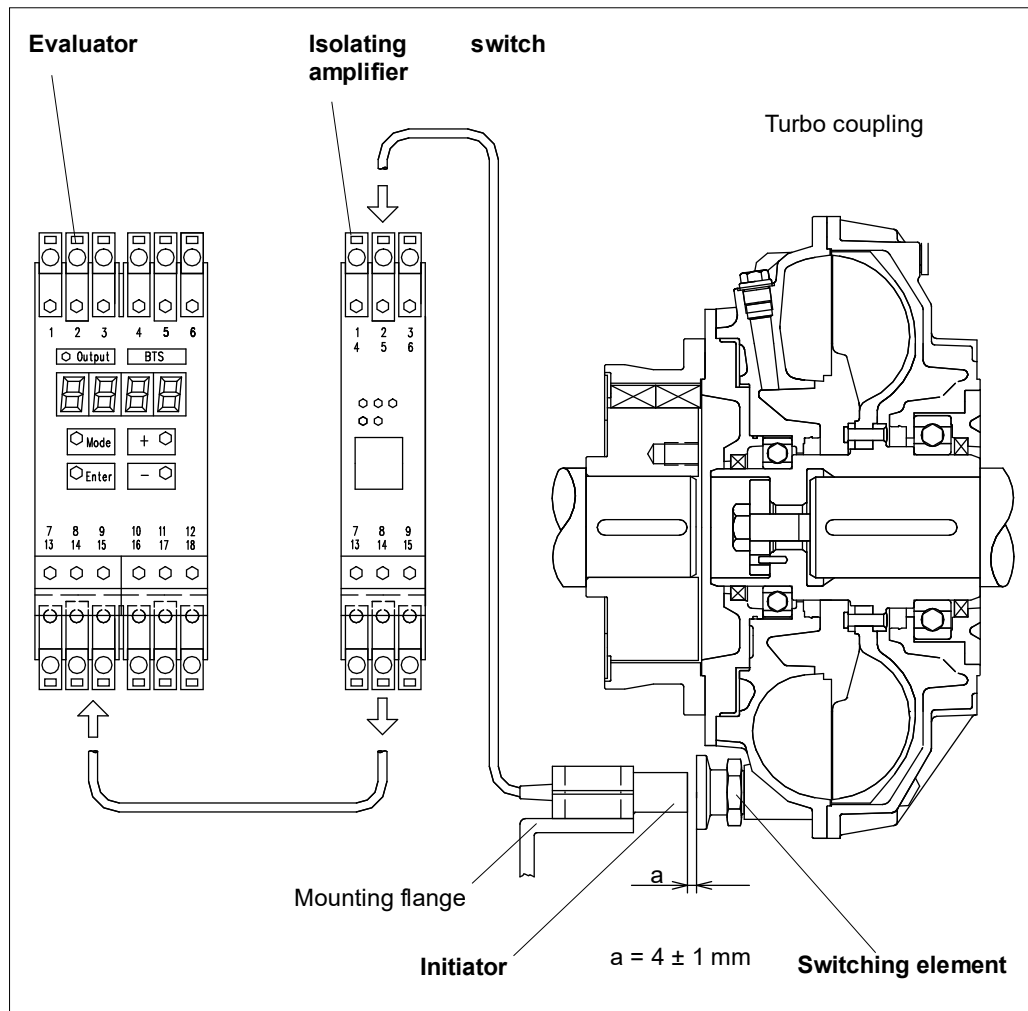


Fig. 1

2.1 Switching element

The switching element is a passive component (ordinary electrical equipment). It is inserted into the outer wheel or into the turbo coupling shell. The result is a thermal contact between the switching element and the turbo coupling with the operating fluid. A coil and a thermostatic switch are integrated in the switching element. The switching point of the thermostatic switch corresponds to the response temperature of the switching element.

Below the nominal response temperature, the thermostatic switch is closed and bridges the coil. Above the nominal response temperature, the thermostatic switch opens and interrupts the circuit. When the temperature decreases, the thermostatic switch connects again the circuit. The BTS is again ready for service (it resets automatically).

Nominal response temperature
→ Chapter 3.1

2.2 Initiator

The initiator has been designed as polarized two-wire sensor. It works to the inductive sensor principle.

An electric oscillator is integrated in the initiator which produces a high-frequency oscillation. The oscillator has an oscillating circuit as element determining the frequency, comprising a coil and a capacitor.

The oscillating circuit coil is located in the sensor head. An electromagnetic alternating field leaves the sensor head via this coil.

2.3 Evaluator

The evaluator is an electronic unit recording the electric pulses and evaluating the period between the pulses.

The evaluation starts either by switching on the supply voltage or by an external trigger signal.

After starting the evaluation, monitoring of pulses must be interrupted for an adjustable period of time (start-up bypass time).

A relay with changeover contact will be released if the number of pulses per unit of time drops below a certain value.

2.4 Isolating switch amplifier

The isolating switch amplifier transmits digital signals from the potentially explosive area.

Sensors or mechanical contacts may work as transducing sensor.

The intrinsically safe inputs are safely isolated from the output and power system.

2.5 Interaction of BTS components

Installation, position
→ Chapter 2

Instead of a blind screw, the switching element is screwed into the turbo coupling. The initiator with mounting flange is mounted parallel with the turbo coupling axis and is connected to the evaluator.

The coil inside the switching element is coupled inductively with the coil inside the initiator if the switching element is located in front of the initiator head. When the thermostatic switch is closed, energy is transmitted from the initiator to the switching element. The oscillator is attenuated and has a lower current consumption.

If the coupling temperature exceeds the response temperature of switching element, the thermostatic switch will interrupt the circuit in the switching element. The switching element can no longer attenuate the oscillator in the initiator.

The evaluator recognizes the attenuation of initiator due to the initiator current consumption.

If the turbo coupling with screwed in switching element rotates, then the switching element will permanently pass the initiator, thus permanently creating attenuation pulses. Thus, permanently attenuation pulses are generated. The output relay in the evaluator is energized.

Cutoff frequency
→ Chapter 3.3.1

In case of excess temperature, these attenuation pulses are not given, i.e. the cutoff frequency set on the evaluator is not reached. The evaluator recognizes the missing pulses, the output relay is de-energized.

On startup of the turbo coupling, a start-up bypass time is set at the evaluator. As long as the start-up bypass is active, the output relay remains energized. After this set time, the speed of the turbo coupling with the switching element must have exceeded the set cutoff frequency.

Maximum allowable temperature
→ Operating manual of turbo coupling



WARNING

Risk of personal injuries and damage to property

Following the shutdown, the control system has to be locked in a way that prevents automatic re-start.

- Switch off the unit in which the turbo coupling is installed and secure the switch against inadvertent switch-on.
- For all work performed on the turbo coupling and BTS ensure that both the drive motor and the driven machine have stopped running and that unintended starting is absolutely impossible!
- The coupling may only be restarted if the turbo coupling temperature is below the maximum permissible temperature allowed when switching on the motor!

3 Technical data

3.1 Switching element

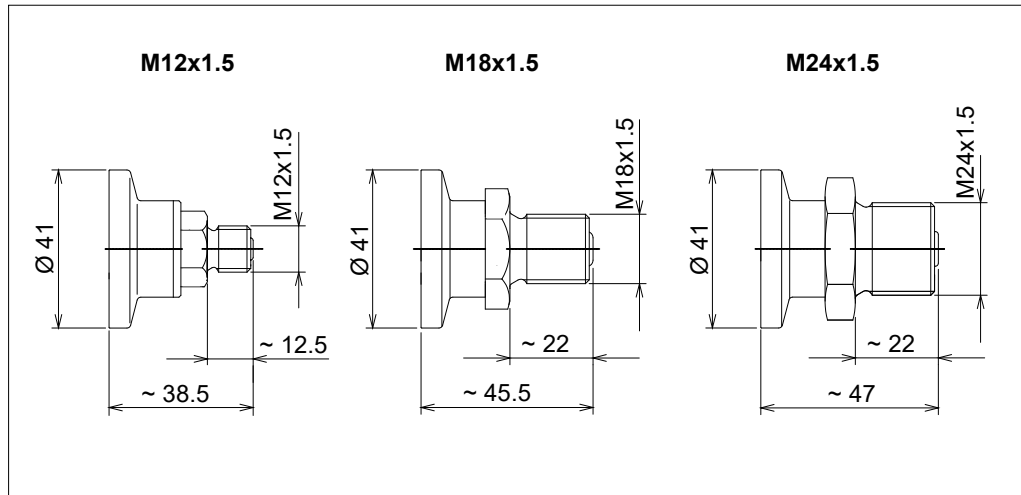


Fig. 2

The following switching elements are available for the different turbo coupling sizes:

Dimension of thread	M12x1.5	M18x1.5	M24x1.5
Nominal response temperature	125 °C	85 / 90 / 100 / 110 / 125 / 140 / 160 / 180 °C	85 / 125 / 140 / 160 / 180 °C
suitable for coupling size	206 – 274	366 – 650	750 – 1330
Response tolerance	± 5 °C		
Trip temperature	approx. 40 K below the response temperature		
Width across flats	17	27	32
Tightening torque	22 Nm	60 Nm	144 Nm
Classification is Ex II 2GD	Ui = 10 V	li = 50 mA	Pi = 50 mW
Service temperature in the coil area	-40 °C to +120 °C		
Service temperature in the area of the thermostatic switch	to 90 °C (T5), to 125 °C (T4), to 190 °C (T3)		

Table 1

SAFETY INFORMATION

- The type of switching element is stamped in on the housing indicating:
 - Voith
 - Nominal response temperature
 - Ex marking Ex II Ex i X
 - Serial number (example: Voith 140 °C Ex II Ex i X 1234 5678)
- The nominal response temperature of the switching element is determined in connection with the the coupling design.



3.2 Initiator, mounting flange

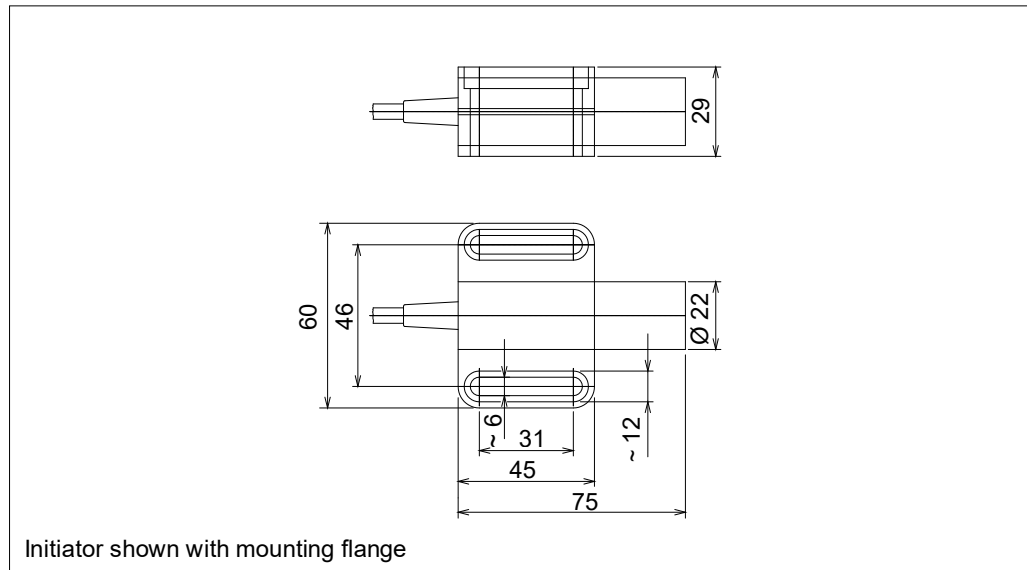


Fig. 3

- Annex Type: NJ 10-22-N-E93-Y245590 (2 m)
- NJ 10-22-N-E93-Y246868 (5 m)
- NJ 10-22-N-E93-Y246869 (10 m)
- NJ 10-22-N-E93-Y245590 (2 m, new dust-Ex-marking)
- NJ 10-22-N-E93-Y246868 (5 m, new dust-Ex-marking)
- NJ 10-22-N-E93-Y246869 (10 m, new dust-Ex-marking)

3.3 Evaluator and isolating switch amplifier

3.3.1 Evaluator

- Annex Type: KFU8-DW-1.D-Y209869

3.3.2 Isolating switch amplifier 230 V AC

- Annex Type: KFA6-SOT2-Ex2

3.3.3 Isolating switch amplifier 20...30 V DC

- Annex Type: KFD2-SOT2-Ex2

4 User Information

This manual will support you in using the non-contacting thermal switch unit (**BTS**) in a safe, proper and economical way.

If you observe the information contained in this manual, you will

- increase the reliability and lifetime of the unit,
- avoid any risks
- reduce repairs and downtimes.

This manual must

- always be available at the BTS place of use,
- be read and used by every person who works on the unit or commissions the same.

You will find further documents which have to be regarded at any rate, in the annex.

The non-contacting thermal switch unit has been manufactured to the latest design standard and approved safety regulations. Nevertheless, the user's or third party's life may be endangered or the unit or other property impaired in case of improper handling or unintended use.

Spare parts:

Spare parts must comply with the technical requirements stipulated by Voith. This is ensured by using original spare parts.

Installation and/or use of non-original spare parts may negatively change the mechanical properties of the **BTS** and may thus impair safety.

Voith is not liable for any damages resulting from the use of non-original spare parts.

Use only appropriate workshop equipment for maintenance. Professional maintenance and/or repair can only be guaranteed by the manufacturer or an authorized specialist workshop.

This manual has been issued with utmost care. However, should you need any further information, please contact:

Voith Group
St. Pöltener Str. 43
89522 Heidenheim, GERMANY

Telefon: + 49 7951 32 1666
E-Mail: Industry.Service@voith.com
Internet: www.voith.com/fluid-couplings

© Voith 2021.

Distribution as well as the reproduction of this document and the utilization and communication of its contents are prohibited unless expressly permitted. Offenders will be held liable for the payment of damages. All rights reserved in case a patent is granted, or a utility model or design is registered.


Voith reserves the right for modifications.

5 Safety

5.1 Safety information

Safety information indicating the descriptions and symbols as described in the following are used in the operating manual.

5.1.1 Structure of safety information

 DANGER WORD
<p>Results of a hazardous situation</p> <p>Source of hazard</p> <ul style="list-style-type: none"> • Warding off of danger

Danger word

The danger word divides the severity of the danger in several levels:




Danger word	Severity of danger
 DANGER	Death or serious injury (irreversible personal injury)
 WARNING	Death or serious injury possible
 CAUTION	Minor or moderate injury possible
NOTICE	Possibly damage to property of - the product - its environment
SAFETY INFORMATION	General applications details, useful information, safe job procedure and proper safety measures

Table 2

Results of a hazardous situation

Hazard consequences indicate the kind of hazard.

Source of hazard

The source of hazard indicates the cause of hazard.

Warding off of danger

Warding off of danger describes the measures to be taken to ward off a danger.

5.1.2 Definition of safety symbols


Symbol	Definition
	Explosion hazard Marking with the Ex-symbol indicates possible hazards which have to be observed for the use in potentially explosive atmospheres.

Table 3

5.2 Intended use

- The non-contacting thermal switch unit (**BTS**) serves for the non-contacting temperature monitoring of Voith turbo couplings and has been designed for industrial applications. Any use beyond that described herein, e.g. for operating or application conditions that have not been agreed upon, is deemed unintended.
- Intended use also includes observing this installation and operating manual.
- The manufacturer is **not** liable for any damages resulting from unintended use. The risk has to be borne solely by the user.

5.3 Unintended use


Design range
→ Operating manual
of turbo coupling

- Design range is not met.
- Any use beyond that described herein, e.g. for higher powers, higher speeds, or operating conditions that have not been agreed upon, is deemed unintended.
- Moreover, it is not permitted to use BTS non-contacting thermal switch units or spare parts from third parties.

5.4 General information as to dangerous situations

For all work performed on the non-contacting thermal switch unit, please observe the local regulations for the prevention of accidents as well as the regulations for installation of electrical equipment!



 **WARNING**

Explosion hazard

In case of non-compliance with the regulations or impermissible change, there is the risk of explosion.

- When using the non-contacting thermal switch unit in potentially explosive atmospheres, observe the local regulations applicable to electrical equipment in potentially explosive atmospheres! Changes on electrical equipment for potentially explosive atmospheres, including connecting lines, are not permitted.

Hazards while working on the non-contacting thermal switch unit:**DANGER****Electric shock**

On account of incorrectly mounted or incorrectly connected electrical components, and disconnected electric connections, persons could get an electric shock and be severely injured, possibly with fatal consequences.

Incorrectly mounted or incorrectly connected electrical components and disconnected electric connections may cause damages to the machinery.

- A qualified electrician has to properly carry out the connection to the electric supply network considering the system voltage and the maximum power consumption!
- The system voltage has to be in conformity with the system voltage indicated on the nameplate!
- There has to be a corresponding electrical protection by a fuse on the network side.

Electric shock:**DANGER****Electrostatic processes**

Electrostatic charging may injure persons by an electric shock.

- Allow only a qualified electrician to install the equipment into which the turbo coupling is installed.
- The unit and the electrical installation are provided with ground connections.

Working on the turbo coupling:

 **WARNING**

Risk of injury

While working on the turbo coupling, there is the risk of injury through cutting, crushing, burns and cold burns in case of minus degrees.

- Please observe the installation and operating manual of the turbo coupling!
- Never touch the turbo coupling without wearing protective gloves.
- Start to work on the turbo coupling only after it has cooled down.
- Ensure that there is sufficient light, a sufficiently large working space and good ventilation when working on the turbo coupling.
- Switch off the unit in which the turbo coupling is installed and secure the switch against inadvertent switch-on.
- For all work performed on the turbo coupling ensure that both the drive motor and the driven machine have stopped running and that unintended starting is absolutely impossible!

Noise:

Sound pressure level
→ cover sheet of operating manual of turbo coupling

 **WARNING**

Hearing loss, permanent impairment of hearing

The turbo coupling generates noise during operation. If the A-classified equivalent sound pressure level $L_{PA, 1m}$ exceeds 80 dB(A), this may cause impairment of hearing!

- Wear ear protection.

Operating fluid which sprays off or leaks out: **WARNING****Risk of losing sight due to operating fluid spraying off, risk of burning**

In case of thermal overload of the turbo coupling, the fusible plugs respond. Operating fluid leaks out through these fusible plugs.

This may happen only in case of unintended use.

- Persons close to the turbo coupling have to wear safety goggles.
- Please make sure that the spraying-off operating fluid cannot get in contact with persons.
- If the fusible plugs spray off, switch off the drive immediately.
- Electrical devices located near the turbo coupling need to be splash-guarded.

Unintended use
→ Chapter 5.3

 **WARNING****Fire hazard**

After the fusible plugs responded, spraying off oil may ignite on hot surfaces causing fire, as well as releasing toxic gases and vapor.

- Make sure that spraying off operating fluid cannot get into contact with hot machine parts, heaters, sparks or open flames.
- Immediately switch off the driving machine when the fusible plugs respond.
- Please pay attention to the information contained in the safety data sheets.

 **CAUTION****Danger of slipping**

Slipping hazard due to spraying off solder of fusible plugs and leaking out operating fluid.

- Please provide a catch pan of sufficient size.
- Immediately remove any leaking out solder and operating fluid.
- Please pay attention to the information contained in the safety data sheets.

5.5 Remaining risks



WARNING

Risk of personal injuries and damage to property

Unintended use or incorrect operation may cause death, serious injuries or minor injuries as well as damage to property and the environment.

- Only persons who are sufficiently qualified, trained and authorized are allowed to work on or with the turbo coupling and the non-contacting thermal switch unit.
- Please observe the warnings and safety information.

5.6 What to do in case of accidents

SAFETY INFORMATION

- In case of accidents, please observe the local regulations, the operating manuals and the operator's safety measures.

5.7 Information with regard to operation

SAFETY INFORMATION

- If irregularities are found during operation, immediately switch off the drive unit.

Monitoring devices:

NOTICE

Damage to property

Damage to turbo coupling due to monitoring devices not ready for service.

- Check whether existing monitoring devices are in a state ready for service.
- Repair any defective monitoring device immediately.
- Never bypass safety devices.

5.8 Qualification of staff

Only qualified and authorized professional staff are allowed to perform work, such as transportation, storage, installation, electrical connection, commissioning, operation, maintenance, servicing and repair.

Qualified professional staff in the sense of this installation and operating manual are persons who are familiar with transportation, storage, installation, electrical connection, commissioning, maintenance, service and repair, and who have the necessary qualifications for their job. Qualification has to be ensured by performing training and giving instructions.

This staff must be trained, instructed and authorized to:

- operate and service machines in a professional manner in accordance with the technical safety standards.
- use lifting appliances, slings (ropes, chains, etc.) and lifting points in a professional manner.
- properly dispose of media and their components, e.g. lubricating grease.
- service and use safety devices in a manner that ensures compliance with safety standards.
- prevent accidents and provide first aid.

Staff to be trained may only perform work on the turbo coupling and the non-contacting thermal switch unit under the supervision of a qualified and authorized person.

The staff in charge of any work to be done on the non-contacting thermal switch unit must

- be reliable,
- have the legal age,
- be trained, instructed and authorized with regard to the intended work,
- observe **EN 1127-1 Annex A** and **EN 1127-1 Section 7** if the unit is installed in potentially explosive atmospheres. Use only tools which are approved for use in potentially explosive atmospheres. Avoid formation of sparks.



5.9 Product monitoring

We are under legal obligation to keep the performance of our products under observation, even after shipment.

Therefore, please inform us about anything that might be of interest to us. For example:

- Change in operating data,
- experience gained with the machine,
- recurring problems,
- problems experienced with this installation and operating manual.

Our address:
→ Page 2

6 Installation



WARNING

Risk of injury

Please observe, in particular, → Chapter 5 (Safety) when working on the non-contacting thermal switch unit!

- Before beginning with the installation, ensure that an isolation of all components is guaranteed.
- The fusible plugs protect the turbo coupling against damage due to thermal overload.
Even when the BTS is used, it is not allowed to replace the fusible plugs by blind screws or by fusible plugs with different nominal response temperatures!
- Never operate the turbo coupling without fusible plugs!

6.1 As delivered condition

- Normally, the switching element with sealing ring,
 - the initiator with mounting flange and
 - the evaluator
- are supplied as loose parts together with the turbo coupling.

6.2 Scope of supply

Please contact Voith Turbo in case of a subsequent installation of the BTS for turbo coupling sizes 206 and 274!

Standard combinations of switching elements and fusible plugs:

Nominal response temperatures		
Switching element	Fusible plugs	Color coding
160 °C	180 °C	blue
140 °C	160 °C	green
125 °C	160 °C	green
110 °C	140 °C	red

Table 4

The correlation between switching element and fusible plug may vary dependent on the project design. Differing nominal response temperatures of the switching element (85°C, 90°C, 100°C, 110°C, 125°C, 140°C, 160°C and 180°C) are also available (→ Chapter 13).

Please consult Voith
→ order documents

6.3 Mounting - switching element and initiator

WARNING

Explosion hazard

Non-compliance with mounting instructions.

- To avoid any damages, switching element and initiator should be mounted after installation and prior to filling the turbo coupling.
- The switch unit and the connecting lines must not be damaged. Lay all lines protected against mechanical impact.
- It is not allowed to modify/change anything on equipment which is operated in potentially explosive atmospheres.
It is not possible to carry out repairs on such equipment.
- Avoid any impact effects on the initiator. Work on the machine may only be performed in non-hazardous atmospheres.
- In order to prevent electrostatic charging, lay the connecting lines in accordance with EN 60079-14 and ensure that chafing during operation is not possible.



- Replace the blind screw by the switching element with the sealing ring in the turbo coupling outer wheel (item 0300) or shell (item 0190) ¹⁾.

Arrangement of switching element on the outer wheel side ²⁾:

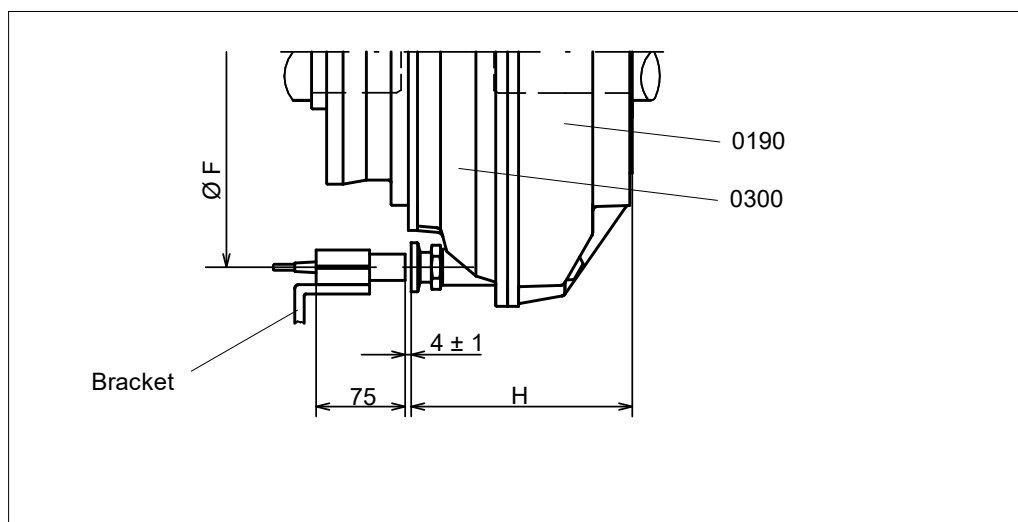


Fig. 4

- 1) Not for turbo couplings of type DT.
- 2) For turbo couplings of type DT, installation is also possible on the opposite outer wheel side.

Installation dimensions for switching element and initiator:

Turbo coupling type	Outer wheel side	
	Pitch circle diameter Ø F [mm]	Distance ~ H [mm]
206 T	196 ± 1	111.5
206 DT	196 ± 1	151.5
274 T	268 ± 1	152
274 DT	268 ± 1	190
366 T	350 ± 1	193
422 T	396 ± 1	206
487 T	470 ± 1	228
562 T	548 ± 1	248
650 T	630 ± 1	289
750 T	729 ± 1	318
866 T	840 ± 1	356
866 DT	840 ± 1	600
1000 T	972 ± 1	369
1000 DT	972 ± 1	672
1150 T	1128 ± 1	458
1150 DT	1128 ± 1	783
1330 DT	1302 ± 1	912

Table 5

Please see the assembly plan of the turbo couplings for installation dimensions of deviating arrangements.

Arrangement of switching element on the shell side (not for turbo coupling type DT and/or T...S):

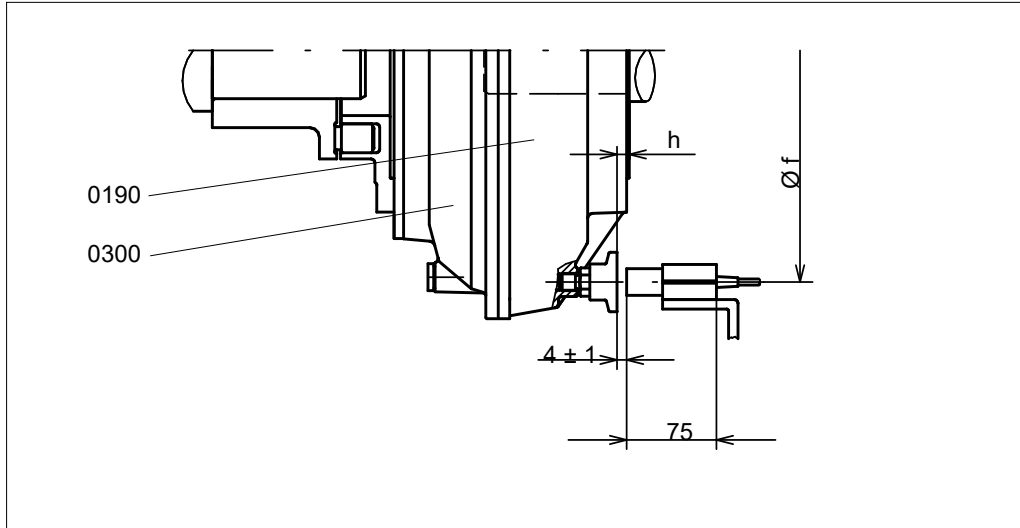


Fig. 5

Arrangement of switching element on the shell side (only for turbo coupling type T...S):

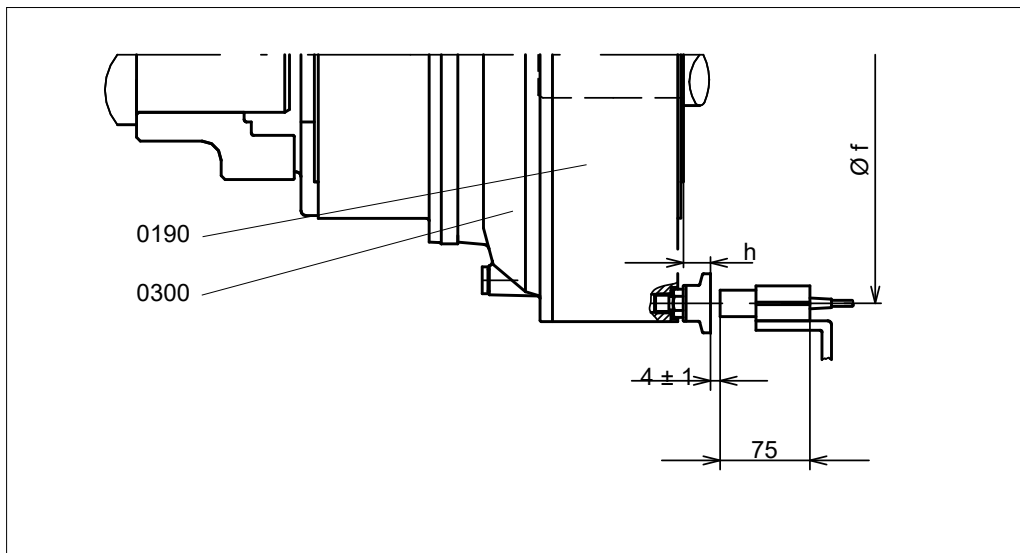


Fig. 6

Installation dimensions for switching element and initiator:

	Shell side			
	Not turbo coupling type DT and T...S:		Only turbo coupling type T...S:	
Turbo coupling type	Pitch circle diameter Ø f [mm]	Distance ~ h [mm]	Pitch circle diameter Ø f [mm]	Distance ~ h [mm]
206 T	200 ± 1	-16	–	–
274 T	264 ± 1	2.5	–	–
366 T	355 ± 1	16	–	–
422 T	398 ± 1	9	–	–
487 T	480 ± 1	29	–	–
562 T	556 ± 1	28.5	–	–
650 T	649 ± 1	51.5	–	–
750 T	742 ± 1	52.5	815 ± 1	25
866 T	862 ± 1	65	954 ± 1	25
1000 T	990 ± 1	54	1092 ± 1	25
1150 T	1140 ± 1	86	1250 ± 1	25

Table 6

Please see the assembly plan of the turbo coupling for installation dimensions of deviating arrangements.

NOTICE**Damage to property**

Non-compliance with mounting instructions.

- Ensure that the bracket is of sufficient stability (not included in Voith's scope of supply)!
- It is vital to avoid any vibrations as false signals might occur!
- Observe the metal-free area (15 mm) around the initiator head (→ schematic sketch below)!

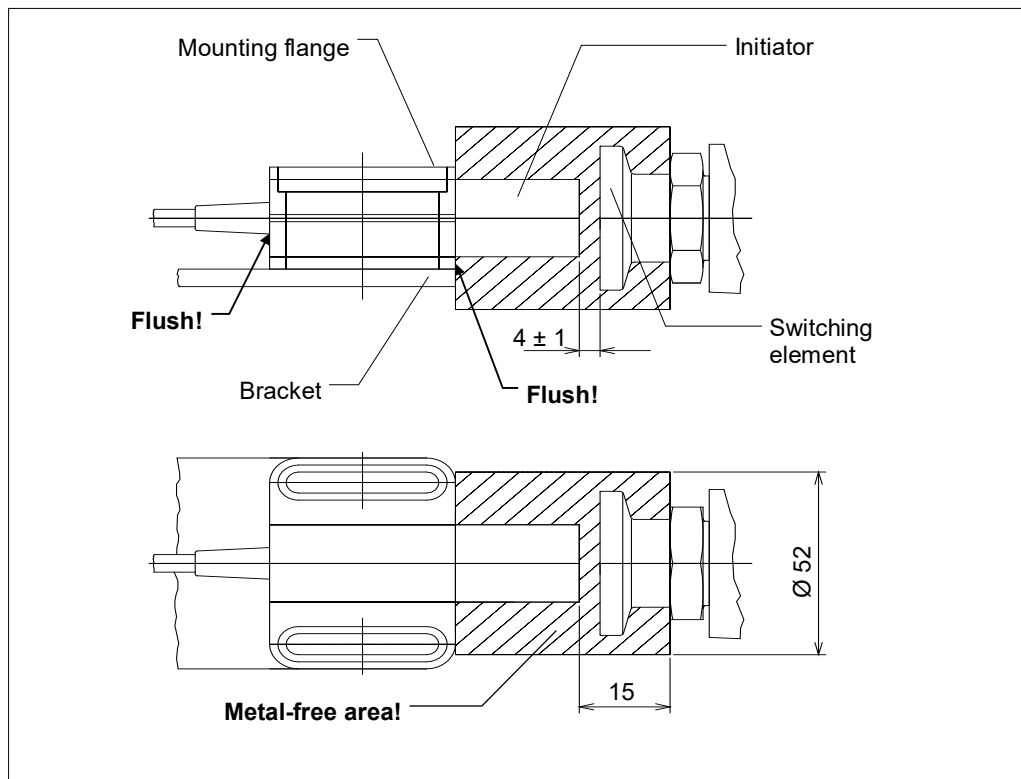


Fig. 7

- Mount the initiator with mounting flange on the pitch circle diameter of the switching element and on a bracket, in parallel with the turbo coupling axis.
- Mount the initiator end flush with the mounting flange. Mount the mounting flange front flush with the bracket.
- Set the distance between initiator head and switching element to 4 ± 1 mm!

6.4 Mounting, connection - evaluator, isolating switch amplifier

NOTICE

Damage to property

Damage to the system by electric components not connected properly and/or not complying with the mounting instructions.

- Wiring of the BTS is not included in Voith's scope of supply!
- In case of longer distances between initiator and evaluator, we recommend using a shielded cable for extension purposes.
- Total resistance of an extension cable between initiator and evaluator to be less than 100 Ω .

- Install the evaluator and, if necessary, the isolating switch amplifier into an appropriate cubicle and connect it/them in accordance with the wiring diagram.

Wiring diagram:

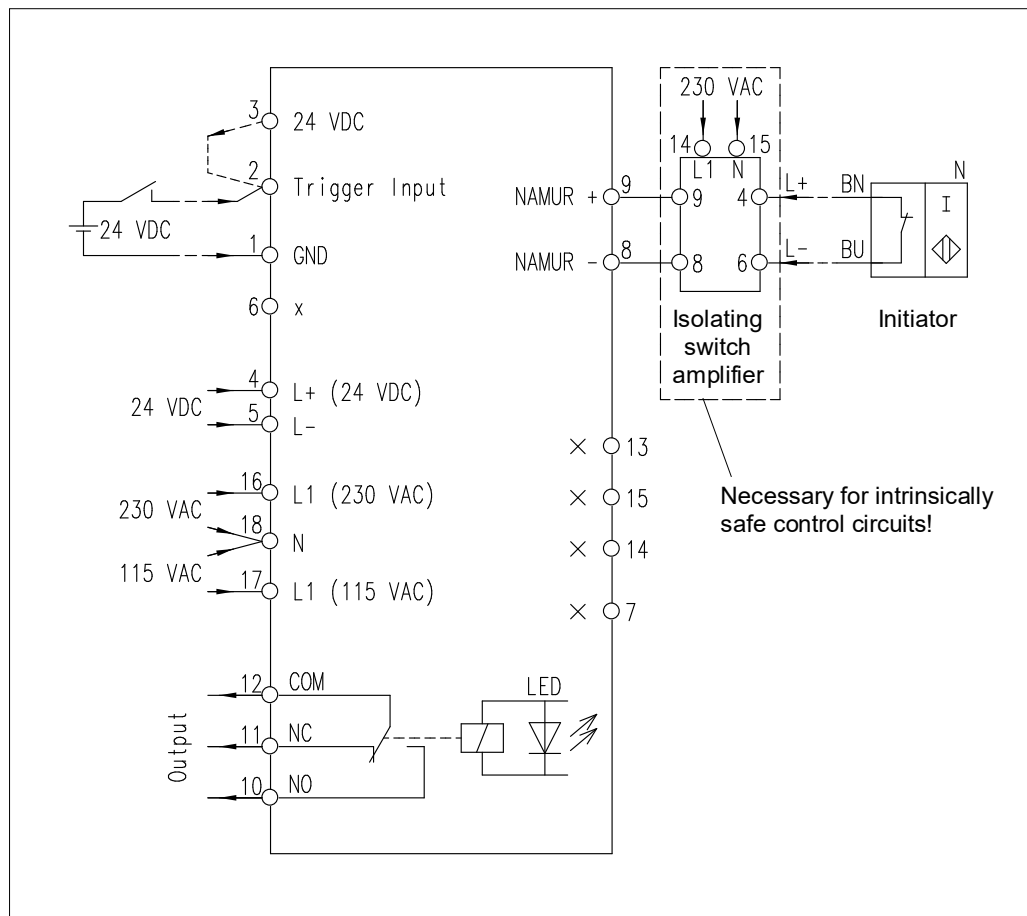


Fig. 8

Terminal assignment: Evaluator

Terminal No.	Description
1	GND for trigger input
2	Trigger input for start-up bypass, +24 V DC
3	Power supply for trigger input. When triggering by switching on the supply voltage, provide a bridge between terminals 3 and 2 (as delivered condition!).
4	Supply voltage, +24 V DC
5	Supply voltage, GND
6	Do not connect!
7	Do not connect!
8	NAMUR input, L-
9	NAMUR input, L+
10	Output relay, make contact, NO
11	Output relay, break contact, NC
12	Output relay, root, COM
13	Do not connect!
14	Do not connect!
15	Do not connect!
16	Supply voltage, 230 V AC, L1
17	Supply voltage, 115 V AC, L1
18	Supply voltage, N

Table 7



! WARNING

Explosion hazard
In case of non-compliance with the conditions for explosion protection, there is the risk of explosion.

- The control circuit of the evaluator is not intrinsically safe!
- If an intrinsically safe control circuit is required, provide an appropriate isolating switch amplifier between evaluator and initiator!

Terminal assignment: Isolating switch amplifier

Terminal No.	Description
1+	NAMUR input 1, L+
2+	Do not connect!
3-	NAMUR input 1, L-
4+	NAMUR input 2, L+
5+	Do not connect!
6-	NAMUR input 2, L-
7	Output 1 +
8	Output 1/2 -
9	Output 2 +
14+	Supply voltage, 230 V AC, L1
15-	Supply voltage, N

Table 8

7 Display and Setting of Evaluator

7.1 Display - evaluator

Operating mode:

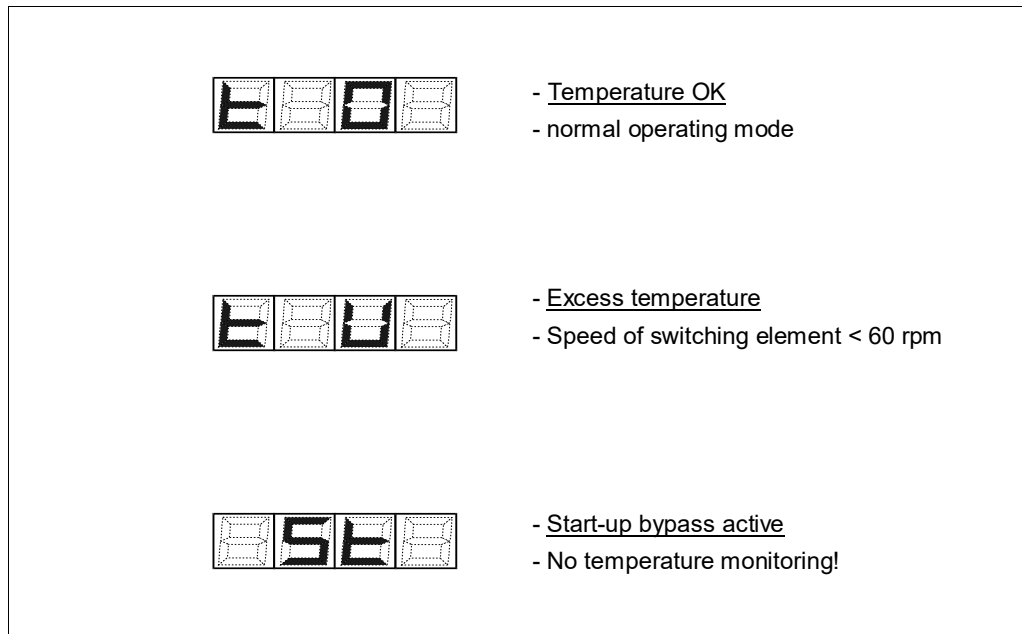


Fig. 9

Setting mode:

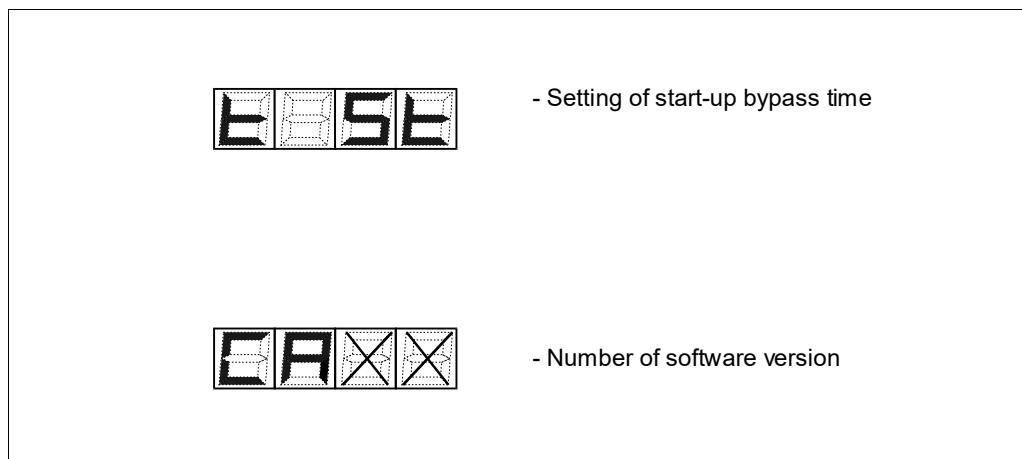


Fig. 10

7.2 Setting - evaluator

- If required, set the start-up bypass time; setting at the factory: **10 s!**
 The pushbuttons on the front are used to set the time (see schematic sketch below).

WARNING

Risk of personal injuries and damage to property

During the start-up bypass time, an excess temperature of the turbo coupling is **not** recorded!

- Only persons who are sufficiently qualified, trained and authorized are allowed to work on or with the turbo coupling.
- Please observe the warnings and safety information.

SAFETY INFORMATION

- The start-up bypass time begins with triggering the start-up bypass.
- After the start-up bypass time, the speed of the turbo coupling with switching element should have clearly exceeded **60 rpm!**
- Factory setting of the start-up bypass time: **10 s.**

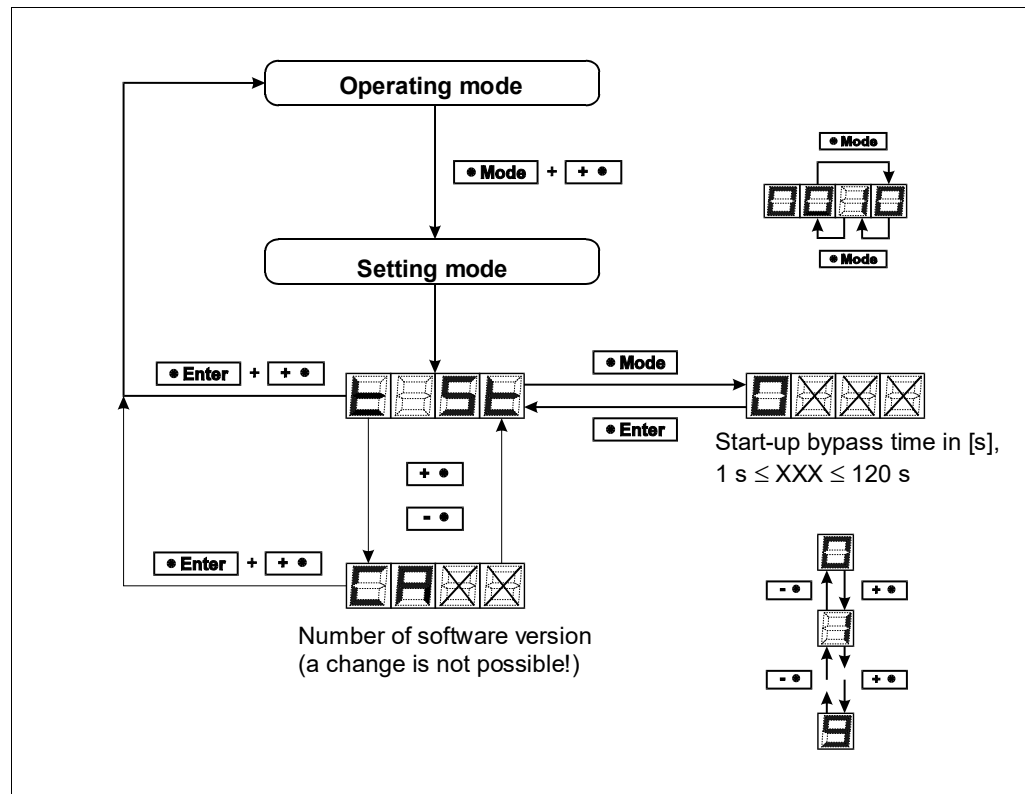


Fig. 11

8 Commissioning







WARNING

Risk of injury

Please observe, in particular, → Chapter 5 (Safety) when working on the non-contacting thermal switch unit!

- A commissioning not performed properly could cause injury to persons, or harm to property and the environment!
- Experts only are allowed to perform commissioning, in particular, first starting of the turbo coupling!
- Secure the machine against unintentional switching on!

- Check the wiring according to **wiring diagram** (→ Chapter 6.4). Please pay special attention to the proper wiring of the supply voltage!
- Apply supply voltage to the evaluator, first without starting the turbo coupling. While the start-up by pass is active, the device displays . The output relay is energized and the front LED lights up.
- After the start-up bypass time, the device displays . The output relay is de-energized and the front LED extinguishes.
- If necessary, set the start-up bypass time according to → Chapter 7.2.
- In case of external triggering, remove the bridge that was fixed at the factory between terminals 2 and 3 on the evaluator.
- Start the BTS with turbo coupling in a normal way. After the start-up bypass time, the speed of the turbo coupling with switching element must have clearly exceeded **60 rpm**. The evaluator will display  if there is no excessive temperature. The output relay remains energized and the front LED lights up.
- Switch off the drive with the turbo coupling, leave the BTS in the mode ready for operation. If the speed of the turbo coupling with switching element drops below **60 rpm**, the evaluator displays . The output relay is de-energized and the front LED extinguishes.
- Normal operation can start now. In case of malfunctions, → Chapter 10.

9 Maintenance, Servicing

Definition of the maintenance work described in the following (as per IEC 60079):

Maintenance and Servicing: A combination of all activities conducted in order to maintain an object in a condition or to re-store it to such a condition which meets the requirements of the respective specification and ensures performance of the required functions.

Inspection: An activity involving the thorough examination of an object in order to provide a reliable statement as to the condition of said object, performed without disassembly or, if necessary, with only partial disassembly, supplemented by measures such as the taking of measurements.

Visual inspection: A visual inspection is an inspection in which visible defects, such as missing screws or bolts, are identified without the use of access equipment or tools.

Close-up inspection: An inspection in which, in addition to the areas covered by the visual inspection, defects such as loose bolts, that can only be detected by using access equipment, e.g. mobile stair steps (if required) and tools are identified. For close-up inspections, usually a housing does not need to be opened or the power to the equipment be cut off.

Detailed inspection: An inspection in which, in addition to the areas covered by the close-up inspection, defects such as loose connections, that can only be detected by opening housings and/or using tools and test equipment (if required) are identified.

WARNING

Risk of injury

Please observe, in particular, → Chapter 5 (Safety) when working on the non-contacting thermal switch unit!

- Please always keep access paths free to the turbo coupling!

Qualification
→ Chapter 5.8

- Skilled and authorized persons only are allowed to carry out maintenance and repair work! Qualification is ensured by performing training and giving instructions on the turbo coupling.
- Possible consequences of improper servicing and maintenance could be death, serious or minor injuries, damage to property and harm to the environment.

- Switch off the unit in which the turbo coupling is installed and secure the switch against inadvertent switch-on.
- For all work performed on the turbo coupling ensure that both the drive motor and the driven machine have stopped running and that unintended starting is absolutely impossible!
- Components may only be replaced by original spare parts.

Re-mount all protective covers and safety devices in their original position immediately after completion of the servicing and maintenance work. Check them for proper functioning.

Maintenance schedule:

Time	Maintenance work
Every 1000 operating hours every 6 months at the latest	Inspect the machine for irregularities (visual inspection, dust deposits).
6 months after commissioning, at the latest, then every 2 years	Check the electrical system for sound condition (detailed inspection).
In case of impurities	Cleaning (→ Chapter 9.1).

Table 9

- Carry out any maintenance work and routine inspections according to the report.
- Record the maintenance work carried out.

Report samples
→ **Operating manual**
of turbo coupling



For explosion-proof turbo couplings, the following maintenance work needs to be carried out in addition:

Maintenance intervals	Maintenance work
<p>In case of impurities or dusting: Regularly clean equipment used in potentially explosive atmospheres. The intervals are specified by the operator according to the environmental impact to which the equipment is exposed on the jobsite, e.g. in case of a dust accumulation of approx. 0.2 ... 0.5 mm or more.</p>	<p>Cleaning (→ Chapter 9.1).</p>

Table 10

WARNING

Explosion hazard
 Explosion hazard due to maintenance work not performed according to schedule. It is vital to carry out all maintenance work according to the schedule in order to guarantee proper operation within the meaning of explosion-protection.

- Immediately remove any combustible layers of dust on the devices.

9.1 Outside cleaning

NOTICE

Damage to property
 Damage to the BTS due to an improper, unsuitable outside cleaning.

- Ensure that the cleaning agent is compatible with the plastic housing of the BTS and the rubber seal of the cable connection!
- Do not use high-pressure cleaning equipment!
- Be careful with seals. Do not apply a water and compressed-air jet.

- Clean the BTS with a degreasing agent, as and when required.

10 Disposal

Disposal of the packaging

Dispose of packaging material according to the local regulations.

How to dispose of operating fluids

On disposal, please observe the applicable laws and the producer's or supplier's instructions.

How to dispose of the BTS

Dispose of the BTS according to the local regulations.

For special information on the disposal of the substances and materials used, please see the following table:

Material / substance	Kind of disposal		
	Reuse	Residual waste	Special waste
Metals	x	-	-
Cables	x	-	-
Seals	-	x	-
Plastics	x ¹⁾	(x)	-
Operating media	-	-	x ^{1), 2)}
Packing	x	-	-

Table 11

- 1) If possible
- 2) Disposal according to the safety data sheet or the manufacturer's instructions

11 Malfunctions - Remedial Actions, Troubleshooting



WARNING

Risk of injury

Please observe, in particular, → Chapter 5 (Safety) when working on the non-contacting thermal switch unit!



WARNING

Explosion hazard

It is not allowed to modify/change anything on equipment/devices which are operated in potentially explosive atmospheres.

- Repairs are not permitted; repair the device.

The following table is intended to help finding the cause of malfunctions or problems quickly and to take remedial action, if necessary.

Malfunction	Possible cause(s)	Remedial action	See
Display of the evaluator does not work.	No supply voltage is applied to the evaluator.	Apply supply voltage.	Chapter 6.4
	The evaluator is defective.	Replace the evaluator.	
Triggering of the start-up bypass by applying supply voltage does not work.	The bridge between terminals 3 and 2 of the evaluator was removed.	Insert the bridge.	Chapter 6.4
Triggering of the start-up by-pass by means of an external signal does not work.	The bridge between terminals 3 and 2 of the evaluator was not removed.	Remove the bridge.	Chapter 6.4
	The external triggering signal was too short.	The triggering signal should at least be applied during the start-up bypass time.	

Malfunction	Possible cause(s)	Remedial action	See
<p>Display on the evaluator:</p> <p>Display appears again after switching OFF and ON.</p>	<p>Electronic error.</p> <p>Defective evaluator.</p>	<p>Switch OFF and ON the supply voltage.</p> <p>Replace the evaluator.</p>	
<p>After the start-up bypass time, excessive temperature () is always displayed although there is no excessive temperature.</p>	<p>A too short start-up bypass time was selected.</p>	<p>After the start-up bypass time, the speed of the turbo coupling with switching element should have clearly exceeded 60 rpm. Increase the start-up bypass time accordingly.</p>	
	<p>The initiator poles are reversed.</p>	<p>Check the initiator connection.</p>	<p>Chapter 6.4</p>
	<p>The distance between initiator head and switching element is too large.</p>	<p>Set the distance to 4 ± 1 mm.</p>	<p>Chapter 6.4</p>
	<p>The initiator is defective.</p>	<p>Check the initiator, and replace it, if necessary.</p>	
	<p>The switching element is defective.</p>	<p>Check the switching element, and replace it, if necessary.</p>	
<p>After the start-up bypass time, excessive temperature is occasionally displayed () although there is no excessive temperature.</p>	<p>The distance between the initiator head and the switching element is too large.</p>	<p>Set the distance to 4 ± 1 mm.</p>	<p>Chapter 6.4</p>
	<p>The bracket for the initiator is not sufficiently stable. Vibrations may cause false signals.</p>	<p>Ensure that the bracket is of sufficient stability.</p>	<p>Chapter 6.4</p>
<p>While the start-up bypass is active, operating fluid is leaking through the fusible plugs.</p>	<p>A too long start-up bypass time was selected.</p>	<p>Set a shorter start-up bypass time so that the speed of the turbo coupling with switching element will have clearly exceeded 60 rpm after the start-up bypass time.</p>	

Malfunction	Possible cause(s)	Remedial action	See
After the start-up by-pass time, operating fluid is leaking through the fusible plugs, the BTS did not display any excessive temperature.	The nominal response temperatures of switching element and fusible plugs do not match.	Please contact Voith.	Chapter 12
	The switching element is defective.	Check the switching element, and replace it, if necessary.	

Please consult Voith (→ Chapter 12), if a malfunction occurs which is not included in this table.

Table 12

In order to determine the cause of failure more precisely, the following measures should be taken in the corresponding order:

Measurement	Result	Probable troubleshooting
Apply supply voltage to the evaluator. Measure the no-load voltage and the short-circuit current at the NAMUR input (terminals 9 and 8).	Clear deviation from the setpoints: - no-load voltage 8.2 V DC - short-circuit current 6.5 mA	Defective evaluator.
Connect the initiator to the evaluator. Measure the current consumption of the initiator which is not attenuated.	Current consumption > 6.0 mA or < 2.1 mA	Defective initiator.
Connect the initiator to the evaluator. Measure the current consumption of the initiator which is attenuated. Note: The initiator can, for example, be attenuated with a metal plate which is held directly in front of the initiator head.	Current consumption > 1.2 mA or < 0.1 mA	Defective initiator.
Attenuate the initiator, after proper installation, with the switching element, with the turbo coupling not being overheated.	Current consumption > 1.2 mA and < 6.0 mA	Defective switching element.


Table 13

12 Queries, Orders Placed for Field Service Engineers and Spare Parts

For

- queries
- Ordering a field service engineer
- Ordering spare parts
- commissionings

we need:

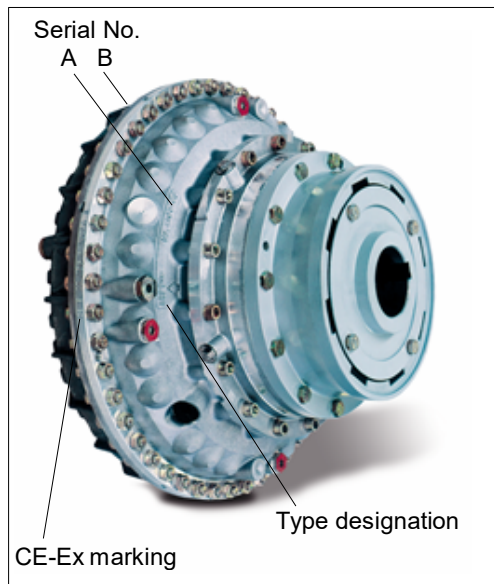

the **Serial No.** and **type designation** of the turbo coupling on which the BTS is used.

- You will find the serial number and type designation either on the outer wheel / coupling shell (A) or on the turbo coupling periphery (B).
- The serial number is stamped in with figure stamps.
- For turbo couplings, intended for the use in potentially explosive atmospheres, you will find the CE-Ex marking on the turbo coupling periphery.

Fig. 12

When placing an order for a **field service representative, commissioning** or a **service**, we need, in addition

- the turbo coupling installation site,
- the name and address of a contact person,
- details of the malfunction/problem occurred.

When placing a **spare parts order**, we need, in addition,

- the shipping address for the spare parts shipment.

Contact
→ Page 2

13 Spare Parts Information

NOTICE

Unauthorized changes or retrofits are not allowed to be performed on the coupling!

Do not retrofit accessories or equipment originating from other manufacturers!

Any changes or conversions performed without the prior written consent of Voith Turbo will result in the loss of any warranty! Any claims will forfeit!

- Professional maintenance or repair can only be guaranteed by the manufacturer!

13.1 Switching elements

BTS switching elements					Sealing ring
Use for turbo coupling size	Dimension of thread	Nominal response temperature	Type of switching element	Material No.	Material No.
206 - 274	M12x1.5	125 °C	Voith 125 °C	TCR.10498440	TCR.03658012
366 - 650	M18x1.5	85 °C	Voith 85 °C	TCR.10672470	TCR.03658018
		90 °C	Voith 90 °C	TCR.10642650	
		110 °C	Voith 110 °C	TCR.10642630	
		125 °C	Voith 125 °C	TCR.10499540	
		140 °C	Voith 140 °C	TCR.10499550	
		160 °C	Voith 160 °C	TCR.10499560	
		180 °C	Voith 180 °C	TCR.10499570	
750 - 1330	M24x1.5	85 °C	Voith 85 °C	TCR.11973940	TCR.03658024
		125 °C	Voith 125 °C	TCR.10488230	
		140 °C	Voith 140 °C	TCR.10653470	
		160 °C	Voith 160 °C	TCR.10633550	
		180 °C	Voith 180 °C	TCR.10488220	

Table 14

13.2 Initiator, mounting flange

Type of initiator	Material No.
NJ 10-22-N-E93-Y245590 (2 m)	201.02171810
NJ 10-22-N-E93-Y246868 (5 m)	201.02171910
NJ 10-22-N-E93-Y246869 (10 m)	201.02172010
NJ 10-22-N-E93-Y245590 (2 m, new dust-Ex-marking)	201.04312710
NJ 10-22-N-E93-Y246868 (5 m, new dust-Ex-marking)	201.04312810
NJ 10-22-N-E93-Y246869 (10 m, new dust-Ex-marking)	201.04312910
Mounting flange BF22	TCR.03668170

Table 15

13.3 Evaluator

Type of evaluator	Material No.
KFU8-DW-1.D-Y209869	201.01630810

Table 16

13.4 Isolating switch amplifier

Type of isolating switch amplifier	Material No.
KFA6 – SOT2 / Ex2	TCR.11952640
KFD2 – SOT2 / Ex2	TCR.11975630

Table 17

14 Annex



14.1 Initiator NJ 10-22-N-E93-Y245590 (2 m)

Voith Material No.: 201.02171810

Operating Instructions	Pepperl+Fuchs
Technical Data	Pepperl+Fuchs
Declaration of Conformity	Pepperl+Fuchs

Instruction Manual

1. Marking

Inductive sensor NJ10-22-N-E93-Y245590
Equipment protection level: Gb ATEX certificate: PTB 00 ATEX 2048 X ATEX marking:  II 2G Ex ia IIC T6...T1 Gb IECEX certificate: IECEX PTB 11.0037X IECEX marking: Ex ib IIC T6
Equipment protection level: Da ATEX certificate: PTB 00 ATEX 2048 X ATEX marking:  II 1D Ex ia IIIC T135°C Da
Equipment protection level: Mb IECEX certificate: IECEX PTB 11.0037X IECEX marking: Ex ia I
Pepperl+Fuchs GmbH Lilienthalstraße 200, 68307 Mannheim, Germany

2. Validity

Specific processes and instructions in this instruction manual require special provisions to guarantee the safety of the operating personnel.

3. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.

The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the device. The trained and qualified personnel must have read and understood the instruction manual.

4. Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location. Observe Directive 1999/92/EC in relation to hazardous areas.

The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable (see datasheet) are an integral part of this document. You can find this information under www.pepperl-fuchs.com.

Due to constant revisions, documentation is subject to permanent change. Please refer only to the most up-to-date version, which can be found under www.pepperl-fuchs.com.

5. Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

Technical data provided in the datasheet may be partly restrained by the information given in this instruction manual.

Use the device only within the specified ambient and operating conditions. The device is an electrical apparatus for hazardous areas.

The device can be used in hazardous areas containing gas, vapor, and mist.

The device can be used in hazardous areas containing combustible dust.

The device can be used in underground parts of mines as well as those parts of surface installations of such mines containing firedamp and/or combustible dust.

The certificate applies only to the use of apparatus under atmospheric conditions.

If you use the device outside atmospheric conditions, consider that the permissible safety parameters should be reduced.

5.1. Requirements for Equipment Protection Level Gb

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures > 60 °C in conjunction with hot surfaces has been checked by the notified body.

5.2. Requirements for Equipment Protection Level Da

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures > 60 °C in conjunction with hot surfaces has been checked by the notified body.

5.3. Requirements for Equipment Protection Level Mb

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures > 60 °C in conjunction with hot surfaces has been checked by the notified body.

6. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

7. Mounting and Installation

Observe the installation instructions according to IEC/EN 60079-14.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Attach the nameplate supplied in the immediate vicinity of the device. Attach the nameplate so that it is legible and indelible. Take the ambient conditions into account.

Do not mount a damaged or polluted device.

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

If you use the device in environments subject to adverse conditions, you must protect the device accordingly.

Do not remove the warning markings.

7.1. Requirements for Usage as Intrinsically Safe Apparatus

When connecting intrinsically safe devices with intrinsically safe circuits of associated apparatus, observe the maximum peak values with regard to explosion protection (verification of intrinsic safety). Observe the standards IEC/EN 60079-14 or IEC/EN 60079-25.

The type of protection is determined by the connected intrinsically safe circuit.

Mount the device with at least a degree of protection of IP20 according to IEC/EN 60529.

7.2. Special Conditions

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

7.2.1. Requirements in Relation to Electrostatics

Information on electrostatic hazards can be found in the technical specification IEC/TS 60079-32-1.

7.2.1.1. Requirements for Equipment Protection Level Da

Avoid electrostatic charges which could result in electrostatic discharges while installing or operating the device.

Do not mount the supplied nameplate in areas that can be electrostatically charged.

7.2.2. Requirements to Mechanics

7.2.2.1. Requirements for Usage as Intrinsically Safe Apparatus

Protect the device from impact effects by mounting in a surrounding enclosure if it is used in the temperature range between the minimum permissible ambient temperature and -20 °C.

Mount the device with at least a degree of protection of IP20 according to IEC/EN 60529.

8. Operation, Maintenance, Repair

Observe the special conditions.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Do not use a damaged or polluted device.

Do not repair, modify, or manipulate the device.

Modifications are permitted only if approved in this instruction manual.

If there is a defect, always replace the device with an original device.

Do not remove the warning markings.

8.1. Requirements for Usage as Intrinsically Safe Apparatus

Only operate the device with intrinsically safe circuits according to IEC/EN 60079-11.

The type of protection is determined by the connected intrinsically safe circuit.

8.2. Requirements for Equipment Protection Level Gb

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

8.3. Requirements for Equipment Protection Level Da

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

8.4. Requirements for Equipment Protection Level Mb

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

9. Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Keep the original packaging. Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

Disposing of device, packaging, and possibly contained batteries must be in compliance with the applicable laws and guidelines of the respective country.



Model Number

NJ10-22-N-E93-Y245590

Features

- Comfort series
- 10 mm non-flush

Technical Data

General specifications

Rated operating distance	s_n	10 mm
Installation		non-flush
Output polarity		NAMUR
Assured operating distance	s_a	0 ... 10 mm
Output type		2-wire

Nominal ratings

Nominal voltage	U_o	8 V
Switching frequency	f	0 ... 1000 Hz
Hysteresis	H	typ. 5 %
Current consumption		
Measuring plate not detected		≥ 3 mA
Measuring plate detected		≤ 1 mA

Ambient conditions

Ambient temperature	-40 ... 100 °C (-40 ... 212 °F)
	Also observe the maximum permissible ambient temperature stated in the data for application in connection with hazardous areas.
	Keep to the lower of the two values.

Mechanical specifications

Connection type	cable silicone , 2 m
Core cross-section	0.75 mm ²
Housing material	PBT
Sensing face	PBT
Degree of protection	IP68
Cable	
Bending radius	> 10 x cable diameter

General information

Use in the hazardous area	see instruction manuals
---------------------------	-------------------------


Compliance with standards and directives

Standard conformity	
NAMUR	EN 60947-5-6:2000 IEC 60947-5-6:1999
Standards	EN 60947-5-2:2007 EN 60947-5-2/A1:2012 IEC 60947-5-2:2007 IEC 60947-5-2 AMD 1:2012


Approvals and certificates

EAC conformity	TR CU 012/2011
UL approval	cULus Listed, General Purpose

Dimensions

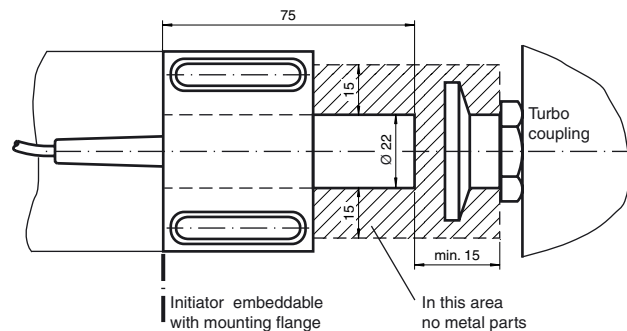

Electrical Connection



Data for application in connection with hazardous areas

Equipment protection level	Gb , Da , Mb	
Equipment protection level Gb		
Type of protection	intrinsic safety	
CE marking	CE 0102	
Certificates		
Appropriate type	NJ 10-22-N...	
ATEX certificate	PTB 00 ATEX 2048 X	
ATEX marking	Ex II 2G Ex ia IIC T6...T1 Gb	
Standards	EN 60079-0:2012+A11:2013 , EN 60079-11:2012	
IECEX certificate	IECEX PTB 11.0037X	
IECEX marking	Ex ib IIC T6	
Standards	IEC 60079-0:2004 , IEC 60079-11:2006	
Effective internal inductivity	C_i	$\leq 130 \text{ nF}$ A cable length of 10 m is considered.
Effective internal inductance	L_i	$\leq 100 \text{ }\mu\text{H}$ A cable length of 10 m is considered.
Maximum permissible ambient temperature T_{amb}	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. at $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 34 \text{ mW}$, T6 : 73 °C (163.4 °F) T5 : 88 °C (190.4 °F) T4 : 100 °C (212 °F) T3 : 100 °C (212 °F) T2 : 100 °C (212 °F) T1 : 100 °C (212 °F) at $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 64 \text{ mW}$, T6 : 69 °C (156.2 °F) T5 : 84 °C (183.2 °F) T4 : 100 °C (212 °F) T3 : 100 °C (212 °F) T2 : 100 °C (212 °F) T1 : 100 °C (212 °F) at $U_i = 16 \text{ V}$, $I_i = 52 \text{ mA}$, $P_i = 169 \text{ mW}$, T6 : 51 °C (123.8 °F) T5 : 66 °C (150.8 °F) T4 : 80 °C (176 °F) T3 : 80 °C (176 °F) T2 : 80 °C (176 °F) T1 : 80 °C (176 °F) at $U_i = 16 \text{ V}$, $I_i = 76 \text{ mA}$, $P_i = 242 \text{ mW}$, T6 : 39 °C (102.2 °F) T5 : 54 °C (129.2 °F) T4 : 61 °C (141.8 °F) T3 : 61 °C (141.8 °F) T2 : 61 °C (141.8 °F) T1 : 61 °C (141.8 °F)	

Equipment protection level Da

Type of protection	intrinsic safety	
CE marking	CE 0102	
Certificates		
Appropriate type	NJ 10-22-N...	
ATEX certificate	PTB 00 ATEX 2048 X	
ATEX marking	Ex II 1D Ex ia IIIC T135°C Da	
Standards	EN 60079-0:2012+A11:2013 , EN 60079-11:2012	
Effective internal inductivity	C_i	$\leq 130 \text{ nF}$ A cable length of 10 m is considered.
Effective internal inductance	L_i	$\leq 100 \text{ }\mu\text{H}$ A cable length of 10 m is considered.
Maximum permissible ambient temperature T_{amb}	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. at $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 34 \text{ mW}$: 100 °C (212 °F) at $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 64 \text{ mW}$: 100 °C (212 °F) at $U_i = 16 \text{ V}$, $I_i = 52 \text{ mA}$, $P_i = 169 \text{ mW}$: 80 °C (176 °F) at $U_i = 16 \text{ V}$, $I_i = 76 \text{ mA}$, $P_i = 242 \text{ mW}$: 61 °C (141.8 °F)	

Equipment protection level Mb

Type of protection	intrinsic safety	
Certificates		
Appropriate type	NJ 10-22-N...	
IECEX certificate	IECEX PTB 11.0037X	
IECEX marking	Ex ia I	
Standards	IEC 60079-0:2004 , IEC 60079-11:2006	
Effective internal inductivity	C_i	$\leq 130 \text{ nF}$ A cable length of 10 m is considered.
Effective internal inductance	L_i	$\leq 100 \text{ }\mu\text{H}$ A cable length of 10 m is considered.

Release date: 2017-12-13 09:46 Date of issue: 2017-12-13 245590_eng.xml

Maximum permissible ambient temperature T_{amb}

Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values.

at $U_i = 16\text{ V}$, $I_i = 25\text{ mA}$, $P_i = 34\text{ mW}$: 100 °C (212 °F)

at $U_i = 16\text{ V}$, $I_i = 25\text{ mA}$, $P_i = 64\text{ mW}$: 100 °C (212 °F)

at $U_i = 16\text{ V}$, $I_i = 52\text{ mA}$, $P_i = 169\text{ mW}$: 80 °C (176 °F)

at $U_i = 16\text{ V}$, $I_i = 76\text{ mA}$, $P_i = 242\text{ mW}$: 61 °C (141.8 °F)

Release date: 2017-12-13 09:46 Date of issue: 2017-12-13 245590_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

EU-Declaration of conformity

en/de

EU-Konformitätserklärung

Pepperl+Fuchs GmbH
Lilienthalstraße 200
68307 Mannheim
Germany
Phone +49 621 776-0
Fax +49 621 776-1000

No. / Nr.: DOC-3331
Date / Datum: 2017-01-26

Copyright Pepperl+Fuchs
www.pepperl-fuchs.com



ANNEX ATEX

Notified Body QM-System / Notifizierte Stelle des QM-Systems
Physikalisch Technische Bundesanstalt (0102)
Bundesallee 100
38116 Braunschweig
Germany

Marking and Certificates / Kennzeichnung und Zertifikate

Marking Kennzeichnung	Certificate Zertifikat	Issuer ID Aussteller ID
 	PTB 00 ATEX 2048 X	0102

Key for Issuer ID / Schlüssel zur Aussteller ID

ID	Issuer / Aussteller
0102	Physikalisch Technische Bundesanstalt Bundesallee 100 38116 Braunschweig Germany

Declaration of conformity / Konformitätserklärung

We, Pepperl+Fuchs GmbH declare under our sole responsibility that the **products** listed below are in conformity with the listed **European Directives** and **standards**.

Die Pepperl+Fuchs GmbH erklärt hiermit in alleiniger Verantwortung, dass die unten gelisteten **Produkte** den genannten **Europäischen Richtlinien** und **Normen** entsprechen.

Products / Produkte

Product / Produkt	Item number	Description / Beschreibung
NJ10-22-N-E93-Y245590	245590	Inductive sensor

Directives and Standards / Richtlinien und Normen

EU-Directive EU-Richtlinie	Standards Normen
ATEX 2014/34/EU (L96/309-356)	EN 60079-0/A11:2013-11 EN 60079-0:2012-08 EN 60079-11:2012-01
EMC 2014/30/EU (L96/79-106)	EN 60947-5-2/A1:2012-11 EN 60947-5-2:2007-12 EN 60947-5-6:2000-01

Affixed CE Marking / Angebrachte CE-Kennzeichnung



Signatures / Unterschriften

Mannheim, 2017-01-26

ppa. Wolfgang Helm
Director Business Unit Sensors

i.V. Tobias Dittmer
Global Product Manager



14.2 Initiator NJ 10-22-N-E93-Y246868 (5 m)

Voith Material No.: 201.02171910

Operating Instructions	Pepperl+Fuchs
Technical Data	Pepperl+Fuchs
Declaration of Conformity	Pepperl+Fuchs

Instruction Manual

1. Marking

Inductive sensor NJ10-22-N-E93-Y246868
Equipment protection level: Gb ATEX certificate: PTB 00 ATEX 2048 X ATEX marking:  II 2G Ex ia IIC T6...T1 Gb IECEX certificate: IECEX PTB 11.0037X IECEX marking: Ex ib IIC T6
Equipment protection level: Da ATEX certificate: PTB 00 ATEX 2048 X ATEX marking:  II 1D Ex ia IIIC T135°C Da
Equipment protection level: Mb IECEX certificate: IECEX PTB 11.0037X IECEX marking: Ex ia I
Pepperl+Fuchs GmbH Lilienthalstraße 200, 68307 Mannheim, Germany

2. Validity

Specific processes and instructions in this instruction manual require special provisions to guarantee the safety of the operating personnel.

3. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.

The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the device. The trained and qualified personnel must have read and understood the instruction manual.

4. Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location. Observe Directive 1999/92/EC in relation to hazardous areas.

The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable (see datasheet) are an integral part of this document. You can find this information under www.pepperl-fuchs.com.

Due to constant revisions, documentation is subject to permanent change. Please refer only to the most up-to-date version, which can be found under www.pepperl-fuchs.com.

5. Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

Technical data provided in the datasheet may be partly restrained by the information given in this instruction manual.

Use the device only within the specified ambient and operating conditions. The device is an electrical apparatus for hazardous areas.

The device can be used in hazardous areas containing gas, vapor, and mist.

The device can be used in hazardous areas containing combustible dust.

The device can be used in underground parts of mines as well as those parts of surface installations of such mines containing firedamp and/or combustible dust.

The certificate applies only to the use of apparatus under atmospheric conditions.

If you use the device outside atmospheric conditions, consider that the permissible safety parameters should be reduced.

5.1. Requirements for Equipment Protection Level Gb

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures > 60 °C in conjunction with hot surfaces has been checked by the notified body.

5.2. Requirements for Equipment Protection Level Da

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures > 60 °C in conjunction with hot surfaces has been checked by the notified body.

5.3. Requirements for Equipment Protection Level Mb

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures > 60 °C in conjunction with hot surfaces has been checked by the notified body.

6. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

7. Mounting and Installation

Observe the installation instructions according to IEC/EN 60079-14.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Attach the nameplate supplied in the immediate vicinity of the device. Attach the nameplate so that it is legible and indelible. Take the ambient conditions into account.

Do not mount a damaged or polluted device.

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

If you use the device in environments subject to adverse conditions, you must protect the device accordingly.

Do not remove the warning markings.

7.1. Requirements for Usage as Intrinsically Safe Apparatus

When connecting intrinsically safe devices with intrinsically safe circuits of associated apparatus, observe the maximum peak values with regard to explosion protection (verification of intrinsic safety). Observe the standards IEC/EN 60079-14 or IEC/EN 60079-25.

The type of protection is determined by the connected intrinsically safe circuit.

Mount the device with at least a degree of protection of IP20 according to IEC/EN 60529.

7.2. Special Conditions

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

7.2.1. Requirements in Relation to Electrostatics

Information on electrostatic hazards can be found in the technical specification IEC/TS 60079-32-1.

7.2.1.1. Requirements for Equipment Protection Level Da

Avoid electrostatic charges which could result in electrostatic discharges while installing or operating the device.

Do not mount the supplied nameplate in areas that can be electrostatically charged.

7.2.2. Requirements to Mechanics

7.2.2.1. Requirements for Usage as Intrinsically Safe Apparatus

Protect the device from impact effects by mounting in a surrounding enclosure if it is used in the temperature range between the minimum permissible ambient temperature and -20 °C.

Mount the device with at least a degree of protection of IP20 according to IEC/EN 60529.

8. Operation, Maintenance, Repair

Observe the special conditions.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Do not use a damaged or polluted device.

Do not repair, modify, or manipulate the device.

Modifications are permitted only if approved in this instruction manual.

If there is a defect, always replace the device with an original device.

Do not remove the warning markings.

8.1. Requirements for Usage as Intrinsically Safe Apparatus

Only operate the device with intrinsically safe circuits according to IEC/EN 60079-11.

The type of protection is determined by the connected intrinsically safe circuit.

8.2. Requirements for Equipment Protection Level Gb

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

8.3. Requirements for Equipment Protection Level Da

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

8.4. Requirements for Equipment Protection Level Mb

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

9. Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Keep the original packaging. Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

Disposing of device, packaging, and possibly contained batteries must be in compliance with the applicable laws and guidelines of the respective country.



Model Number

NJ10-22-N-E93-Y246868


Features

- **Comfort series**
- **10 mm non-flush**


Technical Data

General specifications		
Rated operating distance	s_n	10 mm
Installation		non-flush
Output polarity		NAMUR
Assured operating distance	s_a	0 ... 10 mm
Output type		2-wire
Nominal ratings		
Nominal voltage	U_o	8 V
Switching frequency	f	0 ... 1000 Hz
Hysteresis	H	typ. 5 %
Current consumption		
Measuring plate not detected		≥ 3 mA
Measuring plate detected		≤ 1 mA
Ambient conditions		
Ambient temperature		-40 ... 100 °C (-40 ... 212 °F)
Also observe the maximum permissible ambient temperature stated in the data for application in connection with hazardous areas.		
Keep to the lower of the two values.		
Mechanical specifications		
Connection type		cable silicone , 5 m
Core cross-section		0.75 mm ²
Housing material		PBT
Sensing face		PBT
Degree of protection		IP68
Cable		
Bending radius		> 10 x cable diameter
General information		
Use in the hazardous area		see instruction manuals
Compliance with standards and directives		
Standard conformity		
NAMUR		EN 60947-5-6:2000 IEC 60947-5-6:1999
Standards		
		EN 60947-5-2:2007 EN 60947-5-2/A1:2012 IEC 60947-5-2:2007 IEC 60947-5-2 AMD 1:2012
Approvals and certificates		
EAC conformity		TR CU 012/2011
UL approval		cULus Listed, General Purpose

Dimensions

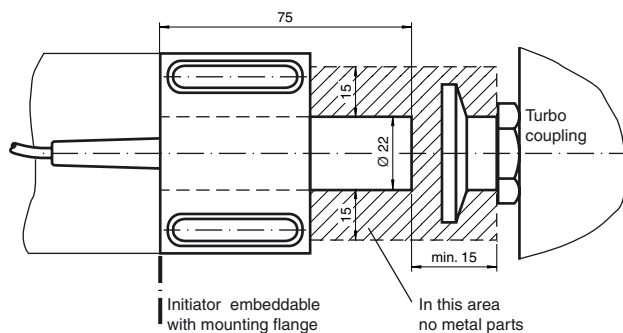

Electrical Connection



Release date: 2017-12-13 09:46 Date of issue: 2017-12-13 246868_eng.xml

Data for application in connection with hazardous areas

Equipment protection level Gb , Da , Mb

Equipment protection level Gb

Type of protection intrinsic safety
 CE marking **CE**0102

Certificates

Appropriate type NJ 10-22-N...
 ATEX certificate PTB 00 ATEX 2048 X
 ATEX marking **Ex** II 2G Ex ia IIC T6...T1 Gb
 Standards EN 60079-0:2012+A11:2013 , EN 60079-11:2012
 IECEx certificate IECEx PTB 11.0037X
 IECEx marking Ex ib IIC T6
 Standards IEC 60079-0:2004 , IEC 60079-11:2006

Effective internal inductivity C_i ≤ 130 nF
 A cable length of 10 m is considered.

Effective internal inductance L_i ≤ 100 μ H
 A cable length of 10 m is considered.

Maximum permissible ambient temperature T_{amb} Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values.
 at $U_i = 16$ V , $I_i = 25$ mA , $P_i = 34$ mW ,
 T6 : 73 °C (163.4 °F)
 T5 : 88 °C (190.4 °F)
 T4 : 100 °C (212 °F)
 T3 : 100 °C (212 °F)
 T2 : 100 °C (212 °F)
 T1 : 100 °C (212 °F)
 at $U_i = 16$ V , $I_i = 25$ mA , $P_i = 64$ mW ,
 T6 : 69 °C (156.2 °F)
 T5 : 84 °C (183.2 °F)
 T4 : 100 °C (212 °F)
 T3 : 100 °C (212 °F)
 T2 : 100 °C (212 °F)
 T1 : 100 °C (212 °F)
 at $U_i = 16$ V , $I_i = 52$ mA , $P_i = 169$ mW ,
 T6 : 51 °C (123.8 °F)
 T5 : 66 °C (150.8 °F)
 T4 : 80 °C (176 °F)
 T3 : 80 °C (176 °F)
 T2 : 80 °C (176 °F)
 T1 : 80 °C (176 °F)
 at $U_i = 16$ V , $I_i = 76$ mA , $P_i = 242$ mW ,
 T6 : 39 °C (102.2 °F)
 T5 : 54 °C (129.2 °F)
 T4 : 61 °C (141.8 °F)
 T3 : 61 °C (141.8 °F)
 T2 : 61 °C (141.8 °F)
 T1 : 61 °C (141.8 °F)

Equipment protection level Da

Type of protection intrinsic safety
 CE marking **CE**0102

Certificates

Appropriate type NJ 10-22-N...
 ATEX certificate PTB 00 ATEX 2048 X
 ATEX marking **Ex** II 1D Ex ia IIIc T135°C Da
 Standards EN 60079-0:2012+A11:2013 , EN 60079-11:2012

Effective internal inductivity C_i ≤ 130 nF
 A cable length of 10 m is considered.

Effective internal inductance L_i ≤ 100 μ H
 A cable length of 10 m is considered.

Maximum permissible ambient temperature T_{amb} Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values.
 at $U_i = 16$ V , $I_i = 25$ mA , $P_i = 34$ mW : 100 °C (212 °F)
 at $U_i = 16$ V , $I_i = 25$ mA , $P_i = 64$ mW : 100 °C (212 °F)
 at $U_i = 16$ V , $I_i = 52$ mA , $P_i = 169$ mW : 80 °C (176 °F)
 at $U_i = 16$ V , $I_i = 76$ mA , $P_i = 242$ mW : 61 °C (141.8 °F)

Equipment protection level Mb

Type of protection intrinsic safety

Certificates

Appropriate type NJ 10-22-N...
 IECEx certificate IECEx PTB 11.0037X
 IECEx marking Ex ia I
 Standards IEC 60079-0:2004 , IEC 60079-11:2006

Effective internal inductivity C_i ≤ 130 nF
 A cable length of 10 m is considered.

Effective internal inductance L_i ≤ 100 μ H
 A cable length of 10 m is considered.

Maximum permissible ambient temperature T_{amb}

Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values.

at $U_i = 16\text{ V}$, $I_i = 25\text{ mA}$, $P_i = 34\text{ mW}$: 100 °C (212 °F)

at $U_i = 16\text{ V}$, $I_i = 25\text{ mA}$, $P_i = 64\text{ mW}$: 100 °C (212 °F)

at $U_i = 16\text{ V}$, $I_i = 52\text{ mA}$, $P_i = 169\text{ mW}$: 80 °C (176 °F)

at $U_i = 16\text{ V}$, $I_i = 76\text{ mA}$, $P_i = 242\text{ mW}$: 61 °C (141.8 °F)

EU-Declaration of conformity

en/de

EU-Konformitätserklärung

Pepperl+Fuchs GmbH
Lilienthalstraße 200
68307 Mannheim
Germany
Phone +49 621 776-0
Fax +49 621 776-1000

No. / Nr.: DOC-3336
Date / Datum: 2017-01-26

Copyright Pepperl+Fuchs
www.pepperl-fuchs.com



ANNEX ATEX

Notified Body QM-System / Notifizierte Stelle des QM-Systems
Physikalisch Technische Bundesanstalt (0102)
Bundesallee 100
38116 Braunschweig
Germany

Marking and Certificates / Kennzeichnung und Zertifikate

Marking Kennzeichnung	Certificate Zertifikat	Issuer ID Aussteller ID
 	PTB 00 ATEX 2048 X	0102

Key for Issuer ID / Schlüssel zur Aussteller ID

ID	Issuer / Aussteller
0102	Physikalisch Technische Bundesanstalt Bundesallee 100 38116 Braunschweig Germany

Declaration of conformity / Konformitätserklärung

We, Pepperl+Fuchs GmbH declare under our sole responsibility that the products listed below are in conformity with the listed European Directives and standards.

Die Pepperl+Fuchs GmbH erklärt hiermit in alleiniger Verantwortung, dass die unten gelisteten Produkte den genannten Europäischen Richtlinien und Normen entsprechen.

Products / Produkte

Product / Produkt	Item number	Description / Beschreibung
NJ10-22-N-E93-Y246868	246868	Inductive sensor

Directives and Standards / Richtlinien und Normen

EU-Directive EU-Richtlinie	Standards Normen
ATEX 2014/34/EU (L96/309-356)	EN 60079-0/A11:2013-11 EN 60079-0:2012-08 EN 60079-11:2012-01
EMC 2014/30/EU (L96/79-106)	EN 60947-5-2/A1:2012-11 EN 60947-5-2:2007-12 EN 60947-5-6:2000-01

Affixed CE Marking / Angebrachte CE-Kennzeichnung



Signatures / Unterschriften

Mannheim, 2017-01-26

ppa. Wolfgang Helm
Director Business Unit Sensors

i.V. Tobias Dittmer
Global Product Manager



14.3 Initiator NJ 10-22-N-E93-Y246869 (10 m)

Voith Material No.: 201.02172010

Operating Instructions	Pepperl+Fuchs
Technical Data	Pepperl+Fuchs
Declaration of Conformity	Pepperl+Fuchs

Instruction Manual

1. Marking

Inductive sensor NJ10-22-N-E93-Y246869
Equipment protection level: Gb ATEX certificate: PTB 00 ATEX 2048 X ATEX marking:  II 2G Ex ia IIC T6...T1 Gb IECEX certificate: IECEX PTB 11.0037X IECEX marking: Ex ib IIC T6
Equipment protection level: Da ATEX certificate: PTB 00 ATEX 2048 X ATEX marking:  II 1D Ex ia IIIC T135°C Da
Equipment protection level: Mb IECEX certificate: IECEX PTB 11.0037X IECEX marking: Ex ia I
Pepperl+Fuchs GmbH Lilienthalstraße 200, 68307 Mannheim, Germany

2. Validity

Specific processes and instructions in this instruction manual require special provisions to guarantee the safety of the operating personnel.

3. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.

The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the device. The trained and qualified personnel must have read and understood the instruction manual.

4. Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location. Observe Directive 1999/92/EC in relation to hazardous areas.

The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable (see datasheet) are an integral part of this document. You can find this information under www.pepperl-fuchs.com.

Due to constant revisions, documentation is subject to permanent change. Please refer only to the most up-to-date version, which can be found under www.pepperl-fuchs.com.

5. Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

Technical data provided in the datasheet may be partly restrained by the information given in this instruction manual.

Use the device only within the specified ambient and operating conditions. The device is an electrical apparatus for hazardous areas.

The device can be used in hazardous areas containing gas, vapor, and mist.

The device can be used in hazardous areas containing combustible dust.

The device can be used in underground parts of mines as well as those parts of surface installations of such mines containing firedamp and/or combustible dust.

The certificate applies only to the use of apparatus under atmospheric conditions.

If you use the device outside atmospheric conditions, consider that the permissible safety parameters should be reduced.

5.1. Requirements for Equipment Protection Level Gb

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures > 60 °C in conjunction with hot surfaces has been checked by the notified body.

5.2. Requirements for Equipment Protection Level Da

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures > 60 °C in conjunction with hot surfaces has been checked by the notified body.

5.3. Requirements for Equipment Protection Level Mb

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures > 60 °C in conjunction with hot surfaces has been checked by the notified body.

6. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

7. Mounting and Installation

Observe the installation instructions according to IEC/EN 60079-14.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Attach the nameplate supplied in the immediate vicinity of the device. Attach the nameplate so that it is legible and indelible. Take the ambient conditions into account.

Do not mount a damaged or polluted device.

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

If you use the device in environments subject to adverse conditions, you must protect the device accordingly.

Do not remove the warning markings.

7.1. Requirements for Usage as Intrinsically Safe Apparatus

When connecting intrinsically safe devices with intrinsically safe circuits of associated apparatus, observe the maximum peak values with regard to explosion protection (verification of intrinsic safety). Observe the standards IEC/EN 60079-14 or IEC/EN 60079-25.

The type of protection is determined by the connected intrinsically safe circuit.

Mount the device with at least a degree of protection of IP20 according to IEC/EN 60529.

7.2. Special Conditions

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

7.2.1. Requirements in Relation to Electrostatics

Information on electrostatic hazards can be found in the technical specification IEC/TS 60079-32-1.

7.2.1.1. Requirements for Equipment Protection Level Da

Avoid electrostatic charges which could result in electrostatic discharges while installing or operating the device.

Do not mount the supplied nameplate in areas that can be electrostatically charged.

7.2.2. Requirements to Mechanics

7.2.2.1. Requirements for Usage as Intrinsically Safe Apparatus

Protect the device from impact effects by mounting in a surrounding enclosure if it is used in the temperature range between the minimum permissible ambient temperature and -20 °C.

Mount the device with at least a degree of protection of IP20 according to IEC/EN 60529.

8. Operation, Maintenance, Repair

Observe the special conditions.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Do not use a damaged or polluted device.

Do not repair, modify, or manipulate the device.

Modifications are permitted only if approved in this instruction manual.

If there is a defect, always replace the device with an original device.

Do not remove the warning markings.

8.1. Requirements for Usage as Intrinsically Safe Apparatus

Only operate the device with intrinsically safe circuits according to IEC/EN 60079-11.

The type of protection is determined by the connected intrinsically safe circuit.

8.2. Requirements for Equipment Protection Level Gb

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

8.3. Requirements for Equipment Protection Level Da

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

8.4. Requirements for Equipment Protection Level Mb

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

9. Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Keep the original packaging. Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

Disposing of device, packaging, and possibly contained batteries must be in compliance with the applicable laws and guidelines of the respective country.



Model Number

NJ10-22-N-E93-Y246869

Features

- Comfort series
- 10 mm non-flush

Technical Data

General specifications

Rated operating distance	s_n	10 mm
Installation		non-flush
Output polarity		NAMUR
Assured operating distance	s_a	0 ... 10 mm
Output type		2-wire

Nominal ratings

Nominal voltage	U_o	8 V
Switching frequency	f	0 ... 1000 Hz
Hysteresis	H	typ. 5 %
Current consumption		
Measuring plate not detected		≥ 3 mA
Measuring plate detected		≤ 1 mA

Ambient conditions

Ambient temperature	-40 ... 100 °C (-40 ... 212 °F)
	Also observe the maximum permissible ambient temperature stated in the data for application in connection with hazardous areas.
	Keep to the lower of the two values.

Mechanical specifications

Connection type	cable silicone , 10 m
Core cross-section	0.75 mm ²
Housing material	PBT
Sensing face	PBT
Degree of protection	IP68
Cable	
Bending radius	> 10 x cable diameter

General information

Use in the hazardous area	see instruction manuals
---------------------------	-------------------------


Compliance with standards and directives

Standard conformity	
NAMUR	EN 60947-5-6:2000 IEC 60947-5-6:1999
Standards	EN 60947-5-2:2007 EN 60947-5-2/A1:2012 IEC 60947-5-2:2007 IEC 60947-5-2 AMD 1:2012


Approvals and certificates

EAC conformity	TR CU 012/2011
UL approval	cULus Listed, General Purpose

Dimensions

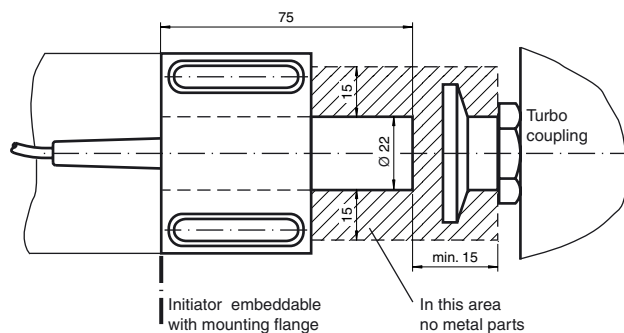

Electrical Connection



Data for application in connection with hazardous areas

Equipment protection level	Gb , Da , Mb	
Equipment protection level Gb		
Type of protection	intrinsic safety	
CE marking	CE 0102	
Certificates		
Appropriate type	NJ 10-22-N...	
ATEX certificate	PTB 00 ATEX 2048 X	
ATEX marking	Ex II 2G Ex ia IIC T6...T1 Gb	
Standards	EN 60079-0:2012+A11:2013 , EN 60079-11:2012	
IECEX certificate	IECEX PTB 11.0037X	
IECEX marking	Ex ib IIC T6	
Standards	IEC 60079-0:2004 , IEC 60079-11:2006	
Effective internal inductivity	C_i	$\leq 130 \text{ nF}$ A cable length of 10 m is considered.
Effective internal inductance	L_i	$\leq 100 \text{ }\mu\text{H}$ A cable length of 10 m is considered.
Maximum permissible ambient temperature T_{amb}	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. at $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 34 \text{ mW}$, T6 : 73 °C (163.4 °F) T5 : 88 °C (190.4 °F) T4 : 100 °C (212 °F) T3 : 100 °C (212 °F) T2 : 100 °C (212 °F) T1 : 100 °C (212 °F) at $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 64 \text{ mW}$, T6 : 69 °C (156.2 °F) T5 : 84 °C (183.2 °F) T4 : 100 °C (212 °F) T3 : 100 °C (212 °F) T2 : 100 °C (212 °F) T1 : 100 °C (212 °F) at $U_i = 16 \text{ V}$, $I_i = 52 \text{ mA}$, $P_i = 169 \text{ mW}$, T6 : 51 °C (123.8 °F) T5 : 66 °C (150.8 °F) T4 : 80 °C (176 °F) T3 : 80 °C (176 °F) T2 : 80 °C (176 °F) T1 : 80 °C (176 °F) at $U_i = 16 \text{ V}$, $I_i = 76 \text{ mA}$, $P_i = 242 \text{ mW}$, T6 : 39 °C (102.2 °F) T5 : 54 °C (129.2 °F) T4 : 61 °C (141.8 °F) T3 : 61 °C (141.8 °F) T2 : 61 °C (141.8 °F) T1 : 61 °C (141.8 °F)	

Equipment protection level Da

Type of protection	intrinsic safety	
CE marking	CE 0102	
Certificates		
Appropriate type	NJ 10-22-N...	
ATEX certificate	PTB 00 ATEX 2048 X	
ATEX marking	Ex II 1D Ex ia IIIC T135°C Da	
Standards	EN 60079-0:2012+A11:2013 , EN 60079-11:2012	
Effective internal inductivity	C_i	$\leq 130 \text{ nF}$ A cable length of 10 m is considered.
Effective internal inductance	L_i	$\leq 100 \text{ }\mu\text{H}$ A cable length of 10 m is considered.
Maximum permissible ambient temperature T_{amb}	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. at $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 34 \text{ mW}$: 100 °C (212 °F) at $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 64 \text{ mW}$: 100 °C (212 °F) at $U_i = 16 \text{ V}$, $I_i = 52 \text{ mA}$, $P_i = 169 \text{ mW}$: 80 °C (176 °F) at $U_i = 16 \text{ V}$, $I_i = 76 \text{ mA}$, $P_i = 242 \text{ mW}$: 61 °C (141.8 °F)	

Equipment protection level Mb

Type of protection	intrinsic safety	
Certificates		
Appropriate type	NJ 10-22-N...	
IECEX certificate	IECEX PTB 11.0037X	
IECEX marking	Ex ia I	
Standards	IEC 60079-0:2004 , IEC 60079-11:2006	
Effective internal inductivity	C_i	$\leq 130 \text{ nF}$ A cable length of 10 m is considered.
Effective internal inductance	L_i	$\leq 100 \text{ }\mu\text{H}$ A cable length of 10 m is considered.

Release date: 2017-12-13 09:46 Date of issue: 2017-12-13 246869_eng.xml

Maximum permissible ambient temperature T_{amb}

Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values.

at $U_i = 16\text{ V}$, $I_i = 25\text{ mA}$, $P_i = 34\text{ mW}$: 100 °C (212 °F)

at $U_i = 16\text{ V}$, $I_i = 25\text{ mA}$, $P_i = 64\text{ mW}$: 100 °C (212 °F)

at $U_i = 16\text{ V}$, $I_i = 52\text{ mA}$, $P_i = 169\text{ mW}$: 80 °C (176 °F)

at $U_i = 16\text{ V}$, $I_i = 76\text{ mA}$, $P_i = 242\text{ mW}$: 61 °C (141.8 °F)

Release date: 2017-12-13 09:46 Date of issue: 2017-12-13 246869_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

EU-Declaration of conformity

en/de

EU-Konformitätserklärung

Pepperl+Fuchs GmbH
Lilienthalstraße 200
68307 Mannheim
Germany
Phone +49 621 776-0
Fax +49 621 776-1000

No. / Nr.: DOC-3335
Date / Datum: 2017-01-26

Copyright Pepperl+Fuchs
www.pepperl-fuchs.com



ANNEX ATEX

Notified Body QM-System / Notifizierte Stelle des QM-Systems
Physikalisch Technische Bundesanstalt (0102)
Bundesallee 100
38116 Braunschweig
Germany

Marking and Certificates / Kennzeichnung und Zertifikate

Marking Kennzeichnung	Certificate Zertifikat	Issuer ID Aussteller ID
 	PTB 00 ATEX 2048 X	0102

Key for Issuer ID / Schlüssel zur Aussteller ID

ID	Issuer / Aussteller
0102	Physikalisch Technische Bundesanstalt Bundesallee 100 38116 Braunschweig Germany

Declaration of conformity / Konformitätserklärung

We, Pepperl+Fuchs GmbH declare under our sole responsibility that the **products** listed below are in conformity with the listed **European Directives** and **standards**.

Die Pepperl+Fuchs GmbH erklärt hiermit in alleiniger Verantwortung, dass die unten gelisteten **Produkte** den genannten **Europäischen Richtlinien** und **Normen** entsprechen.

Products / Produkte

Product / Produkt	Item number	Description / Beschreibung
NJ10-22-N-E93-Y246869	246869	Inductive sensor

Directives and Standards / Richtlinien und Normen

EU-Directive EU-Richtlinie	Standards Normen
ATEX 2014/34/EU (L96/309-356)	EN 60079-0/A11:2013-11 EN 60079-0:2012-08 EN 60079-11:2012-01
EMC 2014/30/EU (L96/79-106)	EN 60947-5-2/A1:2012-11 EN 60947-5-2:2007-12 EN 60947-5-6:2000-01

Affixed CE Marking / Angebrachte CE-Kennzeichnung



Signatures / Unterschriften

Mannheim, 2017-01-26

ppa. Wolfgang Helm
Director Business Unit Sensors

i.V. Tobias Dittmer
Global Product Manager

14.4 Initiator NJ 10-22-N-E93-Y245590 (2 m, new dust-Ex-marking)

Voith Material No.: 201.04312710

Operating Instructions	Pepperl+Fuchs
Technical Data	Pepperl+Fuchs
Declaration of Conformity	Pepperl+Fuchs

Instruction Manual

1. Marking

Inductive sensor NJ10-22-N-E93-Y245590
ATEX marking Ⓜ II 2G Ex ia IIC T6...T1 Gb Ⓜ II 1D Ex ia IIIC T ₂₀₀ 135°C Da
IECEX marking Ex ia IIC T6...T1 Gb Ex ia IIIC T ₂₀₀ 135°C Da Ex ia I Mb
Pepperl+Fuchs Group Lilienthalstraße 200, 68307 Mannheim, Germany
Internet: www.pepperl-fuchs.com

2. Validity

Specific processes and instructions in this instruction manual require special provisions to guarantee the safety of the operating personnel.

3. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.

The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the device. The trained and qualified personnel must have read and understood the instruction manual.

4. Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location. Observe Directive 1999/92/EC in relation to hazardous areas.

The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable (see datasheet) are an integral part of this document. You can find this information under www.pepperl-fuchs.com.

For specific device information, scan the QR code on the device or enter the serial number in the serial number search at www.pepperl-fuchs.com. Due to constant revisions, documentation is subject to permanent change. Please refer only to the most up-to-date version, which can be found under www.pepperl-fuchs.com.

5. Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

Technical data provided in the datasheet may be partly restrained by the information given in this instruction manual.

Use the device only within the specified ambient and operating conditions.

The device is an electrical apparatus for hazardous areas.

The certificate applies only to the use of apparatus under atmospheric conditions.

If you use the device outside atmospheric conditions, consider that the permissible safety parameters should be reduced.

The device can be used in hazardous areas containing gas, vapor, and mist.

The device can be used in hazardous areas containing combustible dust.

The device can be used in underground parts of mines as well as those parts of surface installations of such mines containing firedamp and/or combustible dust.

5.1. Requirements for Equipment Protection Level Gb

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures >60 °C in conjunction with hot surfaces has been checked by the notified body.

5.2. Requirements for Equipment Protection Level Da

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures >60 °C in conjunction with hot surfaces has been checked by the notified body.

5.3. Requirements for Equipment Protection Level Mb

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures >60 °C in conjunction with hot surfaces has been checked by the notified body.

6. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

7. Mounting and Installation

Observe the installation instructions according to IEC/EN 60079-14.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Attach the nameplate supplied in the immediate vicinity of the device. Attach the nameplate so that it is legible and indelible. Take the ambient conditions into account.

Do not mount a damaged or polluted device.

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

If you use the device in environments subject to adverse conditions, you must protect the device accordingly.

Do not remove the warning markings.

7.1. Requirements for Usage as Intrinsically Safe Apparatus

When connecting intrinsically safe devices with intrinsically safe circuits of associated apparatus, observe the maximum peak values with regard to explosion protection (verification of intrinsic safety). Observe the standards IEC/EN 60079-14 or IEC/EN 60079-25.

The type of protection is determined by the connected intrinsically safe circuit.

7.2. Specific Conditions of Use

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

7.2.1. Requirements in Relation to Electrostatics

Information on electrostatic hazards can be found in the technical specification IEC/TS 60079-32-1.

Do not mount the supplied nameplate in areas that can be electrostatically charged.

You can reduce the electrostatic hazards by minimizing the generation of static electricity. For example, you have the following options to minimize the generation of static electricity:

- Control the environmental humidity.
- Protect the device from direct airflow.
- Ensure a continuous drain off of the electrostatic charges.

7.2.1.1. Requirements for Equipment Protection Level Da

Avoid electrostatic charges which could result in electrostatic discharges while installing, operating, or maintaining the device.

7.2.2. Requirements to Mechanics

7.2.2.1. Requirements for Usage as Intrinsically Safe Apparatus

Protect the device from impact effects by mounting in a surrounding enclosure if it is used in the temperature range between the minimum permissible ambient temperature and -20 °C.

Mount the device with at least a degree of protection of IP20 according to IEC/EN 60529.

8. Operation, Maintenance, Repair

Observe the specific conditions of use.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Do not use a damaged or polluted device.

Do not repair, modify, or manipulate the device.

Modifications are permitted only if approved in this instruction manual and in the device-related documentation.

If there is a defect, always replace the device with an original device.

Do not remove the warning markings.

8.1. Requirements for Usage as Intrinsically Safe Apparatus

Only operate the device with intrinsically safe circuits according to IEC/EN 60079-11.

The type of protection is determined by the connected intrinsically safe circuit.

8.2. Requirements for Equipment Protection Level Gb

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

8.3. Requirements for Equipment Protection Level Da

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

8.4. Requirements for Equipment Protection Level Mb

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

9. Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Keep the original packaging. Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

The device, built-in components, packaging, and any batteries contained within must be disposed in compliance with the applicable laws and guidelines of the respective country.

10. National Ex approvals

EAC-EX:	TC RU C-DE.AA87.B.00394
---------	-------------------------

11. Safety-Relevant Technical Data

11.1. Equipment protection level Gb

Type of protection	Intrinsic safety
CE marking	CE-0102
Certificates	
Appropriate type	NJ10-22-N...
ATEX certificate	PTB 00 ATEX 2048 X
ATEX marking	Ⓜ II 2G Ex ia IIC T6...T1 Gb
ATEX standards	EN IEC 60079-0:2018-07, EN 60079-11:2012-01
IECEX certificate	IECEX PTB 11.0037X
IECEX marking	Ex ia IIC T6...T1 Gb
IECEX standards	IEC 60079-0:2017-12, IEC 60079-11:2011-06
Effective internal capacitance C_i	max. 130 nF A cable length of 10 m is considered.
Effective internal inductance L_i	max. 100 μH A cable length of 10 m is considered.

Maximum permissible ambient temperature in °C	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 34 \text{ mW}$ T6: 73 °C T5: 88 °C T4: 100 °C T3: 100 °C T2: 100 °C T1: 100 °C $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 64 \text{ mW}$ T6: 69 °C T5: 84 °C T4: 100 °C T3: 100 °C T2: 100 °C T1: 100 °C $U_i = 16 \text{ V}$, $I_i = 52 \text{ mA}$, $P_i = 169 \text{ mW}$ T6: 51 °C T5: 66 °C T4: 80 °C T3: 80 °C T2: 80 °C T1: 80 °C $U_i = 16 \text{ V}$, $I_i = 76 \text{ mA}$, $P_i = 242 \text{ mW}$ T6: 39 °C T5: 54 °C T4: 61 °C T3: 61 °C T2: 61 °C T1: 61 °C
---	---

11.2. Equipment protection level Da

Type of protection	Intrinsic safety
CE marking	CE-0102
Certificates	
Appropriate type	NJ10-22-N...
ATEX certificate	PTB 00 ATEX 2048 X
ATEX marking	Ⓜ II 1D Ex ia IIIC T ₂₀₀ 135°C Da
ATEX standards	EN IEC 60079-0:2018-07, EN 60079-11:2012-01
IECEX certificate	IECEX PTB 11.0037X
IECEX marking	Ex ia IIIC T ₂₀₀ 135°C Da
IECEX standards	IEC 60079-0:2017-12, IEC 60079-11:2011-06
Effective internal capacitance C_i	max. 130 nF A cable length of 10 m is considered.
Effective internal inductance L_i	max. 100 μH A cable length of 10 m is considered.
Maximum permissible ambient temperature in °C	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 34 \text{ mW}$ 100 °C $U_i = 16 \text{ V}$, $I_i = 25 \text{ mA}$, $P_i = 64 \text{ mW}$ 100 °C $U_i = 16 \text{ V}$, $I_i = 52 \text{ mA}$, $P_i = 169 \text{ mW}$ 62 °C

11.3. Equipment protection level Mb

Type of protection	Intrinsic safety
Certificates	
Appropriate type	NJ10-22-N...
IECEX certificate	IECEX PTB 11.0037X
IECEX marking	Ex ia I Mb

IECEX standards	IEC 60079-0:2017-12, IEC 60079-11:2011-06
Effective internal capacitance C_i	max. 130 nF A cable length of 10 m is considered.
Effective internal inductance L_i	max. 100 μ H A cable length of 10 m is considered.
Maximum permissible ambient temperature in $^{\circ}$ C	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. $U_i = 16$ V, $I_i = 25$ mA, $P_i = 34$ mW 100 $^{\circ}$ C $U_i = 16$ V, $I_i = 25$ mA, $P_i = 64$ mW 100 $^{\circ}$ C $U_i = 16$ V, $I_i = 52$ mA, $P_i = 169$ mW 80 $^{\circ}$ C $U_i = 16$ V, $I_i = 76$ mA, $P_i = 242$ mW 61 $^{\circ}$ C


Inductive sensor

NJ10-22-N-E93-Y245590

■ Comfort series



Dimensions

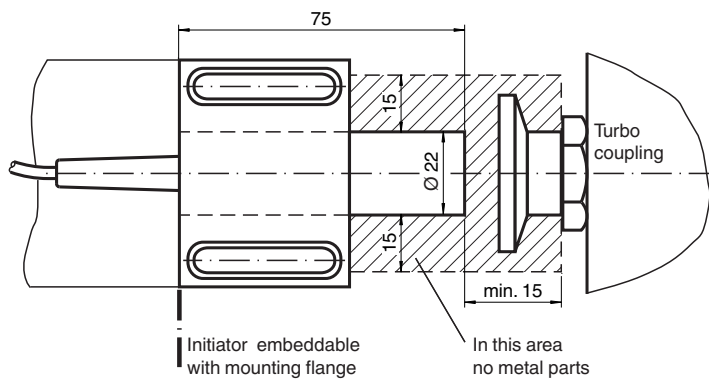

Technical Data

General specifications		
Switching function		Normally closed (NC)
Output type		NAMUR
Rated operating distance	s_n	10 mm
Installation		non-flush
Assured operating distance	s_a	0 ... 10 mm
Output type		2-wire
Nominal ratings		
Nominal voltage	U_o	8.2 V (R_i approx. 1 k Ω)
Switching frequency	f	0 ... 1000 Hz
Hysteresis	H	typ. 5 %
Current consumption		
Measuring plate not detected		min. 3 mA
Measuring plate detected		≤ 1 mA
Functional safety related parameters		
MTTF _d		3602 a
Mission Time (T_M)		20 a
Diagnostic Coverage (DC)		0 %
Compliance with standards and directives		
Standard conformity		
NAMUR		EN 60947-5-6:2000 IEC 60947-5-6:1999

Release date: 2021-06-21 Date of issue: 2021-06-21 Filename: 70133281_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

PF PEPPERL+FUCHS

Technical Data

Standards	EN 60947-5-2:2007 EN 60947-5-2/A1:2012 IEC 60947-5-2:2007 IEC 60947-5-2 AMD 1:2012	
Approvals and certificates		
IECEX approval		
Equipment protection level Gb		IECEX PTB 11.0037X
Equipment protection level Da		IECEX PTB 11.0037X
Equipment protection level Mb		IECEX PTB 11.0037X
ATEX approval		
Equipment protection level Gb		PTB 00 ATEX 2048 X
Equipment protection level Da		PTB 00 ATEX 2048 X
EAC conformity		TR CU 012/2011
UL approval		cULus Listed, General Purpose
Ambient conditions		
Ambient temperature	-40 ... 100 °C (-40 ... 212 °F) Also observe the maximum permissible ambient temperature stated in the data for application in connection with hazardous areas. Keep to the lower of the two values.	
Mechanical specifications		
Connection type	cable	
Housing material	PBT	
Sensing face	PBT	
Degree of protection	IP68	
Cable		
Cable diameter	6 mm ± 0.2 mm	
Bending radius	> 10 x cable diameter	
Material	silicone	
Core cross-section	0.75 mm ²	
Length	L	2 m
General information		
Use in the hazardous area	see instruction manuals	

Connection

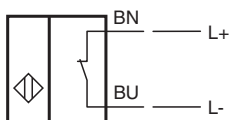

Release date: 2021-06-21 Date of issue: 2021-06-21 Filename: 70133281_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

 PEPPERL+FUCHS

Pepperl+Fuchs SE
Lilienthalstraße 200
68307 Mannheim
Germany
Phone +49 621 776-0
Fax +49 621 776-1000

No. / Nr.: DOC-5073
Date / Datum: 2021-07-21

Copyright Pepperl+Fuchs
www.pepperl-fuchs.com



Declaration of conformity / Konformitätserklärung

We, Pepperl+Fuchs SE declare under our sole responsibility that the **products** listed below are in conformity with the listed **European Directives** and **standards**.

Die Pepperl+Fuchs SE erklärt hiermit in alleiniger Verantwortung, dass die unten gelisteten **Produkte** den genannten **Europäischen Richtlinien** und **Normen** entsprechen.

Products / Produkte

Product / Produkt	Item number	Description / Beschreibung
NJ2-12GK-N-Y40110	70133235	Inductive sensor
NJ2-12GK-N-10M-Y89552	70133232	Inductive sensor
NJ2-12GK-N-25M	70133233	Inductive sensor
NJ2-12GK-N-5M	70133234	Inductive sensor
NJ2-12GM-N-Y08766	70133239	Inductive sensor
NJ2-12GM-N-Y10638	70133240	Inductive sensor
NJ2-14GM-N-C50	70133255	Inductive sensor
NJ2-14GM-N-V1-Y19784	70133256	Inductive sensor
NJ2,5-14GM-N-V1-Y21146	70133054	Inductive sensor
NJ25-50-N	70133327	Inductive sensor
NJ10-30GK-N-5M	70133311	Inductive sensor
NJ25-50-N-15M	70133328	Inductive sensor
NJ15-30GK-N	70133073	Inductive sensor
NJ25-50-N-5M	70133329	Inductive sensor
NJ15-30GK-N	70133317	Inductive sensor
NJ15-30GK-N-Y08943	70133320	Inductive sensor
NJ15-30GK-N-10M	70133074	Inductive sensor
NJ15-30GK-N-20M	70133318	Inductive sensor
NJ15-30GK-N-30M	70133319	Inductive sensor
NJ20-40-N	70133323	Inductive sensor
NJ2-11-N-G-Y102883	70133198	Inductive sensor
NJ2-11-N-G-910	70133196	Inductive sensor
NJ10-22-N	70133280	Inductive sensor
NJ10-22-N-E93-Y245590	70133281	Inductive sensor
NJ10-22-N-E93-Y246868	70133282	Inductive sensor
NJ10-22-N-E93-Y246869	70133283	Inductive sensor
NJ10-22-N-G	70133284	Inductive sensor

Product / Produkt	Item number	Description / Beschreibung
NJ10-22-N-G-5M	70133285	Inductive sensor
NJ10-30GK-N	70133308	Inductive sensor
NJ10-30GK-N	70133309	Inductive sensor
NJ10-30GK-N-15M	70133310	Inductive sensor
NJ2-11-N-Y14235	70133202	Inductive sensor
NJ2-12GK-N	70133049	Inductive sensor

Directives and Standards / Richtlinien und Normen

EU-Directive EU-Richtlinie	Standards Normen
ATEX 2014/34/EU (L96/309-356)	EN 60079-11:2012-01 EN IEC 60079-0:2018-07
EMC 2014/30/EU (L96/79-106)	EN 60947-5-2/A1:2012-11 EN 60947-5-2:2007-12 EN 60947-5-6:2000-01 EN IEC 60947-5-2:2020-03
RoHS 2011/65/EU (L174/88-110)	EN IEC 63000:2018-12

Affixed CE Marking / Angebrachte CE-Kennzeichnung



Signatures / Unterschriften

Mannheim, 2021-07-21

i.V. Ulrich Ehrenfried

Head of Innovation Unit Electromagnetic
Sensors

i.V. Tobias Dittmer

Global Product Manager

ANNEX ATEX

Notified Body QM-System / Notifizierte Stelle des QM-Systems
Physikalisch Technische Bundesanstalt (0102)
Bundesallee 100
38116 Braunschweig
Germany

Marking and Certificates / Kennzeichnung und Zertifikate

Marking Kennzeichnung	Certificate Zertifikat	Issuer ID Aussteller ID
II 1 D II 2 G	PTB 00 ATEX 2048 X	0102

Key for Issuer ID / Schlüssel zur Aussteller ID

ID	Issuer / Aussteller
0102	Physikalisch Technische Bundesanstalt Bundesallee 100 38116 Braunschweig Germany

14.5 Initiator NJ 10-22-N-E93-Y246868 (5 m, new dust-Ex-marking)

Voith Material No.: 201.04312810

Operating Instructions	Pepperl+Fuchs
Technical Data	Pepperl+Fuchs
Declaration of Conformity	Pepperl+Fuchs

Instruction Manual

1. Marking

Inductive sensor NJ10-22-N-E93-Y246868
ATEX marking Ⓜ II 2G Ex ia IIC T6...T1 Gb Ⓜ II 1D Ex ia IIIC T ₂₀₀ 135°C Da
IECEx marking Ex ia IIC T6...T1 Gb Ex ia IIIC T ₂₀₀ 135°C Da Ex ia I Mb
Pepperl+Fuchs Group Lilienthalstraße 200, 68307 Mannheim, Germany
Internet: www.pepperl-fuchs.com

2. Validity

Specific processes and instructions in this instruction manual require special provisions to guarantee the safety of the operating personnel.

3. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.

The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the device. The trained and qualified personnel must have read and understood the instruction manual.

4. Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location. Observe Directive 1999/92/EC in relation to hazardous areas.

The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable (see datasheet) are an integral part of this document. You can find this information under www.pepperl-fuchs.com.

For specific device information, scan the QR code on the device or enter the serial number in the serial number search at www.pepperl-fuchs.com. Due to constant revisions, documentation is subject to permanent change. Please refer only to the most up-to-date version, which can be found under www.pepperl-fuchs.com.

5. Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

Technical data provided in the datasheet may be partly restrained by the information given in this instruction manual.

Use the device only within the specified ambient and operating conditions.

The device is an electrical apparatus for hazardous areas.

The certificate applies only to the use of apparatus under atmospheric conditions.

If you use the device outside atmospheric conditions, consider that the permissible safety parameters should be reduced.

The device can be used in hazardous areas containing gas, vapor, and mist.

The device can be used in hazardous areas containing combustible dust.

The device can be used in underground parts of mines as well as those parts of surface installations of such mines containing firedamp and/or combustible dust.

5.1. Requirements for Equipment Protection Level Gb

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures >60 °C in conjunction with hot surfaces has been checked by the notified body.

5.2. Requirements for Equipment Protection Level Da

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures >60 °C in conjunction with hot surfaces has been checked by the notified body.

5.3. Requirements for Equipment Protection Level Mb

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures >60 °C in conjunction with hot surfaces has been checked by the notified body.

6. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

7. Mounting and Installation

Observe the installation instructions according to IEC/EN 60079-14.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Attach the nameplate supplied in the immediate vicinity of the device. Attach the nameplate so that it is legible and indelible. Take the ambient conditions into account.

Do not mount a damaged or polluted device.

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

If you use the device in environments subject to adverse conditions, you must protect the device accordingly.

Do not remove the warning markings.

7.1. Requirements for Usage as Intrinsically Safe Apparatus

When connecting intrinsically safe devices with intrinsically safe circuits of associated apparatus, observe the maximum peak values with regard to explosion protection (verification of intrinsic safety). Observe the standards IEC/EN 60079-14 or IEC/EN 60079-25.

The type of protection is determined by the connected intrinsically safe circuit.

7.2. Specific Conditions of Use

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

7.2.1. Requirements in Relation to Electrostatics

Information on electrostatic hazards can be found in the technical specification IEC/TS 60079-32-1.

Do not mount the supplied nameplate in areas that can be electrostatically charged.

You can reduce the electrostatic hazards by minimizing the generation of static electricity. For example, you have the following options to minimize the generation of static electricity:

- Control the environmental humidity.
- Protect the device from direct airflow.
- Ensure a continuous drain off of the electrostatic charges.

7.2.1.1. Requirements for Equipment Protection Level Da

Avoid electrostatic charges which could result in electrostatic discharges while installing, operating, or maintaining the device.

7.2.2. Requirements to Mechanics

7.2.2.1. Requirements for Usage as Intrinsically Safe Apparatus

Protect the device from impact effects by mounting in a surrounding enclosure if it is used in the temperature range between the minimum permissible ambient temperature and -20 °C.

Mount the device with at least a degree of protection of IP20 according to IEC/EN 60529.

8. Operation, Maintenance, Repair

Observe the specific conditions of use.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Do not use a damaged or polluted device.

Do not repair, modify, or manipulate the device.

Modifications are permitted only if approved in this instruction manual and in the device-related documentation.

If there is a defect, always replace the device with an original device.

Do not remove the warning markings.

8.1. Requirements for Usage as Intrinsically Safe Apparatus

Only operate the device with intrinsically safe circuits according to IEC/EN 60079-11.

The type of protection is determined by the connected intrinsically safe circuit.

8.2. Requirements for Equipment Protection Level Gb

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

8.3. Requirements for Equipment Protection Level Da

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

8.4. Requirements for Equipment Protection Level Mb

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

9. Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Keep the original packaging. Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

The device, built-in components, packaging, and any batteries contained within must be disposed in compliance with the applicable laws and guidelines of the respective country.

10. National Ex approvals

EAC-EX:	TC RU C-DE.AA87.B.00394
---------	-------------------------

11. Safety-Relevant Technical Data

11.1. Equipment protection level Gb

Type of protection	Intrinsic safety
CE marking	CE-0102
Certificates	
Appropriate type	NJ10-22-N...
ATEX certificate	PTB 00 ATEX 2048 X
ATEX marking	Ⓜ II 2G Ex ia IIC T6...T1 Gb
ATEX standards	EN IEC 60079-0:2018-07, EN 60079-11:2012-01
IECEX certificate	IECEX PTB 11.0037X
IECEX marking	Ex ia IIC T6...T1 Gb
IECEX standards	IEC 60079-0:2017-12, IEC 60079-11:2011-06
Effective internal capacitance C_i	max. 130 nF A cable length of 10 m is considered.
Effective internal inductance L_i	max. 100 μ H A cable length of 10 m is considered.

Maximum permissible ambient temperature in °C	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. $U_i = 16$ V, $I_i = 25$ mA, $P_i = 34$ mW T6: 73 °C T5: 88 °C T4: 100 °C T3: 100 °C T2: 100 °C T1: 100 °C $U_i = 16$ V, $I_i = 25$ mA, $P_i = 64$ mW T6: 69 °C T5: 84 °C T4: 100 °C T3: 100 °C T2: 100 °C T1: 100 °C $U_i = 16$ V, $I_i = 52$ mA, $P_i = 169$ mW T6: 51 °C T5: 66 °C T4: 80 °C T3: 80 °C T2: 80 °C T1: 80 °C $U_i = 16$ V, $I_i = 76$ mA, $P_i = 242$ mW T6: 39 °C T5: 54 °C T4: 61 °C T3: 61 °C T2: 61 °C T1: 61 °C
---	---

11.2. Equipment protection level Da

Type of protection	Intrinsic safety
CE marking	CE-0102
Certificates	
Appropriate type	NJ10-22-N...
ATEX certificate	PTB 00 ATEX 2048 X
ATEX marking	Ⓜ II 1D Ex ia IIIC T ₂₀₀ 135°C Da
ATEX standards	EN IEC 60079-0:2018-07, EN 60079-11:2012-01
IECEX certificate	IECEX PTB 11.0037X
IECEX marking	Ex ia IIIC T ₂₀₀ 135°C Da
IECEX standards	IEC 60079-0:2017-12, IEC 60079-11:2011-06
Effective internal capacitance C_i	max. 130 nF A cable length of 10 m is considered.
Effective internal inductance L_i	max. 100 μ H A cable length of 10 m is considered.
Maximum permissible ambient temperature in °C	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. $U_i = 16$ V, $I_i = 25$ mA, $P_i = 34$ mW 100 °C $U_i = 16$ V, $I_i = 25$ mA, $P_i = 64$ mW 100 °C $U_i = 16$ V, $I_i = 52$ mA, $P_i = 169$ mW 62 °C

11.3. Equipment protection level Mb

Type of protection	Intrinsic safety
Certificates	
Appropriate type	NJ10-22-N...
IECEX certificate	IECEX PTB 11.0037X
IECEX marking	Ex ia I Mb

IECEX standards	IEC 60079-0:2017-12, IEC 60079-11:2011-06
Effective internal capacitance C_i	max. 130 nF A cable length of 10 m is considered.
Effective internal inductance L_i	max. 100 μ H A cable length of 10 m is considered.
Maximum permissible ambient temperature in $^{\circ}$ C	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. $U_i = 16$ V, $I_i = 25$ mA, $P_i = 34$ mW 100 $^{\circ}$ C $U_i = 16$ V, $I_i = 25$ mA, $P_i = 64$ mW 100 $^{\circ}$ C $U_i = 16$ V, $I_i = 52$ mA, $P_i = 169$ mW 80 $^{\circ}$ C $U_i = 16$ V, $I_i = 76$ mA, $P_i = 242$ mW 61 $^{\circ}$ C


Inductive sensor

NJ10-22-N-E93-Y246868

■ Comfort series



Dimensions

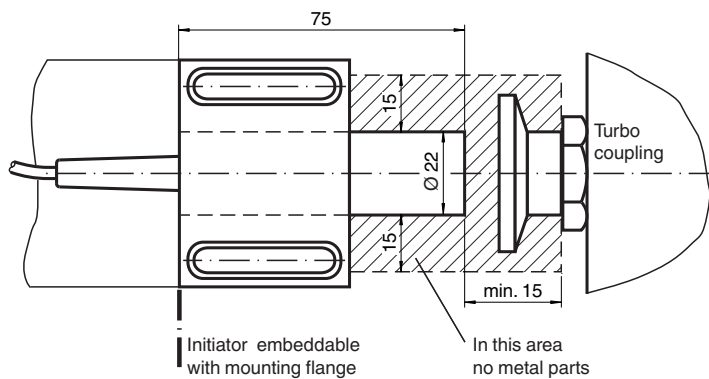

Technical Data

General specifications		
Switching function		Normally closed (NC)
Output type		NAMUR
Rated operating distance	s_n	10 mm
Installation		non-flush
Assured operating distance	s_a	0 ... 10 mm
Output type		2-wire
Nominal ratings		
Nominal voltage	U_o	8.2 V (R_i approx. 1 k Ω)
Switching frequency	f	0 ... 1000 Hz
Hysteresis	H	typ. 5 %
Current consumption		
Measuring plate not detected		min. 3 mA
Measuring plate detected		≤ 1 mA
Functional safety related parameters		
MTTF _d		3602 a
Mission Time (T_M)		20 a
Diagnostic Coverage (DC)		0 %
Compliance with standards and directives		
Standard conformity		
NAMUR		EN 60947-5-6:2000 IEC 60947-5-6:1999

Release date: 2021-06-21 Date of issue: 2021-06-21 Filename: 70133282_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

PF PEPPERL+FUCHS

Technical Data

Standards	EN 60947-5-2:2007 EN 60947-5-2/A1:2012 IEC 60947-5-2:2007 IEC 60947-5-2 AMD 1:2012	
Approvals and certificates		
IECEX approval		
Equipment protection level Gb		IECEX PTB 11.0037X
Equipment protection level Da		IECEX PTB 11.0037X
Equipment protection level Mb		IECEX PTB 11.0037X
ATEX approval		
Equipment protection level Gb		PTB 00 ATEX 2048 X
Equipment protection level Da		PTB 00 ATEX 2048 X
EAC conformity		TR CU 012/2011
UL approval		cULus Listed, General Purpose
Ambient conditions		
Ambient temperature	-40 ... 100 °C (-40 ... 212 °F) Also observe the maximum permissible ambient temperature stated in the data for application in connection with hazardous areas. Keep to the lower of the two values.	
Mechanical specifications		
Connection type	cable	
Housing material	PBT	
Sensing face	PBT	
Degree of protection	IP68	
Cable		
Cable diameter	6 mm ± 0.2 mm	
Bending radius	> 10 x cable diameter	
Material	silicone	
Core cross-section	0.75 mm ²	
Length	L	5 m
General information		
Use in the hazardous area	see instruction manuals	

Connection

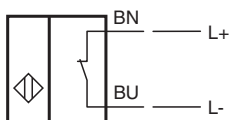

Release date: 2021-06-21 Date of issue: 2021-06-21 Filename: 70133282_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

 **PEPPERL+FUCHS**

Pepperl+Fuchs SE
Lilienthalstraße 200
68307 Mannheim
Germany
Phone +49 621 776-0
Fax +49 621 776-1000

No. / Nr.: DOC-5073
Date / Datum: 2021-07-21

Copyright Pepperl+Fuchs
www.pepperl-fuchs.com



Declaration of conformity / Konformitätserklärung

We, Pepperl+Fuchs SE declare under our sole responsibility that the **products** listed below are in conformity with the listed **European Directives** and **standards**.

Die Pepperl+Fuchs SE erklärt hiermit in alleiniger Verantwortung, dass die unten gelisteten **Produkte** den genannten **Europäischen Richtlinien** und **Normen** entsprechen.

Products / Produkte

Product / Produkt	Item number	Description / Beschreibung
NJ2-12GK-N-Y40110	70133235	Inductive sensor
NJ2-12GK-N-10M-Y89552	70133232	Inductive sensor
NJ2-12GK-N-25M	70133233	Inductive sensor
NJ2-12GK-N-5M	70133234	Inductive sensor
NJ2-12GM-N-Y08766	70133239	Inductive sensor
NJ2-12GM-N-Y10638	70133240	Inductive sensor
NJ2-14GM-N-C50	70133255	Inductive sensor
NJ2-14GM-N-V1-Y19784	70133256	Inductive sensor
NJ2,5-14GM-N-V1-Y21146	70133054	Inductive sensor
NJ25-50-N	70133327	Inductive sensor
NJ10-30GK-N-5M	70133311	Inductive sensor
NJ25-50-N-15M	70133328	Inductive sensor
NJ15-30GKK-N	70133073	Inductive sensor
NJ25-50-N-5M	70133329	Inductive sensor
NJ15-30GK-N	70133317	Inductive sensor
NJ15-30GK-N-Y08943	70133320	Inductive sensor
NJ15-30GK-N-10M	70133074	Inductive sensor
NJ15-30GK-N-20M	70133318	Inductive sensor
NJ15-30GK-N-30M	70133319	Inductive sensor
NJ20-40-N	70133323	Inductive sensor
NJ2-11-N-G-Y102883	70133198	Inductive sensor
NJ2-11-N-G-910	70133196	Inductive sensor
NJ10-22-N	70133280	Inductive sensor
NJ10-22-N-E93-Y245590	70133281	Inductive sensor
NJ10-22-N-E93-Y246868	70133282	Inductive sensor
NJ10-22-N-E93-Y246869	70133283	Inductive sensor
NJ10-22-N-G	70133284	Inductive sensor

Product / Produkt	Item number	Description / Beschreibung
NJ10-22-N-G-5M	70133285	Inductive sensor
NJ10-30GKK-N	70133308	Inductive sensor
NJ10-30GK-N	70133309	Inductive sensor
NJ10-30GK-N-15M	70133310	Inductive sensor
NJ2-11-N-Y14235	70133202	Inductive sensor
NJ2-12GK-N	70133049	Inductive sensor

Directives and Standards / Richtlinien und Normen

EU-Directive EU-Richtlinie	Standards Normen
ATEX 2014/34/EU (L96/309-356)	EN 60079-11:2012-01 EN IEC 60079-0:2018-07
EMC 2014/30/EU (L96/79-106)	EN 60947-5-2/A1:2012-11 EN 60947-5-2:2007-12 EN 60947-5-6:2000-01 EN IEC 60947-5-2:2020-03
RoHS 2011/65/EU (L174/88-110)	EN IEC 63000:2018-12

Affixed CE Marking / Angebrachte CE-Kennzeichnung



Signatures / Unterschriften

Mannheim, 2021-07-21

i.V. Ulrich Ehrenfried

Head of Innovation Unit Electromagnetic
Sensors

i.V. Tobias Dittmer

Global Product Manager

ANNEX ATEX

Notified Body QM-System / Notifizierte Stelle des QM-Systems
Physikalisch Technische Bundesanstalt (0102)
Bundesallee 100
38116 Braunschweig
Germany

Marking and Certificates / Kennzeichnung und Zertifikate

Marking Kennzeichnung	Certificate Zertifikat	Issuer ID Aussteller ID
II 1 D II 2 G	PTB 00 ATEX 2048 X	0102

Key for Issuer ID / Schlüssel zur Aussteller ID

ID	Issuer / Aussteller
0102	Physikalisch Technische Bundesanstalt Bundesallee 100 38116 Braunschweig Germany

14.6 Initiator NJ 10-22-N-E93-Y246869 (10 m, new dust-Ex-marking)

Voith Material No.: 201.04312910

Operating Instructions	Pepperl+Fuchs
Technical Data	Pepperl+Fuchs
Declaration of Conformity	Pepperl+Fuchs

Instruction Manual

1. Marking

Inductive sensor NJ10-22-N-E93-Y246869
ATEX marking Ⓜ II 2G Ex ia IIC T6...T1 Gb Ⓜ II 1D Ex ia IIIC T ₂₀₀ 135°C Da
IECEX marking Ex ia IIC T6...T1 Gb Ex ia IIIC T ₂₀₀ 135°C Da Ex ia I Mb
Pepperl+Fuchs Group Lilienthalstraße 200, 68307 Mannheim, Germany
Internet: www.pepperl-fuchs.com

2. Validity

Specific processes and instructions in this instruction manual require special provisions to guarantee the safety of the operating personnel.

3. Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator.

The personnel must be appropriately trained and qualified in order to carry out mounting, installation, commissioning, operation, maintenance, and dismantling of the device. The trained and qualified personnel must have read and understood the instruction manual.

4. Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location. Observe Directive 1999/92/EC in relation to hazardous areas.

The corresponding datasheets, manuals, declarations of conformity, EU-type examination certificates, certificates, and control drawings if applicable (see datasheet) are an integral part of this document. You can find this information under www.pepperl-fuchs.com.

For specific device information, scan the QR code on the device or enter the serial number in the serial number search at www.pepperl-fuchs.com. Due to constant revisions, documentation is subject to permanent change. Please refer only to the most up-to-date version, which can be found under www.pepperl-fuchs.com.

5. Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

Technical data provided in the datasheet may be partly restrained by the information given in this instruction manual.

Use the device only within the specified ambient and operating conditions.

The device is an electrical apparatus for hazardous areas.

The certificate applies only to the use of apparatus under atmospheric conditions.

If you use the device outside atmospheric conditions, consider that the permissible safety parameters should be reduced.

The device can be used in hazardous areas containing gas, vapor, and mist.

The device can be used in hazardous areas containing combustible dust.

The device can be used in underground parts of mines as well as those parts of surface installations of such mines containing firedamp and/or combustible dust.

5.1. Requirements for Equipment Protection Level Gb

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures >60 °C in conjunction with hot surfaces has been checked by the notified body.

5.2. Requirements for Equipment Protection Level Da

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures >60 °C in conjunction with hot surfaces has been checked by the notified body.

5.3. Requirements for Equipment Protection Level Mb

Refer to the relevant certificate to see the relationship between the connected circuit type, the maximum permitted ambient temperature, the effective inner reactances, and if applicable the surface temperature or the temperature class.

The suitability for use of the device at ambient temperatures >60 °C in conjunction with hot surfaces has been checked by the notified body.

6. Improper Use

Protection of the personnel and the plant is not ensured if the device is not used according to its intended use.

7. Mounting and Installation

Observe the installation instructions according to IEC/EN 60079-14.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Attach the nameplate supplied in the immediate vicinity of the device. Attach the nameplate so that it is legible and indelible. Take the ambient conditions into account.

Do not mount a damaged or polluted device.

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

If you use the device in environments subject to adverse conditions, you must protect the device accordingly.

Do not remove the warning markings.

7.1. Requirements for Usage as Intrinsically Safe Apparatus

When connecting intrinsically safe devices with intrinsically safe circuits of associated apparatus, observe the maximum peak values with regard to explosion protection (verification of intrinsic safety). Observe the standards IEC/EN 60079-14 or IEC/EN 60079-25.

The type of protection is determined by the connected intrinsically safe circuit.

7.2. Specific Conditions of Use

Mount the device so that it complies with the specified degree of protection according to IEC/EN 60529.

7.2.1. Requirements in Relation to Electrostatics

Information on electrostatic hazards can be found in the technical specification IEC/TS 60079-32-1.

Do not mount the supplied nameplate in areas that can be electrostatically charged.

You can reduce the electrostatic hazards by minimizing the generation of static electricity. For example, you have the following options to minimize the generation of static electricity:

- Control the environmental humidity.
- Protect the device from direct airflow.
- Ensure a continuous drain off of the electrostatic charges.

7.2.1.1. Requirements for Equipment Protection Level Da

Avoid electrostatic charges which could result in electrostatic discharges while installing, operating, or maintaining the device.

7.2.2. Requirements to Mechanics

7.2.2.1. Requirements for Usage as Intrinsically Safe Apparatus

Protect the device from impact effects by mounting in a surrounding enclosure if it is used in the temperature range between the minimum permissible ambient temperature and -20 °C.

Mount the device with at least a degree of protection of IP20 according to IEC/EN 60529.

8. Operation, Maintenance, Repair

Observe the specific conditions of use.

Safety-relevant markings are found on the nameplate of the device or the nameplate supplied.

Do not use a damaged or polluted device.

Do not repair, modify, or manipulate the device.

Modifications are permitted only if approved in this instruction manual and in the device-related documentation.

If there is a defect, always replace the device with an original device.

Do not remove the warning markings.

8.1. Requirements for Usage as Intrinsically Safe Apparatus

Only operate the device with intrinsically safe circuits according to IEC/EN 60079-11.

The type of protection is determined by the connected intrinsically safe circuit.

8.2. Requirements for Equipment Protection Level Gb

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

8.3. Requirements for Equipment Protection Level Da

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

8.4. Requirements for Equipment Protection Level Mb

Observe the temperature table for the corresponding equipment protection level in the certificate.

Also observe the maximum permissible ambient temperature stated in the technical data. Keep to the lower of the two values.

9. Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Keep the original packaging. Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions must be considered, see datasheet.

The device, built-in components, packaging, and any batteries contained within must be disposed in compliance with the applicable laws and guidelines of the respective country.

10. National Ex approvals

EAC-EX:	TC RU C-DE.AA87.B.00394
---------	-------------------------

11. Safety-Relevant Technical Data

11.1. Equipment protection level Gb

Type of protection	Intrinsic safety
CE marking	CE-0102
Certificates	
Appropriate type	NJ10-22-N...
ATEX certificate	PTB 00 ATEX 2048 X
ATEX marking	Ⓜ II 2G Ex ia IIC T6...T1 Gb
ATEX standards	EN IEC 60079-0:2018-07, EN 60079-11:2012-01
IECEX certificate	IECEX PTB 11.0037X
IECEX marking	Ex ia IIC T6...T1 Gb
IECEX standards	IEC 60079-0:2017-12, IEC 60079-11:2011-06
Effective internal capacitance C_i	max. 130 nF A cable length of 10 m is considered.
Effective internal inductance L_i	max. 100 μ H A cable length of 10 m is considered.

Maximum permissible ambient temperature in °C	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. $U_i = 16$ V, $I_i = 25$ mA, $P_i = 34$ mW T6: 73 °C T5: 88 °C T4: 100 °C T3: 100 °C T2: 100 °C T1: 100 °C $U_i = 16$ V, $I_i = 25$ mA, $P_i = 64$ mW T6: 69 °C T5: 84 °C T4: 100 °C T3: 100 °C T2: 100 °C T1: 100 °C $U_i = 16$ V, $I_i = 52$ mA, $P_i = 169$ mW T6: 51 °C T5: 66 °C T4: 80 °C T3: 80 °C T2: 80 °C T1: 80 °C $U_i = 16$ V, $I_i = 76$ mA, $P_i = 242$ mW T6: 39 °C T5: 54 °C T4: 61 °C T3: 61 °C T2: 61 °C T1: 61 °C
---	---

11.2. Equipment protection level Da

Type of protection	Intrinsic safety
CE marking	CE-0102
Certificates	
Appropriate type	NJ10-22-N...
ATEX certificate	PTB 00 ATEX 2048 X
ATEX marking	Ⓜ II 1D Ex ia IIIC T ₂₀₀ 135°C Da
ATEX standards	EN IEC 60079-0:2018-07, EN 60079-11:2012-01
IECEX certificate	IECEX PTB 11.0037X
IECEX marking	Ex ia IIIC T ₂₀₀ 135°C Da
IECEX standards	IEC 60079-0:2017-12, IEC 60079-11:2011-06
Effective internal capacitance C_i	max. 130 nF A cable length of 10 m is considered.
Effective internal inductance L_i	max. 100 μ H A cable length of 10 m is considered.
Maximum permissible ambient temperature in °C	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. $U_i = 16$ V, $I_i = 25$ mA, $P_i = 34$ mW 100 °C $U_i = 16$ V, $I_i = 25$ mA, $P_i = 64$ mW 100 °C $U_i = 16$ V, $I_i = 52$ mA, $P_i = 169$ mW 62 °C

11.3. Equipment protection level Mb

Type of protection	Intrinsic safety
Certificates	
Appropriate type	NJ10-22-N...
IECEX certificate	IECEX PTB 11.0037X
IECEX marking	Ex ia I Mb

IECEX standards	IEC 60079-0:2017-12, IEC 60079-11:2011-06
Effective internal capacitance C_i	max. 130 nF A cable length of 10 m is considered.
Effective internal inductance L_i	max. 100 μ H A cable length of 10 m is considered.
Maximum permissible ambient temperature in $^{\circ}$ C	Also observe the maximum permissible ambient temperature stated in the general technical data. Keep to the lower of the two values. $U_i = 16$ V, $I_i = 25$ mA, $P_i = 34$ mW 100 $^{\circ}$ C $U_i = 16$ V, $I_i = 25$ mA, $P_i = 64$ mW 100 $^{\circ}$ C $U_i = 16$ V, $I_i = 52$ mA, $P_i = 169$ mW 80 $^{\circ}$ C $U_i = 16$ V, $I_i = 76$ mA, $P_i = 242$ mW 61 $^{\circ}$ C


Inductive sensor

NJ10-22-N-E93-Y246869

■ Comfort series



Dimensions

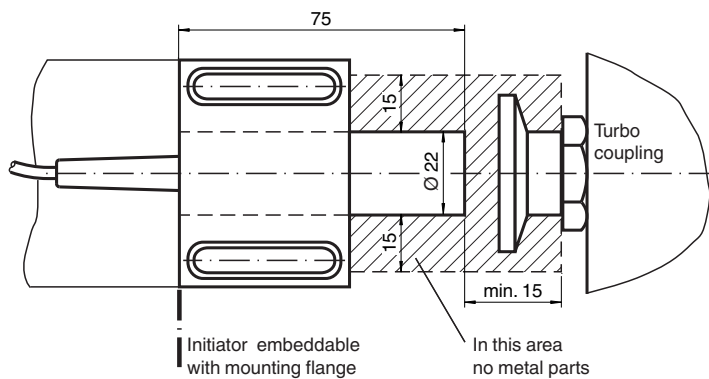

Technical Data

General specifications

Switching function		Normally closed (NC)
Output type		NAMUR
Rated operating distance	s_n	10 mm
Installation		non-flush
Assured operating distance	s_a	0 ... 10 mm
Output type		2-wire

Nominal ratings

Nominal voltage	U_o	8.2 V (R_i approx. 1 k Ω)
Switching frequency	f	0 ... 1000 Hz
Hysteresis	H	typ. 5 %
Current consumption		
Measuring plate not detected		min. 3 mA
Measuring plate detected		≤ 1 mA

Functional safety related parameters

MTTF _d		3602 a
Mission Time (T_M)		20 a
Diagnostic Coverage (DC)		0 %

Compliance with standards and directives

Standard conformity		
NAMUR		EN 60947-5-6:2000 IEC 60947-5-6:1999

Release date: 2021-06-21 Date of issue: 2021-06-21 Filename: 70133283_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

PF PEPPERL+FUCHS

Technical Data

Standards	EN 60947-5-2:2007 EN 60947-5-2/A1:2012 IEC 60947-5-2:2007 IEC 60947-5-2 AMD 1:2012	
Approvals and certificates		
IECEX approval		
Equipment protection level Gb		IECEX PTB 11.0037X
Equipment protection level Da		IECEX PTB 11.0037X
Equipment protection level Mb		IECEX PTB 11.0037X
ATEX approval		
Equipment protection level Gb		PTB 00 ATEX 2048 X
Equipment protection level Da		PTB 00 ATEX 2048 X
EAC conformity		TR CU 012/2011
UL approval		cULus Listed, General Purpose
Ambient conditions		
Ambient temperature	-40 ... 100 °C (-40 ... 212 °F) Also observe the maximum permissible ambient temperature stated in the data for application in connection with hazardous areas. Keep to the lower of the two values.	
Mechanical specifications		
Connection type	cable	
Housing material	PBT	
Sensing face	PBT	
Degree of protection	IP68	
Cable		
Cable diameter	6 mm ± 0.2 mm	
Bending radius	> 10 x cable diameter	
Material	silicone	
Core cross-section	0.75 mm ²	
Length	L	10 m
General information		
Use in the hazardous area	see instruction manuals	

Connection

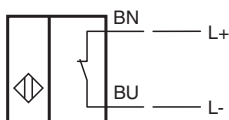

Release date: 2021-06-21 Date of issue: 2021-06-21 Filename: 70133283_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

 **PEPPERL+FUCHS**

Pepperl+Fuchs SE
Lilienthalstraße 200
68307 Mannheim
Germany
Phone +49 621 776-0
Fax +49 621 776-1000

No. / Nr.: DOC-5073
Date / Datum: 2021-07-21

Copyright Pepperl+Fuchs
www.pepperl-fuchs.com



Declaration of conformity / Konformitätserklärung

We, Pepperl+Fuchs SE declare under our sole responsibility that the **products** listed below are in conformity with the listed **European Directives** and **standards**.

Die Pepperl+Fuchs SE erklärt hiermit in alleiniger Verantwortung, dass die unten gelisteten **Produkte** den genannten **Europäischen Richtlinien** und **Normen** entsprechen.

Products / Produkte

Product / Produkt	Item number	Description / Beschreibung
NJ2-12GK-N-Y40110	70133235	Inductive sensor
NJ2-12GK-N-10M-Y89552	70133232	Inductive sensor
NJ2-12GK-N-25M	70133233	Inductive sensor
NJ2-12GK-N-5M	70133234	Inductive sensor
NJ2-12GM-N-Y08766	70133239	Inductive sensor
NJ2-12GM-N-Y10638	70133240	Inductive sensor
NJ2-14GM-N-C50	70133255	Inductive sensor
NJ2-14GM-N-V1-Y19784	70133256	Inductive sensor
NJ2,5-14GM-N-V1-Y21146	70133054	Inductive sensor
NJ25-50-N	70133327	Inductive sensor
NJ10-30GK-N-5M	70133311	Inductive sensor
NJ25-50-N-15M	70133328	Inductive sensor
NJ15-30GK-N	70133073	Inductive sensor
NJ25-50-N-5M	70133329	Inductive sensor
NJ15-30GK-N	70133317	Inductive sensor
NJ15-30GK-N-Y08943	70133320	Inductive sensor
NJ15-30GK-N-10M	70133074	Inductive sensor
NJ15-30GK-N-20M	70133318	Inductive sensor
NJ15-30GK-N-30M	70133319	Inductive sensor
NJ20-40-N	70133323	Inductive sensor
NJ2-11-N-G-Y102883	70133198	Inductive sensor
NJ2-11-N-G-910	70133196	Inductive sensor
NJ10-22-N	70133280	Inductive sensor
NJ10-22-N-E93-Y245590	70133281	Inductive sensor
NJ10-22-N-E93-Y246868	70133282	Inductive sensor
NJ10-22-N-E93-Y246869	70133283	Inductive sensor
NJ10-22-N-G	70133284	Inductive sensor

Product / Produkt	Item number	Description / Beschreibung
NJ10-22-N-G-5M	70133285	Inductive sensor
NJ10-30GK-N	70133308	Inductive sensor
NJ10-30GK-N	70133309	Inductive sensor
NJ10-30GK-N-15M	70133310	Inductive sensor
NJ2-11-N-Y14235	70133202	Inductive sensor
NJ2-12GK-N	70133049	Inductive sensor

Directives and Standards / Richtlinien und Normen

EU-Directive EU-Richtlinie	Standards Normen
ATEX 2014/34/EU (L96/309-356)	EN 60079-11:2012-01 EN IEC 60079-0:2018-07
EMC 2014/30/EU (L96/79-106)	EN 60947-5-2/A1:2012-11 EN 60947-5-2:2007-12 EN 60947-5-6:2000-01 EN IEC 60947-5-2:2020-03
RoHS 2011/65/EU (L174/88-110)	EN IEC 63000:2018-12

Affixed CE Marking / Angebrachte CE-Kennzeichnung



Signatures / Unterschriften

Mannheim, 2021-07-21

i.V. Ulrich Ehrenfried

Head of Innovation Unit Electromagnetic
Sensors

i.V. Tobias Dittmer

Global Product Manager

ANNEX ATEX

Notified Body QM-System / Notifizierte Stelle des QM-Systems
Physikalisch Technische Bundesanstalt (0102)
Bundesallee 100
38116 Braunschweig
Germany

Marking and Certificates / Kennzeichnung und Zertifikate

Marking Kennzeichnung	Certificate Zertifikat	Issuer ID Aussteller ID
 	PTB 00 ATEX 2048 X	0102

Key for Issuer ID / Schlüssel zur Aussteller ID

ID	Issuer / Aussteller
0102	Physikalisch Technische Bundesanstalt Bundesallee 100 38116 Braunschweig Germany

14.7 Evaluator KFU8-DW-1.D-Y209869

Technical Data

Pepperl+Fuchs

Declaration of Conformity

Pepperl+Fuchs



Model Number

KFU8-DW-1.D-Y209869

Evaluation unit

Features

- Rotational speed monitoring up to 10 kHz
- 1 pre-select value with relay output and LED indicator
- Multi-range power pack
- NAMUR sensors connectable
- Adjustable start-up override
- Menu driven operation via 4 front keys
- Period measurement

Technical data

General specifications

Pre-selection single

Functional safety related parameters

MTTF_d 100 a

Supply

Rated voltage U_r 200 ... 230 V AC ; 100 ... 130 V AC; 50 Hz
20 VDC ... 30 VDC

Fusing external fusing 4 A

Power consumption AC: < 5 VA
DC: < 5 W

Indicators/operating means

Type 7-segment LED display, red

Number of digits 4

Display value digit height 7 mm, in Hz or 1/min

LED yellow switching state

Accuracy ± 1 digit

Input

Control input NAMUR: $1,2 \text{ mA} \leq x \leq 2,1 \text{ mA}$ (terminal 8, 9), max. 8.2 V and 6.5 mA, impedance 1.2 kOhm

Trigger input 12 V (terminal 2), max. 30 V, impedance 2.8 kOhm

Pulse duration 20 μ s

Input 1

Switching point 1.2 ... 2.1 mA Switching hysteresis approx. 0.2 mA

Input frequency 0.002 ... 10000 Hz, pulse length/duration: $\geq 20 \mu$ s

Impedance 1.2 k Ω

Input 3

Start-up override Triggering by external signal 16 ... 30 V or Place jumper between terminals 2/3 or by switching on supply voltage (terminal 2 and terminal 3 permanently bridged)

Jumpering time 1 ... 9999 s (External trigger signal)

Output

Relay 1 changeover contact

Sensor supply 24 V DC $\pm 10 \%$, 30 mA, short-circuit protected

Contact loading 250 V AC/2 A/ $\cos \phi \geq 0.7$
40 V DC/2 A

Delay times

Time delay before availability ≤ 400 ms

Start-up override 1 ... 9999 s

Relay ≤ 20 ms

Transfer characteristics

Measuring error 0 ... 10 kHz: $\leq \pm 0.1\%$
Display: ± 1 digit

Standard conformity

Electromagnetic compatibility acc. to EN 50081-2 / EN 50082-2

Ambient conditions

Ambient temperature -25 ... 40 °C (-13 ... 104 °F)

Storage temperature -40 ... 85 °C (-40 ... 185 °F)

Relative humidity max. 80 %, not condensing

Altitude 0 ... 2000 m

Operating conditions The device has only to be used in an indoor area.

Mechanical specifications

Connection assembly **Caution:** Please be aware that the device may only be connected to a switchable power supply. The switch or circuit breaker must be easy to reach and identified as the separator for the device.

Degree of protection IP20

Connection coded, removable terminals, max. core cross-section 0.34 ... 2.5 mm²

Construction type modular terminal housing in Makrolon, System KF
For use in the switch cabinet/switch cabinet module

Mounting snap-on to 35 mm standard rail or screw fixing

Life span 30×10^6 switching cycles


Function

The KFU8-DW-1.D Speed Monitor is a device used to indicate and monitor periodic signals (frequencies and rotational speeds) which occur in almost all areas of automation and process engineering.


The input signals are evaluated in accordance with the cycle method. That is, by measuring the duration of a period and then converting it with a very fast micro controller to a frequency or rotational speed.

The Speed Monitor can be supplied with 115 V AC, 230 V AC or by a 24 V DC supply and when connected to an alternating voltage it provides a 24 V DC source to supply the signal sensor.


Dimensions

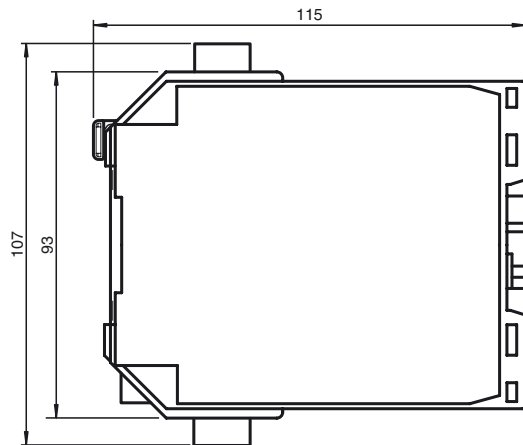

Indicators/operating means

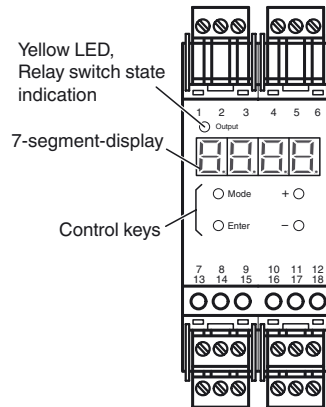

Electrical connection

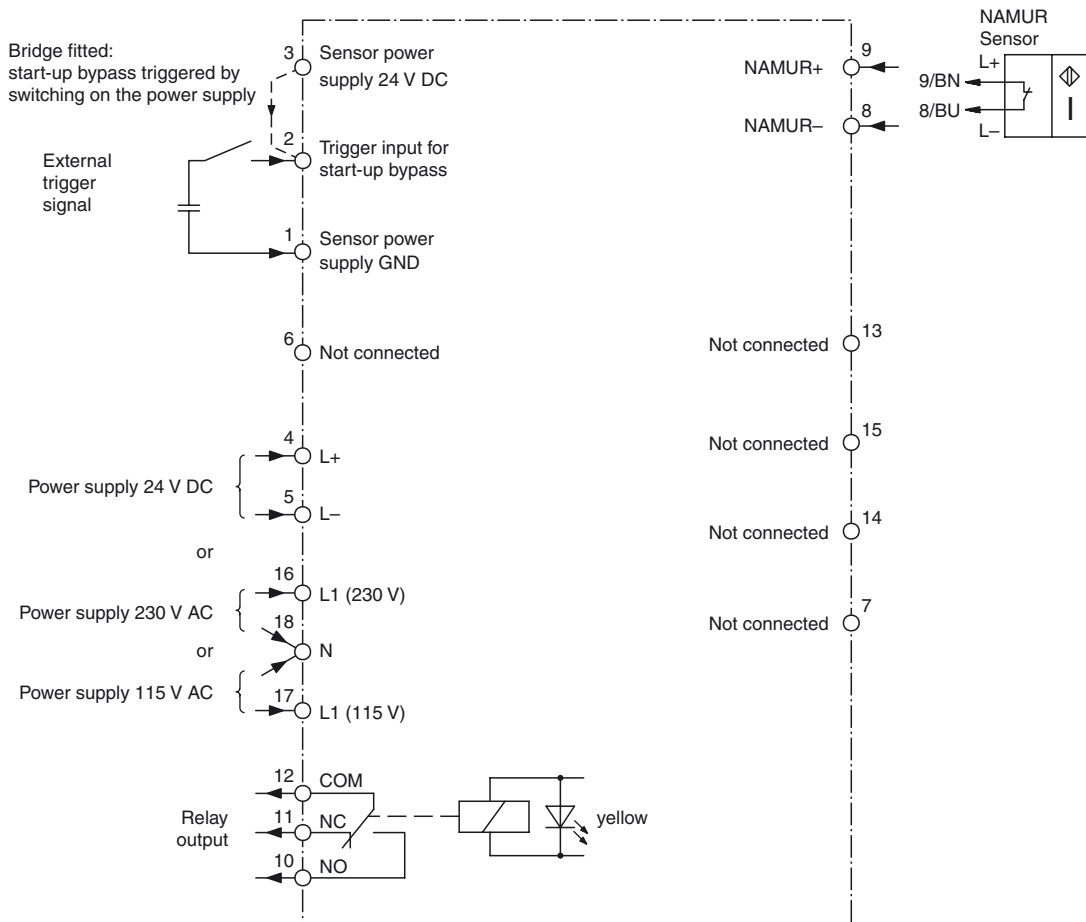

Release date: 2016-11-25 08:28 Date of issue: 2016-12-05 209869_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

Pepperl+Fuchs GmbH
Lilienthalstraße 200
68307 Mannheim
Germany

Phone +49 621 776-0
Fax +49 621 776-1000

No. / Nr.: DOC-1838A
Date / Datum: 2016-12-01

Copyright Pepperl+Fuchs
www.pepperl-fuchs.com



■ Declaration of conformity / Konformitätserklärung

We, Pepperl+Fuchs GmbH declare under our sole responsibility that the **products** listed below are in conformity with the listed **European Directives** and **standards**.

Die Pepperl+Fuchs GmbH erklärt hiermit in alleiniger Verantwortung, dass die unten gelisteten Produkte den genannten Europäischen Richtlinien und Normen entsprechen.

■ Products / Produkte

Product / Produkt	Item number	Description / Beschreibung
KFU8-FSSP-1.D	181191	Frequency voltage current converter
KFU8-FSSP-1.D-Y180599	180599	Frequency voltage current converter
KFU8-DW-1.D	190149	Overspeed/underspeed Monitor
KFU8-DW-1.D-Y209869	209869	Overspeed/underspeed Monitor

■ Directives and Standards / Richtlinien und Normen

EU-Directive EU-Richtlinie	Standards Normen
2014/30/EU (EMC) (L96/79-106)	EN 61326-1:2013
2014/35/EU (LV) (L96/357-374)	EN 61010-1:2010

■ Affixed CE Marking / Angebrachte CE-Kennzeichnung



■ Signatures / Unterschriften

Mannheim, 2016-12-01

ppa. 

ppa. Dr. Thomas Sebastiany
Director Business Unit SYSTEMS



i.V. Erwin Schmidt
Product Manager

14.8 Isolating switch amplifier KFD2-SOT2-Ex2

Operating Instructions	Pepperl+Fuchs
Technical Data	Pepperl+Fuchs
Declaration of Conformity	Pepperl+Fuchs

Instruction Manual

Marking

K-System, Isolated barriers for Zone 2
Device identification
Model number
ATEX approval
Group, category, type of protection, temperature classification

table 1

The exact designation of the device can be found on the name plate on the device side.

Pepperl+Fuchs GmbH Lilienthalstrasse 200, 68307 Mannheim, Germany
--

table 2

Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator. Mounting, installation, commissioning, operation, maintenance and dismantling of the device may only be carried out by appropriate trained and qualified personnel. The instruction manual must be read and understood.

Prior to using the device you should make yourself familiar with the device and carefully read the instruction manual.

Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location.

The corresponding datasheets, declarations of conformity, EC-type-examination certificates, certificates and control drawings if applicable supplement this document. You can find this information under www.pepperl-fuchs.com.

Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

The device is used in control and instrumentation technology (C&I technology) for the galvanic isolation of signals such as 20 mA and 10 V standard signals or alternatively for adapting or standardizing signals. The device has intrinsically safe circuits that are used for operating intrinsically safe field devices in hazardous areas.

Use the device only within the specified ambient conditions. The device is designed for mounting on a 35 mm DIN mounting rail according to EN 60715.

Only use the device stationary.

The device is an associated apparatus according to IEC/EN 60079-11.

The device is an electrical apparatus for hazardous areas of Zone 2.

Improper Use

Protection of the personnel and the plant is not ensured if the device is not being used according to its intended use.

The device is not suitable for isolating signals in power installations unless this is noted separately in the corresponding datasheet.

Mounting and Installation

Do not mount a damaged or polluted device.

Mount the device in a way that the device is protected against mechanical hazard. Mount the device in a surrounding enclosure for example.

Do not mount the device in the dust hazardous area.

The device fulfills a degree of protection IP20 according to IEC/EN 60529.

The device must be installed and operated only in an environment that ensures a pollution degree 2 (or better) according to IEC/EN 60664-1.

If used in areas with higher pollution degree, the device needs to be protected accordingly.

All circuits connected to the device must comply with the overvoltage category II (or better) according to IEC/EN 60664-1.

Only use power supplies that provide protection against electric shock (e. g. SELV or PELV) for the connection to power feed modules.

Observe the installation instructions according to IEC/EN 60079-14.

Requirements for Cables and Connection Lines

Observe the following points when installing cables and connection lines:

Observe the permissible core cross-section of the conductor.

If you use stranded conductors, crimp wire end ferrules on the conductor ends.

Use only one conductor per terminal.

When installing the conductors the insulation must reach up to the terminal.

Observe the tightening torque of the terminal screws.

If the rated voltage is greater than 50 V AC, proceed as follows:

1. Switch off the voltage.

2. Connect the terminal blocks or disconnect the terminal blocks.

Requirements for Usage as Associated Apparatus

If circuits with type of protection Ex i are operated with non-intrinsically safe circuits, they must no longer be used as circuits with type of protection Ex i.

Intrinsically safe circuits of associated apparatus can be led into hazardous areas. Observe the compliance of the separation distances to all non-intrinsically safe circuits according to IEC/EN 60079-14.

Observe the compliance of the separation distances between two adjacent intrinsically safe circuits according to IEC/EN 60079-14.

Observe the maximum values of the device, when connecting the device to intrinsically safe apparatus.

When connecting intrinsically safe devices with intrinsically safe circuits of associated apparatus, observe the maximum peak values with regard to explosion protection (verification of intrinsic safety). Observe the standards IEC/EN 60079-14 or IEC/EN 60079-25.

If no L_o and C_o values are specified for the simultaneous appearance of lumped inductances and capacitances, the following rule applies.

● The specified value for L_o and C_o is used if one of the following conditions applies:

● The circuit has distributed inductances and capacitances only, e. g., in cables and connection lines.

● The total value of L_i (excluding cable) of the circuit is $< 1\%$ of the specified L_o value.

● The total value of C_i (excluding cable) of the circuit is $< 1\%$ of the specified C_o value.

● A maximum of 50 % of the specified value for L_o and C_o is used if the following condition applies:

The total value of L_i (excluding cable) of the circuit is $\geq 1\%$ of the specified L_o value.

The total value of C_i (excluding cable) of the circuit is $\geq 1\%$ of the specified C_o value.

The reduced capacitance for gas groups I, IIA and IIB must not exceed the value of 1 μF (including cable).

The reduced capacitance for gas group IIC must not exceed the value of 600 nF (including cable).

If more channels of one device are connected in parallel, ensure the parallel connection is made directly at the terminals of the device. When verifying the intrinsic safety, observe the maximum values for the parallel connection.

Requirements for Equipment Protection Level Gc

The device must be installed and operated only in surrounding enclosures that

● comply with the requirements for surrounding enclosures according to IEC/EN 60079-0,

● are rated with the degree of protection IP54 according to IEC/EN 60529.

Connection or disconnection of energized non-intrinsically safe circuits is only permitted in the absence of a potentially explosive atmosphere.

Provide a transient protection. Ensure that the peak value of the transient protection does not exceed 140 % of the rated voltage.

Place warning label "Warning – Do not remove or replace fuse when energized!" visibly on the housing.

Operation, Maintenance, Repair

The devices must not be repaired, changed or manipulated. If there is a defect, the product must always be replaced with an original device.

If the rated voltage is greater than 50 V AC, proceed as follows:

1. Switch off the voltage.

2. Connect the terminal blocks or disconnect the terminal blocks.

Requirements for Equipment Protection Level Gc

Connection or disconnection of energized non-intrinsically safe circuits is only permitted in the absence of a potentially explosive atmosphere.

Only use operating elements in the absence of a potentially explosive atmosphere.

Only use the programming socket in the absence of a potentially explosive atmosphere.

Only change the replaceable fuse, when the device is de-energized.

Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions (see datasheet) must be considered.

Disposing of device, packaging, and possibly contained batteries must be in compliance with the applicable laws and guidelines of the respective country.

Features

- 2-channel isolated barrier
- 24 V DC supply (Power Rail)
- Dry contact or NAMUR inputs
- Passive transistor output, non-polarized
- Line fault detection (LFD)
- Reversible mode of operation
- Up to SIL 2 acc. to IEC 61508

Function


This isolated barrier is used for intrinsic safety applications. It transfers digital signals (NAMUR sensors/mechanical contacts) from a hazardous area to a safe area.

Each proximity sensor or switch controls a passive transistor output for the safe area load. The normal output state can be reversed using switch S1 for channel I and switch S2 for channel II. Switch S3 enables or disables line fault detection of the field circuit.


During an error condition, the transistors revert to their de-energized state and LEDs indicate the fault according to NAMUR NE44.

A unique collective error messaging feature is available when used with the Power Rail system.

Assembly

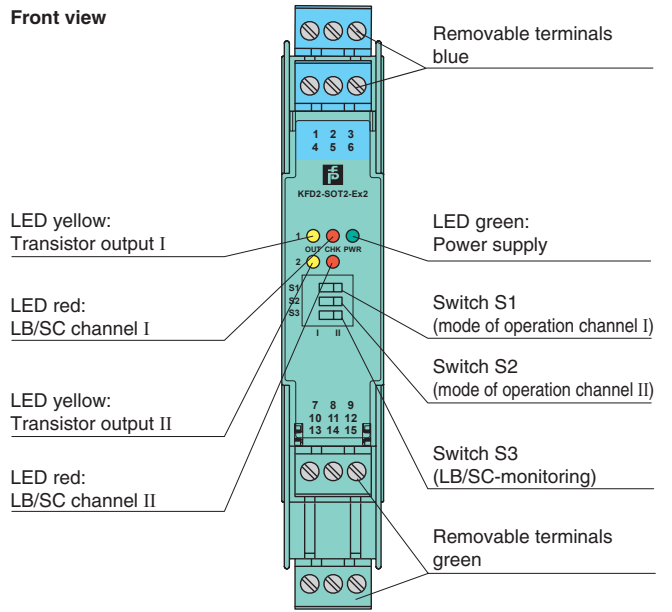

Connection

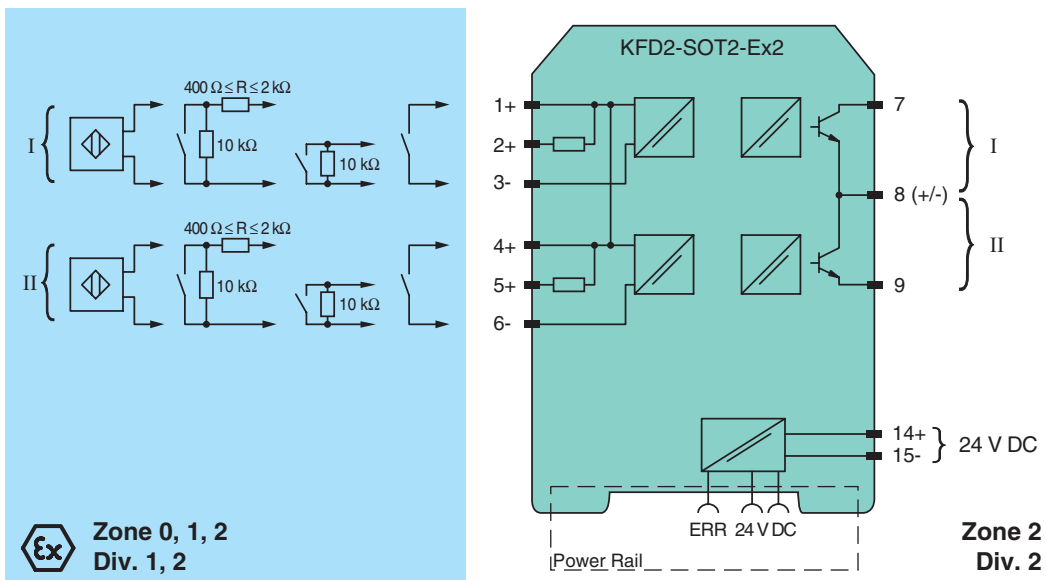

Release date 2016-05-15 23:28 Date of issue 2016-05-16 18:005_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

General specifications		
Signal type		Digital Input
Supply		
Connection		Power Rail or terminals 14+, 15-
Rated voltage	U_n	20 ... 30 V DC
Ripple		≤ 10 %
Rated current	I_n	≤ 50 mA
Input		
Connection		terminals 1+, 2+, 3-; 4+, 5+, 6-
Rated values		acc. to EN 60947-5-6 (NAMUR), see system description for electrical data
Open circuit voltage/short-circuit current		approx. 8 V DC / approx. 8 mA
Switching point/switching hysteresis		1.2 ... 2.1 mA / approx. 0.2 mA
Line fault detection		breakage $I \leq 0.1$ mA , short-circuit $I > 6$ mA
Output		
Connection		output I: terminals 7, 8 ; output II: terminals 8, 9
Switching voltage		≤ 30 V
Switching current		≤ 100 mA , short-circuit protected
Signal level		1-signal: switching voltage - 2.5 V max. at 10 mA switching current or 3 V max. at 100 mA switching current 0-signal: switched off (off-state current ≤ 10 μA)
Output I, II		signal ; electronic output, passive
Collective error message		Power Rail
Transfer characteristics		
Switching frequency		≤ 5 kHz
Electrical isolation		
Input/Output		reinforced insulation acc. to IEC 62103, rated insulation voltage 300 V_{rms}
Input/power supply		reinforced insulation acc. to IEC 62103, rated insulation voltage 300 V_{rms}
Output/power supply		basic insulation according to IEC 62103, rated insulation voltage 50 V_{eff}
Input/input		not available
Output/Output		not available
Directive conformity		
Electromagnetic compatibility		
Directive 2014/30/EU		EN 61326-1:2013 (industrial locations)
Conformity		
Electrical isolation		IEC 62103:2003
Electromagnetic compatibility		NE 21:2004
Degree of protection		IEC 60529:2001
Input		EN 60947-5-6:2000
Ambient conditions		
Ambient temperature		-20 ... 60 °C (-4 ... 140 °F)
Mechanical specifications		
Degree of protection		IP20
Mass		approx. 150 g
Dimensions		20 x 119 x 115 mm (0.8 x 4.7 x 4.5 in) , housing type B2
Mounting		on 35 mm DIN mounting rail acc. to EN 60715:2001
Data for application in connection with Ex-areas		
EC-Type Examination Certificate		PTB 00 ATEX 2035
Group, category, type of protection		Ex II (1) G [Ex ia] IIC Ex II (1) D [Ex ia] IIIC
Input		Ex ia IIC, Ex ia IIIC
Voltage	U_o	10.5 V
Current	I_o	13 mA
Power	P_o	34 mW (linear characteristic)
Supply		
Maximum safe voltage	U_m	40 V DC (Attention! The rated voltage can be lower.)
Output		
Maximum safe voltage	U_m	40 V DC (Attention! The rated voltage can be lower.)
EC-Type Examination Certificate		DMT 01 ATEX E 133
Group, category, type of protection		Ex I (M1) [Ex ia] I
Statement of conformity		TÜV 99 ATEX 1499 X
Group, category, type of protection, temperature class		Ex II 3G Ex nA II T4
Electrical isolation		
Input/Output		safe electrical isolation acc. to IEC/EN 60079-11, voltage peak value 375 V
Input/power supply		safe electrical isolation acc. to IEC/EN 60079-11, voltage peak value 375 V

Release date 2016-05-15 23:28 Date of issue 2016-05-16 18:005_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0002
pa-info@us.pepperl-fuchs.com

Germany: +49 621 776 2222
pa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
pa-info@sg.pepperl-fuchs.com

Directive conformity	
Directive 2014/34/EU	EN 60079-0:2012+A11:2013 , EN 60079-11:2012 , EN 60079-15:2010 , EN 50303:2000
International approvals	
FM approval	
Control drawing	116-0035
CSA approval	
Control drawing	116-0047
IECEx approval	
Approved for	[Ex ia] IIC , [Ex ia] I , [Ex ia] IIIC
General information	
Supplementary information	EC-Type Examination Certificate, Statement of Conformity, Declaration of Conformity, Attestation of Conformity and instructions have to be observed where applicable. For information see www.pepperl-fuchs.com .

Release date 2016-05-15 23:28 Date of issue 2016-05-16 181005_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".


Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0002
pa-info@us.pepperl-fuchs.com

Germany: +49 621 776 2222
pa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
pa-info@sg.pepperl-fuchs.com

Configuration

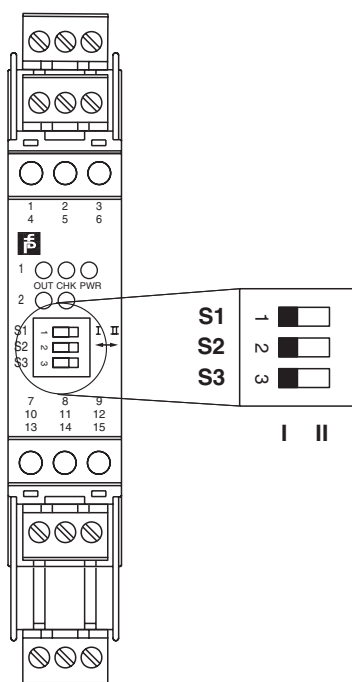

Switch position

S	Function		Position
1	Mode of operation Output I active	with high input current	I
		with low input current	II
2	Mode of operation Output II active	with high input current	I
		with low input current	II
3	Line fault detection	ON	I
		OFF	II

Operating status

Control circuit	Input signal
Initiator high impedance/ contact opened	low input current
Initiator low impedance/ contact closed	high input current
Lead breakage, lead short-circuit	Line fault

Factory settings: switch 1, 2 and 3 in position I

Accessories

Power feed module KFD2-EB2

The power feed module is used to supply the devices with 24 V DC via the Power Rail. The fuse-protected power feed module can supply up to 150 individual devices depending on the power consumption of the devices. Collective error messages received from the Power Rail activate a galvanically-isolated mechanical contact.

Power Rail UPR-03

The Power Rail UPR-03 is a complete unit consisting of the electrical insert and an aluminium profile rail 35 mm x 15 mm. To make electrical contact, the devices are simply engaged.

Profile Rail K-DUCT with Power Rail

The profile rail K-DUCT is an aluminum profile rail with Power Rail insert and two integral cable ducts for system and field cables. Due to this assembly no additional cable guides are necessary.



Power Rail and Profile Rail must not be fed via the device terminals of the individual devices!

Pepperl+Fuchs GmbH
Lilienthalstraße 200
68307 Mannheim
Germany
Phone +49 621 776-0
Fax +49 621 776-1000

No. / Nr.: DOC-0030B
Date / Datum: 2016-04-06

Copyright Pepperl+Fuchs
www.pepperl-fuchs.com



Declaration of conformity / Konformitätserklärung

We, Pepperl+Fuchs GmbH declare under our sole responsibility that the **products** listed below are in conformity with the listed **European Directives and standards**.

Die Pepperl+Fuchs GmbH erklärt hiermit in alleiniger Verantwortung, dass die unten gelisteten **Produkte** den genannten **Europäischen Richtlinien und Normen** entsprechen.

Products / Produkte

Product / Produkt	Item number	Description / Beschreibung
KFD2-SOT2-Ex1.LB	181002	Switch Amplifier
KFD2-SOT2-Ex1.LB.IO	181004	Switch Amplifier
KFD2-SOT2-Ex1.N	195092	Switch Amplifier
KFD2-SOT2-Ex1.R1	238071	Switch Amplifier
KFD2-SOT2-Ex2	181005	Switch Amplifier
KFD2-SOT2-Ex2.IO	181007	Switch Amplifier
KFD2-SOT2-Ex2.IO-Y181008	181008	Switch Amplifier
KFD2-ST2-Ex1.LB	180997	Switch Amplifier
KFD2-ST2-Ex2	181000	Switch Amplifier

Directives and Standards / Richtlinien und Normen

EU-Directive EU-Richtlinie	Standards Normen
2004/108/EC (EMC) valid until 2016-04-19 (L390/24-37) 2014/30/EU (EMC) valid from 2016-04-20 (L96/79-106)	EN 61326-1:2013 (industrial locations)
94/9/EC (ATEX) valid until 2016-04-19 (L100/1-29) 2014/34/EU (ATEX) valid from 2016-04-20 (L96/309-356)	EN 60079-0:2012+A11:2013 EN 60079-11:2012 EN 60079-15:2010 EN 50303:2000

Affixed CE Marking / Angebrachte CE-Kennzeichnung



Signatures / Unterschriften

Mannheim, 2016-04-06

ppa. Michael Kessler
Vice President Business Unit
Components and Technology

i.V. Friedrich Fuß
Product Portfolio Manager
Product Group Interface

ANNEX ATEX

Notified Body QM-System / Notifizierte Stelle des QM-Systems:

Physikalisch Technische Bundesanstalt (0102)
Bundesallee 100
38116 Braunschweig
Germany

We, Pepperl+Fuchs GmbH declare that the products are only affected by minor or formal changes in respect to the new edition of the standards. These changes are not relevant for compliance with the EHSRs and consequently the products still comply with the ATEX Directive.

Die Pepperl+Fuchs GmbH erklärt hiermit, dass die Produkte nur von kleineren oder formalen Änderungen in Bezug auf die neue Ausgabe der Normen betroffen sind. Diese Änderungen sind nicht relevant für die Konformität mit den EHSRs, weshalb die Produkte nach wie vor die ATEX-Richtlinie erfüllen.

The EC-Type-Examination Certificate PTB 00 ATEX 2035 was performed in accordance with the following standards:

Die EG-Baumusterprüfbescheinigung PTB 00 ATEX 2035 wurde nach den folgenden Normen durchgeführt:

EN 60079-0:2009
EN 60079-11:2007
EN 61241-11:2006

The EC-Type-Examination Certificate DMT 01 ATEX E 133 was performed in accordance with the following standards:

Die EG-Baumusterprüfbescheinigung DMT 01 ATEX E 133 wurde nach den folgenden Normen durchgeführt:

EN 60079-0:2009
EN 60079-11:2007
EN 50303:2000

The Type-Examination TÜV 99 ATEX 1499 X and the marking as category 3 G equipment was performed in accordance with the following standards:

Die Baumusterprüfung TÜV 99 ATEX 1499 X und die Kennzeichnung als Kategorie 3 G Betriebsmittel wurden nach den folgenden Normen durchgeführt:

EN 60079-0:2006
EN 60079-15:2005

Marking and Certificates / Kennzeichnung und Zertifikate

Products / Produkte	Certificate Zertifikat		Issuer ID Aussteller ID
KFD2-SOT2-Ex1.LB KFD2-SOT2-Ex1.LB.IO KFD2-SOT2-Ex2 KFD2-SOT2-Ex2.IO KFD2-SOT2-Ex2.IO-Y181008	PTB 00 ATEX 2035		0102
Marking Kennzeichnung	DMT 01 ATEX E 133		0158
Ⓔ II (1) G Ⓔ II (1) D	TÜV 99 ATEX 1499 X		TÜV

Products / Produkte	KFD2-SOT2-Ex1.N KFD2-SOT2-Ex1.R1	
Marking Kennzeichnung	Certificate Zertifikat	Issuer ID Aussteller ID
⊕ II (1) G ⊕ II (1) D	PTB 00 ATEX 2035	0102
⊕ I (M1)	DMT 01 ATEX E 133	0158
⊕ II 3 G	PF11CERT1046X	PF

Products / Produkte	KFD2-ST2-Ex1.LB KFD2-ST2-Ex2	
Marking Kennzeichnung	Certificate Zertifikat	Issuer ID Aussteller ID
⊕ II (1) G ⊕ II (1) D	PTB 00 ATEX 2035	0102
⊕ II 3 G	TÜV 99 ATEX 1499 X	TÜV

Key for Issuer ID / Schlüssel zur Aussteller ID

ID	Issuer / Aussteller
0102	Physikalisch Technische Bundesanstalt Bundesallee 100 38116 Braunschweig Germany
0158	DEKRA EXAM GmbH Dinnendahlstrasse 9 44809 Bochum Germany
TÜV	TÜV NORD CERT GmbH Langemarckstraße 20 45141 Essen Germany
PF	Pepperl + Fuchs GmbH Lilienthalstraße 200 68307 Mannheim Germany

14.9 Isolating switch amplifier KFA6-SOT2-Ex2

Operating Instructions	Pepperl+Fuchs
Technical Data	Pepperl+Fuchs
Declaration of Conformity	Pepperl+Fuchs

Instruction Manual

Marking

K-System, Isolated barriers
Device identification
Model number
ATEX approval
Group, category, type of protection, temperature classification

table 1

The exact designation of the device can be found on the name plate on the device side.

Pepperl+Fuchs GmbH Lilienthalstrasse 200, 68307 Mannheim, Germany
--

table 2

Target Group, Personnel

Responsibility for planning, assembly, commissioning, operation, maintenance, and dismantling lies with the plant operator. Mounting, installation, commissioning, operation, maintenance and dismantling of the device may only be carried out by appropriate trained and qualified personnel. The instruction manual must be read and understood.

Prior to using the device you should make yourself familiar with the device and carefully read the instruction manual.

Reference to Further Documentation

Observe laws, standards, and directives applicable to the intended use and the operating location.

The corresponding datasheets, declarations of conformity, EC-type-examination certificates, certificates and control drawings if applicable supplement this document. You can find this information under www.pepperl-fuchs.com.

Intended Use

The device is only approved for appropriate and intended use. Ignoring these instructions will void any warranty and absolve the manufacturer from any liability.

The device is used in control and instrumentation technology (C&I technology) for the galvanic isolation of signals such as 20 mA and 10 V standard signals or alternatively for adapting or standardizing signals. The device has intrinsically safe circuits that are used for operating intrinsically safe field devices in hazardous areas.

Use the device only within the specified ambient conditions.

The device is designed for mounting on a 35 mm DIN mounting rail according to EN 60715.

Only use the device stationary.

The device is an associated apparatus according to IEC/EN 60079-11.

Improper Use

Protection of the personnel and the plant is not ensured if the device is not being used according to its intended use.

The device is not suitable for isolating signals in power installations unless this is noted separately in the corresponding datasheet.

Mounting and Installation

Do not mount a damaged or polluted device.

Mount the device in a way that the device is protected against mechanical hazard. Mount the device in a surrounding enclosure for example.

The device must be installed outside of the hazardous area.

The device fulfills a degree of protection IP20 according to IEC/EN 60529.

The device must be installed and operated only in an environment that ensures a pollution degree 2 (or better) according to IEC/EN 60664-1.

If used in areas with higher pollution degree, the device needs to be protected accordingly.

All circuits connected to the device must comply with the overvoltage category II (or better) according to IEC/EN 60664-1.

Only use power supplies that provide protection against electric shock (e. g. SELV or PELV) for the connection to power feed modules.

Observe the installation instructions according to IEC/EN 60079-14.

Requirements for Cables and Connection Lines

Observe the following points when installing cables and connection lines:

Observe the permissible core cross-section of the conductor.

If you use stranded conductors, crimp wire end ferrules on the conductor ends.

Use only one conductor per terminal.

When installing the conductors the insulation must reach up to the terminal.

Observe the tightening torque of the terminal screws.

If the rated voltage is greater than 50 V AC, proceed as follows:

1. Switch off the voltage.

2. Connect the terminal blocks or disconnect the terminal blocks.

Requirements for Usage as Associated Apparatus

If circuits with type of protection Ex i are operated with non-intrinsically safe circuits, they must no longer be used as circuits with type of protection Ex i.

Intrinsically safe circuits of associated apparatus can be led into hazardous areas. Observe the compliance of the separation distances to all non-intrinsically safe circuits according to IEC/EN 60079-14.

Observe the compliance of the separation distances between two adjacent intrinsically safe circuits according to IEC/EN 60079-14.

Observe the maximum values of the device, when connecting the device to intrinsically safe apparatus.

When connecting intrinsically safe devices with intrinsically safe circuits of associated apparatus, observe the maximum peak values with regard to

explosion protection (verification of intrinsic safety). Observe the standards IEC/EN 60079-14 or IEC/EN 60079-25.

If no L_o and C_o values are specified for the simultaneous appearance of lumped inductances and capacitances, the following rule applies.

- The specified value for L_o and C_o is used if one of the following conditions applies:
 - The circuit has distributed inductances and capacitances only, e. g., in cables and connection lines.
 - The total value of L_i (excluding cable) of the circuit is $< 1\%$ of the specified L_o value.
 - The total value of C_i (excluding cable) of the circuit is $< 1\%$ of the specified C_o value.
- A maximum of 50 % of the specified value for L_o and C_o is used if the following condition applies:
 - The total value of L_i (excluding cable) of the circuit is $\geq 1\%$ of the specified L_o value.
 - The total value of C_i (excluding cable) of the circuit is $\geq 1\%$ of the specified C_o value.
 - The reduced capacitance for gas groups I, IIA and IIB must not exceed the value of 1 μ F (including cable).
 - The reduced capacitance for gas group IIC must not exceed the value of 600 nF (including cable).

If more channels of one device are connected in parallel, ensure the parallel connection is made directly at the terminals of the device. When verifying the intrinsic safety, observe the maximum values for the parallel connection.

Operation, Maintenance, Repair

The devices must not be repaired, changed or manipulated. If there is a defect, the product must always be replaced with an original device.

If the rated voltage is greater than 50 V AC, proceed as follows:

1. Switch off the voltage.

2. Connect the terminal blocks or disconnect the terminal blocks.

Delivery, Transport, Disposal

Check the packaging and contents for damage.

Check if you have received every item and if the items received are the ones you ordered.

Always store and transport the device in the original packaging.

Store the device in a clean and dry environment. The permitted ambient conditions (see datasheet) must be considered.

Disposing of device, packaging, and possibly contained batteries must be in compliance with the applicable laws and guidelines of the respective country.

Features

- 2-channel isolated barrier
- 230 V AC supply
- Dry contact or NAMUR inputs
- Passive transistor output, non-polarized
- Line fault detection (LFD)
- Reversible mode of operation
- Up to SIL 2 acc. to IEC 61508


Function

This isolated barrier is used for intrinsic safety applications. It transfers digital signals (NAMUR sensors/mechanical contacts) from a hazardous area to a safe area.


Each proximity sensor or switch controls a passive transistor output for the safe area load. The normal output state can be reversed using switch S1 for channel I and switch S2 for channel II. Switch S3 enables or disables line fault detection of the field circuit.

During an error condition, the transistors revert to their de-energized state and LEDs indicate the fault according to NAMUR NE44.

Assembly

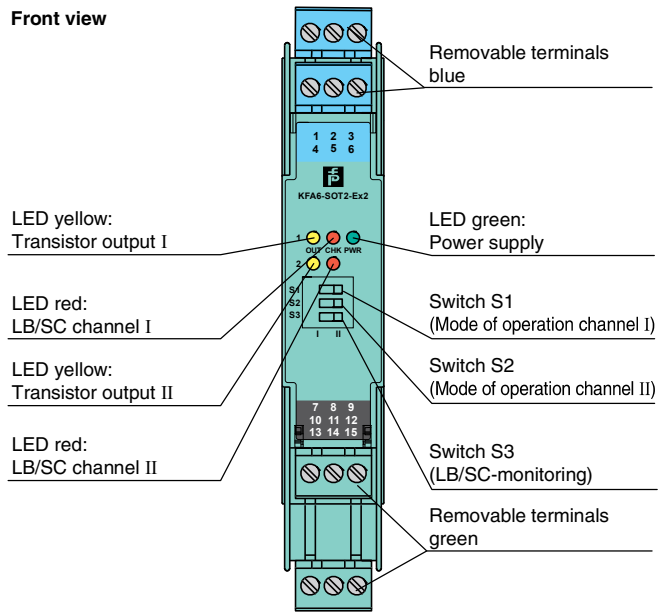

Connection

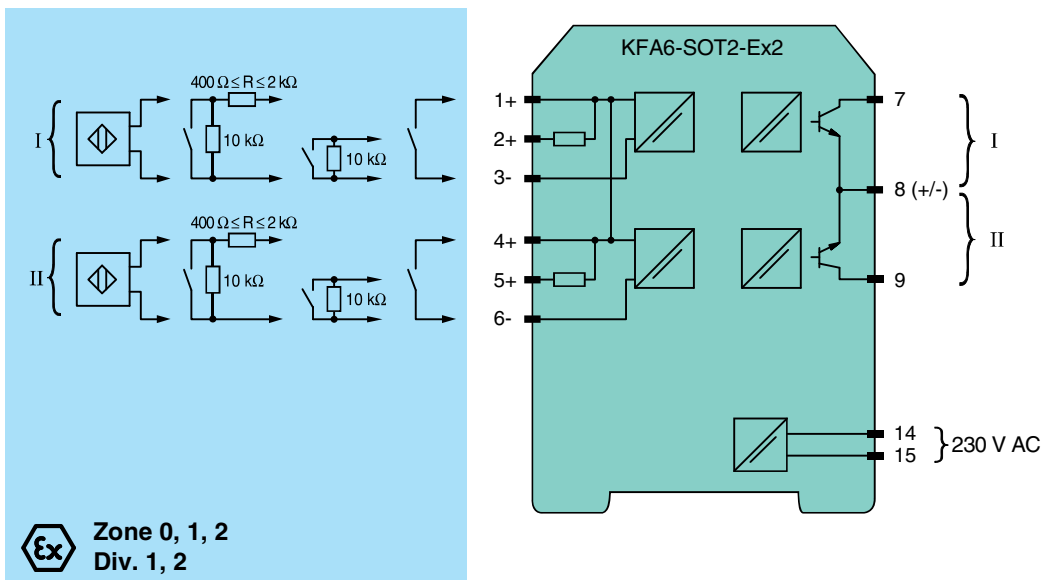

Release date 2016-11-07 17:03 Date of issue 2016-11-07 233753_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

General specifications		
Signal type		Digital Input
Supply		
Connection		terminals 14, 15
Rated voltage	U_r	207 ... 253 V AC
Power dissipation		1 W
Power consumption		≤ 1.5 W
Input		
Connection		terminals 1+, 2+, 3-; 4+, 5+, 6-
Rated values		acc. to EN 60947-5-6 (NAMUR), see system description for electrical data
Open circuit voltage/short-circuit current		approx. 8 V DC / approx. 8 mA
Switching point/switching hysteresis		1.2 ... 2.1 mA / approx. 0.2 mA
Line fault detection		breakage $I \leq 0.1$ mA , short-circuit $I > 6$ mA
Output		
Connection		output I: terminals 7, 8 ; output II: terminals 8, 9
Switching voltage		≤ 40 V
Switching current		≤ 100 mA , short-circuit protected
Signal level		1-signal: switching voltage - 2.5 V max. at 10 mA switching current or 3 V max. at 100 mA switching current 0-signal: switched off (off-state current ≤ 10 μA)
Output I, II		signal ; electronic output, passive
Transfer characteristics		
Switching frequency		≤ 5 kHz
Galvanic isolation		
Output/power supply		reinforced insulation acc. to EN 50178, rated insulation voltage 300 V _{eff}
Output/Output		not available
Directive conformity		
Electromagnetic compatibility		
Directive 2014/30/EU		EN 61326-1:2013 (industrial locations)
Low voltage		
Directive 2014/35/EU		EN 61010-1:2010
Conformity		
Electromagnetic compatibility		NE 21
Degree of protection		IEC 60529
Protection against electrical shock		IEC 61140
Ambient conditions		
Ambient temperature		-20 ... 60 °C (-4 ... 140 °F)
Mechanical specifications		
Degree of protection		IP20
Mass		approx. 150 g
Dimensions		20 x 119 x 115 mm (0.8 x 4.7 x 4.5 inch) , housing type B2
Mounting		on 35 mm DIN mounting rail acc. to EN 60715:2001
Data for application in connection with hazardous areas		
EC-Type Examination Certificate		PTB 98 ATEX 2164
Group, category, type of protection		II (1) G [Ex ia] IIC II (1) D [Ex ia] IIIC
Input		Ex ia IIC, Ex ia IIIC
Voltage	U_o	10.5 V
Current	I_o	13 mA
Power	P_o	34 mW (linear characteristic)
Supply		
Maximum safe voltage	U_m	253 V AC (Attention! U_m is no rated voltage.)
Output		
Maximum safe voltage	U_m	253 V AC (Attention! The rated voltage can be lower.)
Galvanic isolation		
Input/input		not available
Input/Output		safe electrical isolation acc. to IEC/EN 60079-11, voltage peak value 375 V
Input/power supply		safe electrical isolation acc. to IEC/EN 60079-11, voltage peak value 375 V
Directive conformity		
Directive 2014/34/EU		EN 60079-0:2012+A11:2013 , EN 60079-11:2012
International approvals		
UL approval		
Control drawing		116-0145
CSA approval		
Control drawing		116-0047

Release date 2016-11-07 17:03 Date of issue 2016-11-07 233753_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0002
pa-info@us.pepperl-fuchs.com

Germany: +49 621 776 2222
pa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
pa-info@sg.pepperl-fuchs.com

General information	
Supplementary information	EC-Type Examination Certificate, Statement of Conformity, Declaration of Conformity, Attestation of Conformity and instructions have to be observed where applicable. For information see www.pepperl-fuchs.com .

Release date 2016-11-07 17:03 Date of issue 2016-11-07 233753_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".


Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0002
pa-info@us.pepperl-fuchs.com

Germany: +49 621 776 2222
pa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
pa-info@sg.pepperl-fuchs.com

Configuration

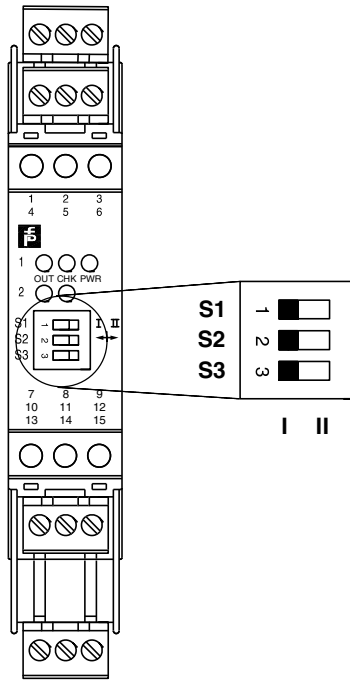

Switch position

S	Function		Position
1	Mode of operation Output I active	with high input current	I
		with low input current	II
2	Mode of operation Output II active	with high input current	I
		with low input current	II
3	Line fault detection	ON	I
		OFF	II

Operating status

Control circuit	Input signal
Initiator high impedance/ contact opened	low input current
Initiator low impedance/ contact closed	high input current
Lead breakage, lead short-circuit	Line fault

Factory settings: switch 1, 2 and 3 in position I

EU-Konformitätserklärung

Pepperl+Fuchs GmbH
Lilienthalstraße 200
68307 Mannheim
Germany
Phone +49 621 776-0
Fax +49 621 776-1000

No. / Nr.: DOC-0974
Date / Datum: 2016-10-24

Copyright Pepperl+Fuchs
www.pepperl-fuchs.com



Declaration of conformity / Konformitätserklärung

We, Pepperl+Fuchs GmbH declare under our sole responsibility that the **products** listed below are in conformity with the listed **European Directives** and **standards**.

Die Pepperl+Fuchs GmbH erklärt hiermit in alleiniger Verantwortung, dass die unten gelisteten **Produkte** den genannten **Europäischen Richtlinien** und **Normen** entsprechen.

Products / Produkte

Product / Produkt	Item number	Description / Beschreibung
KFA5-SOT2-EX2	233751	Switch amplifier
KFA6-SOT2-EX2	233753	Switch amplifier

Directives and Standards / Richtlinien und Normen

EU-Directive EU-Richtlinie	Standards Normen
ATEX 2014/34/EU (L96/309-356)	EN 60079-0/A11:2013-11 EN 60079-0:2012-08 EN 60079-11:2012-01
EMC 2014/30/EU (L96/79-106)	EN 61326-1:2013-01 (industrial locations)
LVD 2014/35/EU (L96/357-374)	EN 61010-1:2010-10

Affixed CE Marking / Angebrachte CE-Kennzeichnung



Signatures / Unterschriften

Mannheim, 2016-10-24

ppa. M. Kessler

ppa. Michael Kessler

Executive Vice President Components & Technology

i.V. F. Füll

i.V. Friedrich Füll

Product Portfolio Manager Interface Technology

ANNEX ATEX

Notified Body QM-System / Notifizierte Stelle des QM-Systems
Physikalisch Technische Bundesanstalt (0102)
Bundesallee 100
38116 Braunschweig
Germany

Marking and Certificates / Kennzeichnung und Zertifikate

Marking Kennzeichnung	Certificate Zertifikat	Issuer ID Aussteller ID
II (1) G	PTB 98 ATEX 2164	0102

Key for Issuer ID / Schlüssel zur Aussteller ID

ID	Issuer / Aussteller
0102	Physikalisch Technische Bundesanstalt Bundesallee 100 38116 Braunschweig Germany

Pepperl+Fuchs GmbH declares that the products are only affected by minor or formal changes with respect to the new edition of the standards. These changes are not relevant for compliance with the essential health and safety requirements. The products still comply with the ATEX Directive. This declaration is also valid if the marking and the certificates of the listed devices correspond to previous editions of standards.

Die Pepperl+Fuchs GmbH erklärt hiermit, dass die Produkte nur von kleineren oder formalen Änderungen in Bezug auf die neue Ausgabe der Normen betroffen sind. Diese Änderungen sind nicht relevant für die Konformität mit den wesentlichen Gesundheits- und Sicherheitsanforderungen. Die Produkte erfüllen nach wie vor die ATEX-Richtlinie. Diese Erklärung gilt auch, wenn die Kennzeichnung und die Zertifikate der aufgeführten Geräte vorangegangenen Normenständen entsprechen.

Voith Group
St. Pöltener Str. 43
89522 Heidenheim, GERMANY

Telefon: + 49 7951 32 1666
E-Mail: Industry.Service@voith.com
Internet: www.voith.com/fluid-couplings

VOITH